

**SONY**<sup>®</sup>

3-227-351-11 (1)

# ***FM/AM MiniDisc Player***

---

Operating Instructions \_\_\_\_\_

**US**

## **Owner's Record**

The model and serial numbers are located on the bottom of the unit.

Record these numbers in the space provided below.

Refer to these numbers whenever you call upon your Sony dealer regarding this product.

Model No. MDX-CA680X Serial No. \_\_\_\_\_

For installation and connections, see the supplied installation/connections manual.



**MDLP**

***MDX-CA680X***

© 2001 Sony Corporation

---

## Warning

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

You are cautioned that any changes or modifications not expressly approved in this manual could void your authority to operate this equipment.

### CAUTION

The use of optical instruments with this product will increase eye hazard.

---

## Welcome !

Thank you for purchasing this Sony MiniDisc Player. You can enjoy its various features even more with:

- Optional CD/MD units (both changers and players)\*1.
- MDLP (MiniDisc Long Play) playback.
- CD TEXT information (displayed when a CD TEXT disc\*2 is played on a connected optional CD unit with the CD TEXT function).
- **Optional controller accessories**
  - Rotary commander RM-X4S
  - Card remote commander RM-X114

\*1 *This unit works with Sony products only.*

\*2 *A CD TEXT disc is an audio CD that includes information such as the disc name, artist name, and track names. This information is recorded on the disc.*

---


## Table of Contents

Location of controls . . . . .	4	<b>Other Functions</b>	
Precautions . . . . .	6	Using the rotary commander . . . . .	16
Notes on MDs . . . . .	6	Adjusting the sound characteristics . . . . .	17
<b>Getting Started</b>		Quickly attenuating the sound . . . . .	17
Resetting the unit . . . . .	7	Changing the sound and display settings	
Detaching the front panel . . . . .	7	— Menu . . . . .	18
Setting the clock . . . . .	8	Selecting the sound position	
<b>MD Player</b>		— My Best sound Position (MBP) . . . . .	19
<b>CD/MD Unit (optional)</b>		Boosting the bass sound	
Playing a disc . . . . .	9	— D-bass . . . . .	19
Display items . . . . .	9	<b>TV/Video (optional)</b>	
Playing tracks repeatedly		Watching the TV . . . . .	20
— Repeat Play . . . . .	10	Watching a video . . . . .	20
Playing tracks in random order		Storing TV channels automatically . . . . .	20
— Shuffle Play . . . . .	10	Storing only the desired TV channels . . . . .	21
Labeling a CD		Storing the TV channel names . . . . .	21
— Disc Memo* . . . . .	10	Displaying the information stored	
Locating a disc by name		on a disc . . . . .	22
— List-up* . . . . .	11	Watching the TV or video while listening	
Selecting specific tracks for playback		to a CD or MD	
— Bank* . . . . .	12	— Simultaneous Play . . . . .	22
<i>* Functions available with optional CD/MD unit</i>		<b>Additional Information</b>	
<b>Radio</b>		Maintenance . . . . .	23
Storing stations automatically		Removing the unit . . . . .	24
— Best Tuning Memory (BTM) . . . . .	13	Specifications . . . . .	25
Receiving the stored stations . . . . .	13	Troubleshooting . . . . .	26
Storing only the desired stations . . . . .	14	Error displays/Messages . . . . .	27
Storing station names			
— Station Memo . . . . .	14		
Tuning in a station through a list			
— List-up . . . . .	15		

## Location of controls


Refer to the pages listed for details.

**CD/MD** : During Playback    **RADIO** : During radio reception  
**TV** : During TV reception    **MENU** : During menu mode

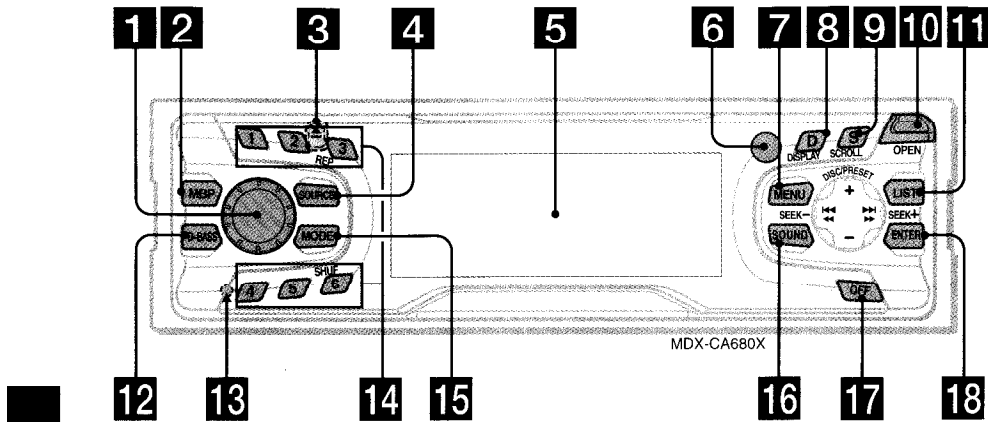

- |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <p><b>1</b> Volume control dial</p> <p><b>2</b> MBP button 19</p> <p><b>3</b> ▲ (eject) button (located on the front side of the unit, behind the front panel) 9, 23</p> <p><b>4</b> SOURCE (Power on/Radio/CD/MD/TV) button 8, 9, 11, 13, 14, 20, 22, 23</p> <p><b>5</b> Display window</p> <p><b>6</b> Receptor for the card remote commander</p> <p><b>7</b> MENU button 8, 10, 11, 12, 13, 14, 15, 18, 20, 22</p> <p><b>8</b> DISPLAY (display mode change) button 9, 11, 15</p> <p><b>9</b> SCROLL button 9</p> <p><b>10</b> OPEN button 7, 9</p> <p><b>11</b> LIST button<br/> <b>CD/MD</b> 11<br/> <b>RADIO</b> 15<br/> <b>TV</b> 21, 22</p> <p><b>12</b> D-BASS button 19</p> <p><b>13</b> RESET button (located on the front side of the unit, behind the front panel) 7</p> | <p><b>14</b> Number buttons<br/> <b>CD/MD</b><br/> <b>3</b> REP 10<br/> <b>6</b> SHUF 10<br/> <b>RADIO</b> 13, 14<br/> <b>TV</b> 21</p> <p><b>15</b> MODE button<br/> <b>CD/MD</b> 9, 11<br/> <b>RADIO</b> 13, 14<br/> <b>TV</b> 20</p> <p><b>16</b> SOUND button 17, 19</p> <p><b>17</b> OFF (Stop/Power off) button* 7, 9, 23</p> <p><b>18</b> ENTER button<br/> <b>CD/MD</b> 11<br/> <b>RADIO</b> 15<br/> <b>MENU</b> 8, 10, 11, 12, 13, 14, 15, 18, 20, 22, 23</p> |
|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|


\* Warning when installing in a car without an ACC (accessory) position on the ignition switch  
 After turning off the ignition, be sure to press **OFF** on the unit for 2 seconds to turn off the clock display.  
 Otherwise, the clock display does not turn off and this causes battery drain.

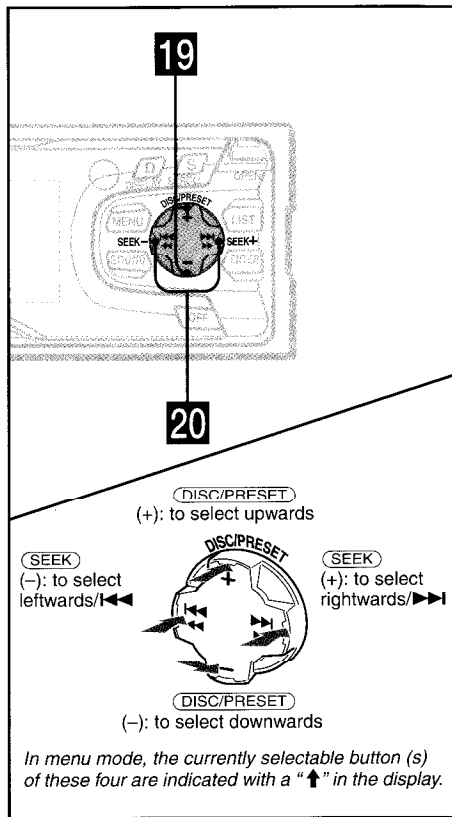

**19 DISC/PRESET buttons (+/-)**

<b>CD/MD</b>	9, 11
<b>RADIO</b>	13, 15
<b>TV</b>	20, 22
<b>MENU</b>	8, 10, 11, 12, 13, 14, 15, 18,
<b>20 SEEK buttons (-/+)</b>	
<b>CD/MD</b>	9
<b>RADIO</b>	13, 14
<b>TV</b>	21
<b>MENU</b>	8, 10, 12, 14, 17, 18, 22

**Card remote commander RM-X114 (optional)**

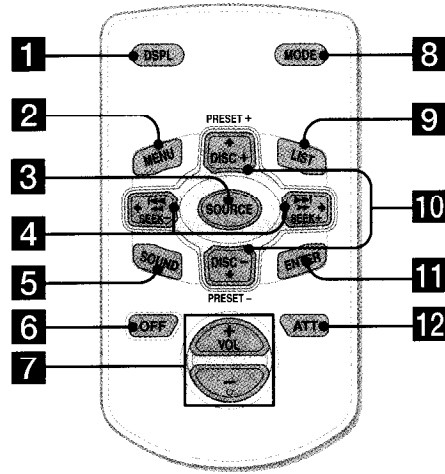

The corresponding buttons of the card remote commander control the same functions as those on this unit.

- 1** DSPL button
- 2** MENU button
- 3** SOURCE button
- 4** SEEK (←/→) buttons
- 5** SOUND button
- 6** OFF button
- 7** VOL (+/-) buttons
- 8** MODE button
- 9** LIST button
- 10** DISC/PRESET (↑/↓) buttons
- 11** ENTER button
- 12** ATT button

**Note**

If the unit is turned off by pressing (OFF) for 2 seconds, it cannot be operated with the card remote commander unless (SOURCE) on the unit is pressed, or a disc is inserted to activate the unit first.

**Tip**

Refer to "Replacing the lithium battery" for details on how to replace the batteries (page 24).

## Precautions

- If your car was parked in direct sunlight, allow the unit to cool off before operating it.
- Power antennas will extend automatically while the unit is operating.
- Do not use the CUSTOM FILE feature while driving, or perform any other function which could divert your attention from the road.

If you have any questions or problems concerning your unit that are not covered in this manual, please consult your nearest Sony dealer.

### Moisture condensation

On a rainy day or in a very damp area, moisture condensation may occur inside the lenses and display of the unit. Should this occur, the unit will not operate properly. In such a case, remove the disc and wait for about an hour until the moisture has evaporated.


### To maintain high sound quality

Be careful not to splash juice or other soft drinks onto the unit or discs.



## Notes on MDs


- Do not open the shutter of the cartridge to expose the MD. Close immediately if the shutter opens.
- Never touch the surface of the disc inside.
- Do not subject the discs to heat/high temperature. Avoid leaving them in parked cars or on dashboards/rear trays.

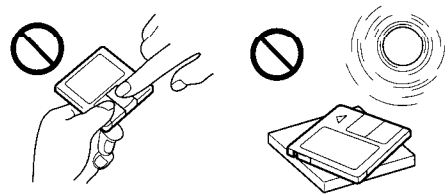

### Notes on attaching labels


To avoid MDs becoming stuck in the unit;

- Attach the label in a suitable position.
- Remove old labels before putting new ones on.
- Replace labels that are peeling away.

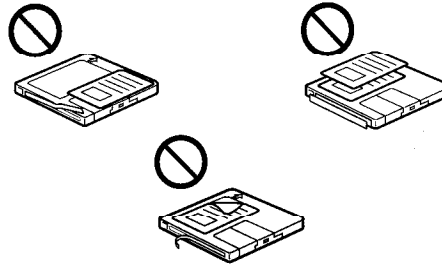

### Cleaning

Wipe the surface of the cartridge from time to time with a soft, dry cloth.

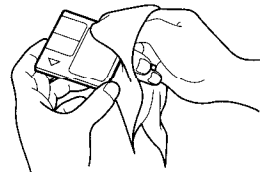


## Getting Started

### Resetting the unit

Before operating the unit for the first time or after replacing the car battery, you must reset the unit.

 Remove the front panel and press the RESET button with a pointed object, such as a ball-point pen.



RESET button

#### Note

Pressing the RESET button will erase the clock setting and some stored contents.

### Detaching the front panel

You can detach the front panel of this unit to protect the unit from being stolen.

#### Caution alarm

If you turn the ignition switch to the OFF position without removing the front panel, the caution alarm will beep for a few seconds.


If you connect an optional amplifier and do not use the built-in amplifier, the beep sound will be deactivated.

#### 1 Press (OFF) <sup>+</sup>.

MD/CD playback or radio reception stops (the key illumination and display remain on).

\* If your car has no ACC position on the ignition switch, be sure to turn the unit off by pressing (OFF) for 2 seconds to avoid car battery drain.

#### 2 Press (OPEN), then slide the front panel to the right, and gently pull out the left end of the front panel.

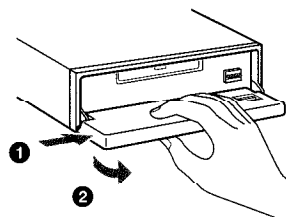

#### Notes

- If you detach the panel while the unit is still turned on, the power will turn off automatically to prevent the speakers from being damaged.
- Do not drop or put excessive pressure on the front panel and its display window.
- Do not subject the front panel to heat/high temperature or moisture. Avoid leaving it in parked cars or on dashboards/rear trays.


#### Tip

When carrying the front panel with you, use the supplied front panel case.

continue to next page →

### Attaching the front panel

Place hole **A** of the front panel onto the spindle **B** on the unit, then lightly push the left side in. Press **SOURCE** (or insert an MD) to operate the unit.

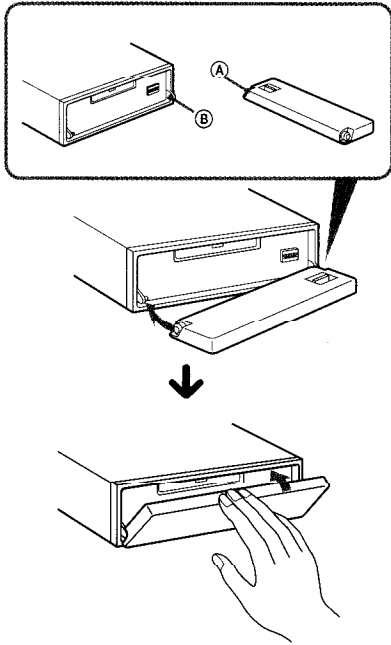

**Note**  
Do not put anything on the inner surface of the front panel.

### Setting the clock

The clock uses a 12-hour digital indication.

Example: To set the clock to 10:08

- 1 Press **MENU**, then press either side of **DISC/PRESET** repeatedly until "CLOCK" appears.



- 1 Press **ENTER**.  
The hour indication flashes.
  - 2 Press either side of **DISC/PRESET** to set the hour.
  - 3 Press the **(+)** side of **SEEK**.  
The minute indication flashes.
  - 4 Press either side of **DISC/PRESET** to set the minute.
- 2 Press **ENTER**.



The clock starts. After the clock setting is completed, the display returns to normal play mode.

**Tip**  
When **D.INFO** mode is set to **ON**, the time is always displayed (page 18).



## MD Player CD/MD Unit (optional)

In addition to playing an MD with this unit, you can also control external CD/MD units.


### Note

If you connect an optional CD unit with the CD TEXT function, the CD TEXT information will appear in the display when you play a CD TEXT disc.

## Playing a disc

(With this unit)

- 1 Press **OPEN** and insert the disc (labeled side up).

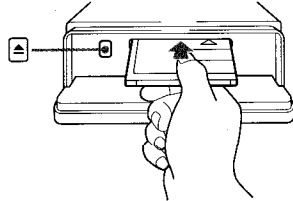

- 2 Close the front panel.

Playback starts automatically.

If a disc is already inserted, press **SOURCE** repeatedly until "MD" appears to start playback.

To	Press
Stop playback	<b>OFF</b>
Eject the disc	<b>OPEN</b> then ▲
Skip tracks – Automatic Music Sensor	<b>SEEK</b> (◀◀/▶▶) [once for each track]
Fast-forward/ reverse – Manual Search	<b>SEEK</b> (◀◀/▶▶) [hold to desired point]

### Notes

- When the last track on the disc is over, playback restarts from the first track of the disc.
- With optional unit connected, playback of the same source will continue on to the optional CD/MD unit.


(With optional unit)

- 1 Press **SOURCE** repeatedly to select "CD" or "MD."
- 2 Press **MODE** repeatedly until the desired unit appears.  
Playback starts.

To	Press
Skip discs – Disc selection	<b>DISC/PRESET</b> (+/-)

## Display items

When the disc/track changes, any prerecorded title\*1 of the new disc/track is automatically displayed (if the Auto Scroll function is set to "ON," names exceeding 8 characters will be scrolled (page 18)).

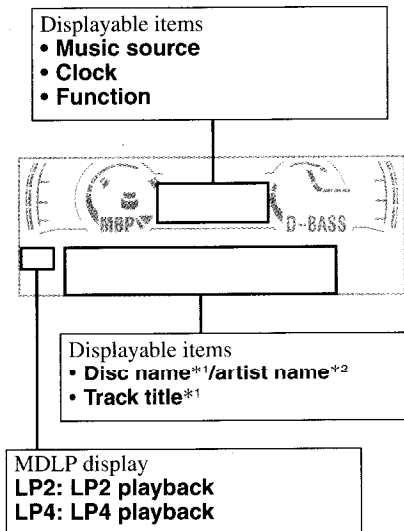

To	Press
Switch display item	<b>DISPLAY</b>
Scroll display item	<b>SCROLL</b>

\*1 "NO NAME" indicates there is no Disc Memo (page 10) or prerecorded name to display.

\*2 Only for CD TEXT discs with the artist name.

continue to next page →

### Notes

- Some characters cannot be displayed.
- For some CD TEXT discs with very many characters, information may not scroll.
- This unit cannot display the artist name for each track of a CD TEXT disc.

### Tip

When Auto scroll is set to OFF and the disc/track name is changed, the disc/track name does not scroll.

## Playing tracks repeatedly

### — Repeat Play

The disc in the main unit will repeat a track or the entire disc when it reaches the end. For repeat play, you can select:

- REP-1 — to repeat a track.
- REP-2\* — to repeat a disc.

\* Available only when one or more optional CD/MD units are connected.

During playback, press **(3) (REP)** repeatedly until the desired setting appears in the display.

Repeat Play starts.

To return to normal play mode, select "REP-OFF"

## Playing tracks in random order

### — Shuffle Play

You can select:

- SHUF-1 — to play the tracks on the current disc in random order.
- SHUF-2\*1 — to play the tracks in the current optional CD (MD) unit in random order.
- SHUF-ALL\*2 — to play all the tracks in all the connected CD (MD) units (including this unit) in random order.

\*1 Available only when one or more optional CD (MD) units are connected.

\*2 Available only when one or more optional MD units, or two or more optional CD units are connected.

During playback, press **(6) (SHUF)** repeatedly until the desired setting appears in the display.

Shuffle Play starts.

To return to normal play mode, select "SHUF OFF."

### Note

"SHUF-ALL" will not shuffle tracks between CD units and MD units.

## Labeling a CD

### — Disc Memo (For a CD unit with the CUSTOM FILE function)

You can label each disc with a custom name (Disc Memo). You can enter up to 8 characters for a disc. If you label a CD, you can locate the disc by name (page 11).

### Caution

Do not use the CUSTOM FILE feature while driving, or perform any other function which could divert your attention from the road.

- 1 Start playing the disc you want to label.
- 2 Press **(MENU)**, then press either side of **(DISC/PRESET)** repeatedly until "NAMEEDIT" appears.
- 3 Press **(ENTER)**.



The unit will repeat the disc during the labeling procedure.


- 4 Enter the characters.
  - 1 Press the **(+)**\*1 side of **(DISC/PRESET)** repeatedly to select the desired character.

A → B → C ... → 0 → 1 → 2 ... → +  
→ → \* ... → \*2 → A

\*1 For reverse order, press the **(-)** side of **(DISC/PRESET)**.

\*2 (blank space)

- 2 Press the **(+)** side of **(SEEK)** after locating the desired character.

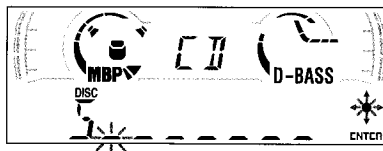

If you press the **(-)** side of **(SEEK)**, you can move back to the left.

- 3 Repeat steps 1 and 2 to enter the entire name.
- 5 To return to normal CD play mode, press **(ENTER)**.

#### Tips

- Simply overwrite or enter “\_” to correct or erase a name.
- There is another way to start labeling a CD: Press (LIST) for 2 seconds instead of performing steps 2 and 3. You can also complete the operation by pressing (LIST) for 2 seconds instead of step 5.
- You can label CDs on a unit without the CUSTOM FILE function if that unit is connected along with a CD unit that has the function. The Disc Memo will be stored in the memory of the CD unit with the CUSTOM FILE function.

#### Note

REP-1/shuffle play is suspended until the Name Edit is complete.

### Viewing the Disc Memo

As a display item, the Disc Memo always takes priority over any original CD TEXT information.

To	Press
View	(DISPLAY) during CD/CD TEXT disc playback

#### Tip

To find out about other items that can be displayed, see page 9.

### Erasing the Disc Memo

- 1 Press (SOURCE) repeatedly to select “CD.”
- 2 Press (MODE) repeatedly to select the CD unit storing the Disc Memo.
- 3 Press (MENU), then press either side of (DISC/PRESET) repeatedly until “NAME DEL” appears.
- 4 Press (ENTER).  
The stored names will appear in order from the earliest entered.
- 5 Press either side of (DISC/PRESET) repeatedly to select the disc name you want to erase.  
The stored names will appear from the earliest ones entered.
- 6 Press (ENTER) for 2 seconds.  
The name is erased.  
Repeat steps 5 and 6 if you want to erase other names.
- 7 Press (MENU) twice.  
The unit returns to normal CD play mode.

#### Notes

- When the Disc Memo for a CD TEXT disc is erased, the original CD TEXT information is displayed.
- If you cannot find the Disc Memo you want to erase, try selecting a different CD unit in step 2.

## Locating a disc by name

### — List-up (For a CD unit with the CD TEXT/CUSTOM FILE function, or an MD unit)

You can use this function for discs that have been assigned custom names\*1 or for CD TEXT discs\*2.

\*1 Locating a disc by its custom name: when you assign a name for a CD (page 10) or an MD.

\*2 Locating discs by the CD TEXT information: when you play a CD TEXT disc on a CD unit with the CD TEXT function.

#### 1 Press (LIST).

The name assigned to the current disc appears in the display.



#### 2 Press either side of (DISC/PRESET) repeatedly until you find the desired disc.

#### 3 Press (ENTER) to play the disc.

#### Notes

- Some letters cannot be displayed (exception: Disc Memo).
- If the TV tuner XT-40V is connected, the list appears on the TV monitor instead of the display on the unit.

## Selecting specific tracks for playback

— Bank (For a CD unit with the CUSTOM FILE function)

If you label the disc, you can set the unit to skip or play the tracks of your choice.

- 1 Start playing the disc you want to label.
- 2 Press **(MENU)**, then press either side of **(DISC/PRESET)** repeatedly until “BANK SEL” appears.
- 3 Press **(ENTER)**.



- 4 Label the tracks.
  - 1 Press either side of **(SEEK)** repeatedly to select the track you want to label.
  - 2 Press **(ENTER)** repeatedly to select “PLAY” or “SKIP.”
- 5 Repeat step 4 to set “PLAY” or “SKIP” for all the tracks.
- 6 Press **(MENU)** twice.  
The unit returns to normal CD play mode.

### Notes


- You can set “PLAY” and “SKIP” for up to 24 tracks.
- You cannot set “SKIP” for all the tracks on a CD.

## Playing specific tracks only

You can select:

- BANK-ON — to play the tracks with the “PLAY” setting.
- BANK-INV (Inverse) — to play the tracks with the “SKIP” setting.

- 1 During playback, press **(MENU)**, then press either side of **(DISC/PRESET)** repeatedly until “BANK-ON,” “BANK-INV,” or “BANK-OFF” appears.
- 2 Press the (+) side of **(SEEK)** repeatedly until the desired setting appears.

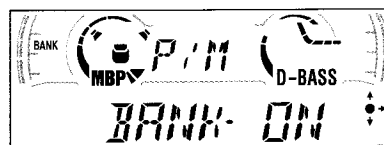

- 3 Press **(ENTER)**.  
Playback starts from the track following the current one.

To return to normal play mode, select “BANK-OFF” in step 2.

## Radio

The unit can store up to 6 stations per band (FM1, FM2, FM3, AM1, and AM2).

### Caution

When tuning in stations while driving, use Best Tuning Memory to prevent accidents.

## Storing stations automatically

### — Best Tuning Memory (BTM)

The unit selects the stations with the strongest signals within the selected band, and stores them in the order of their frequency.

- 1 Press **(SOURCE)** repeatedly to select the radio.
- 2 Press **(MODE)** repeatedly to select the band.
- 3 Press **(MENU)**, then press either side of **(DISC/PRESET)** repeatedly until “BTM” appears.
- 4 Press **(ENTER)**.  
A beep sounds when the setting is stored.

### Notes

- If only a few stations can be received due to weak signals, some number buttons will retain their former settings.
- When a number is indicated in the display, the unit starts storing stations from the one currently displayed.

## Receiving the stored stations

- 1 Press **(SOURCE)** repeatedly to select the radio.
- 2 Press **(MODE)** repeatedly to select the band.
- 3 Press the number button (**(1)** to **(6)**) on which the desired station is stored.

### Tip

Press either side of **(DISC/PRESET)** to receive the stations in the order they are stored in the memory (Preset Search function).

### If preset tuning does not work

#### Press either side of **(SEEK)** to search for the station (automatic tuning).

Scanning stops when the unit receives a station. Repeat until the desired station is received.

### Tips

- If automatic tuning stops too frequently, turn on the Local Seek to limit seek to stations with stronger signals (see “Changing the sound and display settings” on page 18).
- If you know the frequency of the station you want to listen to, press and hold either side of **(SEEK)** to locate the approximate frequency, then press **(SEEK)** repeatedly to fine adjust to the desired frequency (manual tuning).

### If FM stereo reception is poor

#### Select monaural reception mode.

(see “Changing the sound and display settings” on page 18).

The sound improves, but becomes monaural (“ST” disappears).

### Note

If interference occurs, this unit will automatically narrow the reception frequency to eliminate noise (IF AUTO function). In such cases, some FM stereo broadcasts may become monaural while in the stereo reception mode.

### Tip

To always hear FM stereo broadcasts in stereo, you can change the IF Auto setting and widen the frequency signal reception (see “Changing the sound and display settings” on page 18). Note that some interference may occur in this setting.

## Storing only the desired stations

You can manually preset the desired stations on any chosen number button.

- 1 Press **(SOURCE)** repeatedly to select the radio.
- 2 Press **(MODE)** repeatedly to select the band.
- 3 Press either side of **(SEEK)** to tune in the station that you want to store.
- 4 Press the desired number button (1 to 6) for 2 seconds until "MEM" appears.  
The number button indication appears in the display.

**Note**

If you try to store another station on the same number button, the previously stored station will be erased.

## Storing station names

### — Station Memo

You can assign a name to each radio station and store it in memory. The name of the station currently tuned in appears in the display. You can assign a name using up to 8 characters for a station.

### Storing the station names

- 1 Tune in a station whose name you want to store.
- 2 Press **(MENU)**, then press either side of **(DISC/PRESET)** repeatedly until "NAMEEDIT" appears.
- 3 Press **(ENTER)**.



### 4 Enter the characters.


- 1 Press the (+)\*1 side of **(DISC/PRESET)** repeatedly to select the desired character.

A → B → C ... → 0 → 1 → 2 ... → +  
→ - → \* ... → \*2 → A

\*1 For reverse order, press the (-) side of **(DISC/PRESET)**.

\*2 (blank space)

- 2 Press the (+) side of **(SEEK)** after locating the desired character.

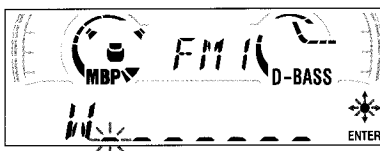

If you press the (-) side of **(SEEK)**, you can move back to the left.

- 3 Repeat steps 1 and 2 to enter the entire name.

## 5 Press (ENTER).

### Tips

- Simply overwrite or enter “\_” to correct or erase a name.
- There is another way to start storing station names: Press (LIST) for 2 seconds instead of performing steps 2 and 3. You can also complete the operation by pressing (LIST) for 2 seconds instead of step 5.

### Displaying the station name

Switch the display item to frequency or station name\*.

To	Press
Switch display item	(DISPLAY) during radio reception

\* If the station name is not stored, “NO NAME” appears in the display for one second.

### Erasing the station name

1 During radio reception, press (MENU), then press either side of (DISC/PRESET) repeatedly until “NAME DEL” appears.

2 Press (ENTER).

3 Press either side of (DISC/PRESET) repeatedly to select the station whose name you want to erase.

4 Press (ENTER) for 2 seconds.

The name is erased.  
Repeat steps 3 to 4 if you want to erase other names.

5 Press (MENU) twice.

The unit returns to normal radio reception mode.

### Note

If you have already erased all of the station names, “NO DATA” appears in step 4.

## Tuning in a station through a list

### — List-up

1 During radio reception, press (LIST) momentarily.

The frequency or the name assigned to the current station appears in the display.



2 Press either side of (DISC/PRESET) repeatedly until you find the desired station.

If no name is assigned to the selected station, the frequency appears in the display.

3 Press (ENTER) to tune in the desired station.

### Note


If the TV tuner XT-40V is connected, the list appears on the 1 V monitor instead of the display on the unit.

## Other Functions


You can also control the unit (and optional CD/MD units) with a rotary commander (optional).

## Using the rotary commander

First, attach the appropriate label depending on how you want to mount the rotary commander. The rotary commander works by pressing buttons and/or rotating controls.

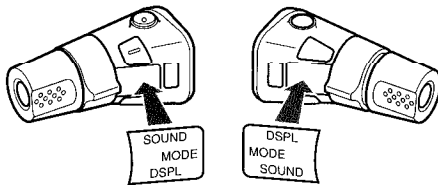

### By pressing buttons

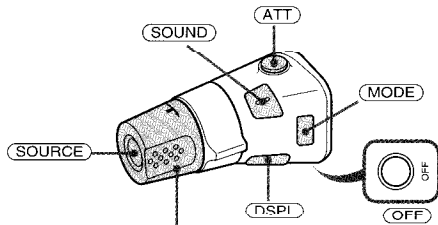


Rotate the VOL control to adjust the volume.

Press	To
<b>SOURCE</b>	Change source (radio/CD* <sup>1</sup> /MD/TV* <sup>1</sup> )
<b>MODE</b>	Change operation (radio band/CD* <sup>1</sup> unit/MD* <sup>1</sup> unit/TV band* <sup>1</sup> )
<b>ATT</b>	Attenuate sound
<b>OFF</b> * <sup>2</sup>	Stop playback or radio reception
<b>SOUND</b>	Adjust the sound menu
<b>DSPL</b>	Change the display item

\*<sup>1</sup> Only if the corresponding optional equipment is connected.

\*<sup>2</sup> If your car has no ACC (accessory) position on the ignition key switch, be sure to press **OFF** for 2 seconds to turn off the clock indication after turning off the ignition.

### By rotating the control

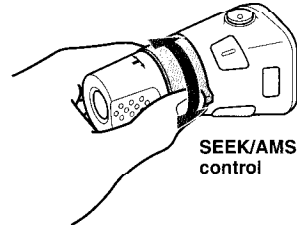

SEEK/AMS control


#### Rotate and release to:

- Skip tracks.
- Tune in stations automatically.

#### Rotate, hold, and release to:

- Fast-forward/reverse a track.
- Find a station manually.

### By pushing in and rotating the control

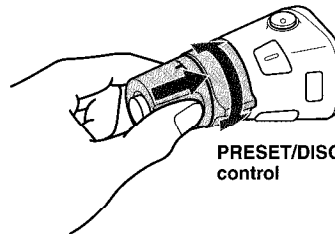

PRESET/DISC control

#### Push in and rotate the control to:


- Receive preset stations.
- Change the disc\*.

\* When an optional CD/MD unit is connected.




### Changing the operative direction

The operative direction of controls is factory-set as shown below.

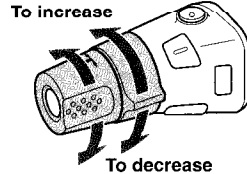

If you need to mount the rotary commander on the right hand side of the steering column, you can reverse the operative direction.

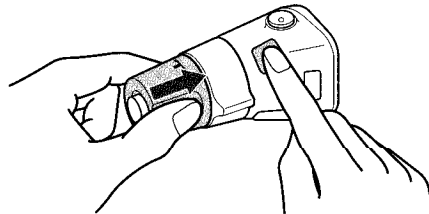

Press **(SOUND)** for 2 seconds while pushing the VOL control.

**Tip**

You can also change the operative direction of these controls with the unit (see "Changing the sound and display settings" on page 18).

## Adjusting the sound characteristics

You can adjust the bass, treble, balance, and fader.

The bass and treble levels can be stored independently for each source.

**1 Select the item you want to adjust by pressing (SOUND) repeatedly.**

Each time you press **(SOUND)**, the item changes as follows:

**BAS (bass) → TRE (treble) → BAL (left-right) → FAD (front-rear)**

**2 Adjust the selected item by pressing either side of (SEEK).**

When adjusting with the rotary commander, press **(SOUND)** and rotate the VOL control.

**Note**

Adjust within 3 seconds after selecting the item.

## Quickly attenuating the sound

(With the rotary commander or the card remote commander)

Press **(ATT)** on the rotary commander or card remote commander.

After "ATT-ON" momentarily appears, the "ATT" appears in the display.

To restore the previous volume level, press **(ATT)** again.

**Tip**

When the interface cable of a car telephone is connected to the AI 1 lead, the unit decreases the volume automatically when a telephone call comes in (Telephone ATT function).

## Changing the sound and display settings

### — Menu

The following items can be set:

#### SET (Set Up)

- CLOCK (page 8)
- BEEP — to turn the beeps on or off.
- RM (Rotary Commander) — to change the operative direction of the controls of the rotary commander.
  - Select “NORM” to use the rotary commander as the factory-set position.
  - Select “REV” when you mount the rotary commander on the right side of the steering column.

#### DSPL (Display)

- D.INFO (Dual Information) — to display the clock and the play mode at the same time (on).
- M.DSPL (Motion Display) — to select the Motion Display mode from “1,” “2,” and “OFF.”
  - Select “1” to show decoration lines in the display and activate Demo display.
  - Select “2” to show decoration lines in the display and deactivate Demo display.
  - Select “OFF” to deactivate the Motion Display.
- A.SCRL (Auto Scroll)
  - Select “ON” to scroll all automatically displayed names exceeding 8 characters.
  - When Auto scroll is set to off and the disc/track name is changed, the disc/track name does not scroll.

#### P/M (Play Mode)

- LOCAL-ON/OFF (Local seek mode) (page 13)
  - Select “ON” to only tune into stations with stronger signals.
- MONO-ON/OFF (Monaural mode) (page 13)
  - Select “ON” to hear FM stereo broadcast in monaural. Select “OFF” to return to normal mode.
- IF AUTO/WIDE (page 13)

- 1 Press **MENU**.**  
To set A.SCRL, press **MENU** during CD/MD Playback.
- 2 Press either side of **DISC/PRESET** repeatedly until the desired item appears.**
- 3 Press the (+) side of **SEEK** to select the desired setting (Example: ON or OFF).**
- 4 Press **ENTER**.**  
After the mode setting is completed, the display returns to normal play mode.

#### Note

The displayed item will differ depending on the source.

#### Tip

You can easily switch among categories (“SET,” “DSPL,” “P/M,” and “EDIT”) by pressing either side of **DISC/PRESET** for 2 seconds.

## Selecting the sound position

### — My Best sound Position (MBP)


When you drive without passengers, you can enjoy the most comfortable sound environment with “My Best sound Position.”

“My Best sound Position” has two presets, which adjust the sound level of balance and fader. You can select one very easily with the MBP button.

Display window	Balance Level		Fader Level	
	Right	Left	Front	Rear
MBP-A	-4dB	0	0	-4dB
MBP-B	0	-4dB	0	-4dB
MBP-OFF	0	0	0	0

Press **(MBP)** repeatedly for the desired listening position.

The mode of “My Best sound Position” is shown in the display in order of the table.

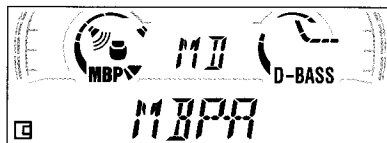

After one second, the display goes back to the normal playback mode.

If you want to adjust the sound level of balance and fader more precisely, you can do it using the **(SOUND)** button (see “Adjusting the sound characteristics” on page 17).

#### Notes


- When the BAL (balance) or FAD (fader) in “Adjusting the sound characteristics” (page 17) is adjusted, the MBP setting returns to OFF.
- When MBP is set to OFF, the BAL and FAD setting is activated.

## Boosting the bass sound

### — D-bass

You can enjoy a clear and powerful bass sound. The D-bass function boosts the low frequency signal and high frequency signal with a sharper curve than conventional bass boost.

You can hear the bass line more clearly even while the vocal volume remains the same. You can emphasize and adjust the bass sound easily with the D-BASS button.

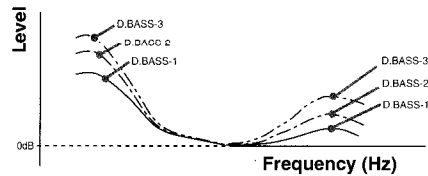

### Adjusting the bass curve

Press **(D-BASS)** repeatedly to select the desired bass curve.

As the D-BASS number increases so does the effect.

#### Note

The bass sound may distort at same volume. If the bass sound distorts, select less effective bass curve.

## TV/Video (optional)

You can control an optional TV tuner and TV monitor with this unit.

### Watching the TV

- 1 Press **(SOURCE)** repeatedly until "TV" or "AUX" appears.
- 2 Press **(MODE)** repeatedly to select the desired TV band.

TV1 → TV2 → AUX → TV1

### Watching a video

- 1 Press **(SOURCE)** repeatedly until "TV" or "AUX" appears.
- 2 Press **(MODE)** repeatedly to select "AUX."  
Play the video.

**Note**

The indication automatically switches to "VIDEO 1" soon after "AUX" is displayed.

## Storing TV channels automatically

The unit selects the TV channels with the strongest signals and assigns them to number buttons in order of their frequency.

**Caution**

If tuning in a station while driving, use AUTO MEM (Automatic Memory) to prevent accidents.

- 1 Select "TV" (see "Watching the TV" on page 20).
- 2 Press **(MENU)**, then press either side of **(DISC/PRESET)** repeatedly until "AUTO MEM" appears.
- 3 Press **(ENTER)**.

The unit assigns TV channels to the number buttons in order of their frequency.  
A beep sounds when the setting is stored.

**Notes**

- The unit does not assign TV channels with weak signals. If only a few TV channels with strong signals can be received, some number buttons will remain empty.
- When a preset number is indicated on the display, the unit starts assigning TV channels to buttons from the one currently displayed.

## Storing only the desired TV channels

You can assign up to 12 channels (6 each for TV1 and TV2) to the number buttons in the order of your choice.

- 1** Select "TV" (see "Watching the TV" on page 20).
- 2** Press either side of (SEEK) to tune in the TV channel you want to assign to each number button.
- 3** Press and hold the desired number button (1 to 6) until you hear a small beep.  
The number button indication and "MEM" appear in the display.

### Note

If you try to assign another channel to the same number button, the previously assigned channel will be erased.


## Storing the TV channel names

Follow the steps in "Storing station names" (page 14).

### Displaying the TV or radio station names

Press (LIST) during TV or radio reception.

Example: When receiving the FM1 band

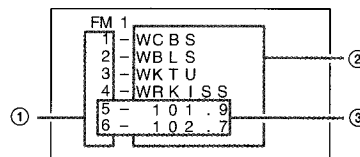

- ① Preset numbers
- ② Stored station names
- ③ Frequencies\*

\* If the name of a station is not assigned to number buttons, the frequency of that station will be displayed instead.

To turn off the list display on the TV monitor, press (LIST).


### Notes

- It may take a few moments before all indications appear in the display.
- The current TV channel does not appear during list display.
- The contents of preset memory cannot be listed when the unit is in Simultaneous Play mode (page 22).

## Displaying the information stored on a disc

Press **(LIST)** during CD/MD playback.

Example: When CD unit 1 is selected

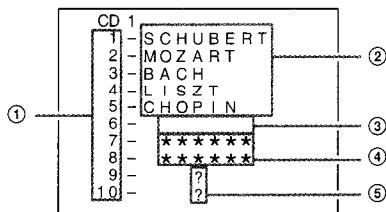

- ① Disc numbers
- ② Stored titles
- ③ No disc is loaded\*<sup>1</sup>
- ④ No stored titles\*<sup>2</sup>
- ⑤ TOC information has not yet been identified\*<sup>3</sup>

\*<sup>1</sup> A blank space displayed next to a disc number represents an empty slot in the disc magazine.  
 \*<sup>2</sup> If a title is not registered, "\*\*\*\*\*" is displayed.  
 \*<sup>3</sup> If the disc information has not yet been read by the unit, "?" is displayed.

To turn off the list display on the TV monitor, press **(LIST)**.

### Notes


- It may take a few moments before all indications appear in the display.
- The current TV channel does not appear during list display.
- The contents of preset memory cannot be listed when the unit is in the Simultaneous Play mode (page 22).
- If the source is an MD, the stored track names will also be displayed.

## Watching the TV or video while listening to a CD or MD


### — Simultaneous Play

The simultaneous play function does not work while you are listening to the radio.


- 1 Press **(MENU)**, then press either side of **(DISC/PRESET)** repeatedly until "SIMUL-SEL" appears.
- 2 Press **(ENTER)**.

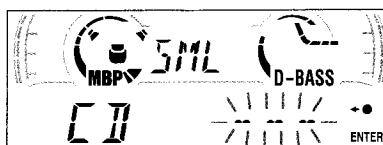


- 3 Press the (-) side of **(SEEK)**.

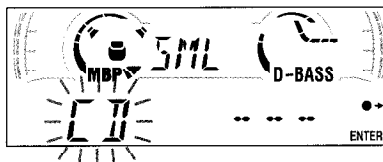


- 4 Press **(SOURCE)** repeatedly to select "CD" or "MD."

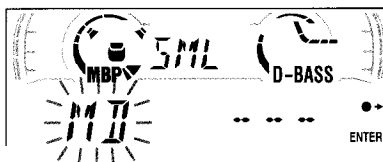

- 5 Press the (+) side of **(SEEK)**.

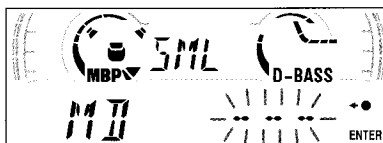

- 6 Press **(SOURCE)** repeatedly to select a "TV" or "AUX (video)."

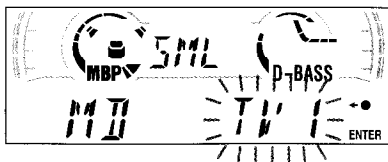

- 7 Press **(ENTER)**.  
Simultaneous Play starts.

If you are already watching the TV or video and want to listen to a CD or MD as well, follow the same steps.

#### Returning to normal mode

To cancel the CD or MD, select "---" in step 3.

To cancel the TV or video, select "---" in step 5.

#### Note


If you press **(OFF)** or **(eject)** on a CD/MD unit while the unit is in Simultaneous Play mode, Simultaneous Play is canceled.

## Additional Information

### Maintenance

#### Fuse replacement

When replacing the fuse, be sure to use one matching the amperage rating stated on the original fuse. If the fuse blows, check the power connection and replace the fuse. If the fuse blows again after replacement, there may be an internal malfunction. In such a case, consult your nearest Sony dealer.


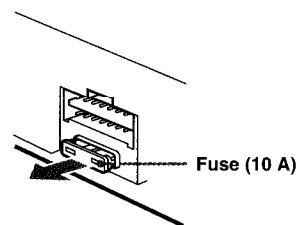


#### Warning

Never use a fuse with an amperage rating exceeding the one supplied with the unit as this could damage the unit.

#### Cleaning the connectors

The unit may not function properly if the connectors between the unit and the front panel are not clean. In order to prevent this, detach the front panel (page 7) and clean the connectors with a cotton swab dipped in alcohol. Do not apply too much force. Otherwise, the connectors may be damaged.

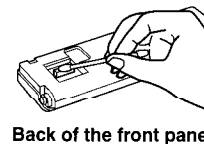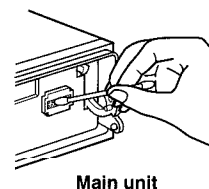


continue to next page →

#### Notes


- For safety, turn off the ignition before cleaning the connectors, and remove the key from the ignition switch.
- Never touch the connectors directly with your fingers or with any metal device.

#### Replacing the lithium battery

Under normal conditions, batteries will last approximately 1 year. (The service life may be shorter, depending on the conditions of use.) When the battery becomes weak, the range of the card remote commander becomes shorter. Replace the battery with a new CR2025 lithium battery.

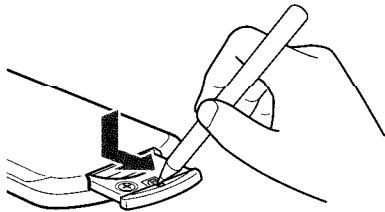

+ side up

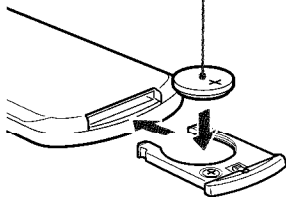

#### Notes on lithium battery

- Keep the lithium battery out of the reach of children. Should the battery be swallowed, immediately consult a doctor.
- Wipe the battery with a dry cloth to assure a good contact.
- Be sure to observe the correct polarity when installing the battery.
- Do not hold the battery with metallic tweezers, otherwise a short-circuit may occur.


#### WARNING

Battery may explode if mistreated.  
Do not recharge, disassemble, or dispose of in fire.

## Removing the unit

### 1 Remove the front cover


- 1 Detach the front panel (page 7).
- 2 Press the clip inside the front cover with a thin screwdriver.

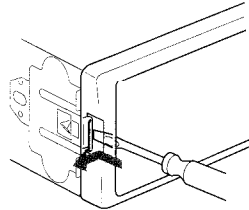

- 3 Repeat step 2 for the other side.

### 2 Remove the unit

- 1 Use a thin screwdriver to push in the clip on the left side of the unit, then pull out the left side of the unit until the catch clears the mounting.

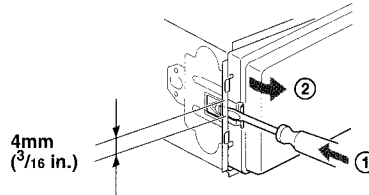

- 2 Repeat step 1 for the right side.
- 3 Slide the unit out of its mounting.



## Specifications

### AUDIO POWER SPECIFICATIONS

#### POWER OUTPUT AND TOTAL HARMONIC DISTORTION

23 watts per channel minimum continuous average power into 4 ohms, 4 channels driven from 20 Hz to 20 kHz with no more than 5% total harmonic distortion.

#### MD Player section

Signal-to-noise ratio	90 dB
Frequency response	10 – 20,000 Hz
Wow and flutter	Below measurable limit
Laser Diode Properties	
Material	GaAlAs
Wavelength	780 nm
Emission Duration	Continuous
Laser output power	Less than 44.6 $\mu$ W*

\* This output is the value measured at a distance of 200 mm from the objective lens surface on the Optical Pick-up Block.

#### Tuner section

##### FM

Tuning range	87.5 – 107.9 MHz
Antenna terminal	External antenna connector
Intermediate frequency	10.7 MHz/450 kHz
Usable sensitivity	8 dBf
Selectivity	75 dB at 400 kHz
Signal-to-noise ratio	66 dB (stereo), 72 dB (mono)
Harmonic distortion at 1 kHz	0.6 % (stereo), 0.3 % (mono)
Separation	35 dB at 1 kHz
Frequency response	30 – 15,000 Hz

##### AM

Tuning range	530 – 1,710 kHz
Antenna terminal	External antenna connector
Intermediate frequency	10.7 MHz/450 kHz
Sensitivity	30 $\mu$ V

#### Power amplifier section

Outputs	Speaker outputs (sure seal connectors)
Speaker impedance	4 – 8 ohms
Maximum power output	50 W $\times$ 4 (at 4 ohms)

#### General

Outputs	Audio outputs (front/rear) Power antenna relay control lead Power amplifier control lead Telephone ATT control lead BUS control input connector BUS audio input connector Remote controller input connector Antenna input connector
Inputs	
Tone controls	Bass $\pm$ 10 dB at 100 Hz Treble $\pm$ 10 dB at 15 kHz
Power requirements	12 V DC car battery (negative ground)
Dimensions	Approx. 178 $\times$ 50 $\times$ 177 mm (7 <sup>1</sup> / <sub>8</sub> $\times$ 2 $\times$ 7 in.) (w/h/d)
Mounting dimensions	Approx. 182 $\times$ 53 $\times$ 161 mm (7 <sup>1</sup> / <sub>4</sub> $\times$ 2 <sup>1</sup> / <sub>8</sub> $\times$ 6 <sup>3</sup> / <sub>8</sub> in.) (w/h/d)
Mass	Approx. 1.2 kg (2 lb 10 oz)
Supplied accessories	Parts for installation and connections (1 set) Front panel case (1) Rotary commander RM-X4S Card remote commander RM-X114 BUS cable (supplied with an RCA pin cord) RC-61 (1 m), RC-62 (2 m)
Optional accessories	CD changer (10 discs) CDX-848X, CDX-747X, CDX-646 CD changer (6 discs) CDX-T68X, CDX-T67 MD changer (6 discs) MDX-65 Source selector XA-C30 TV tuner XT-40V, etc.
Optional equipment	

#### Note

This unit cannot be connected to a digital preamplifier or an equalizer.

US and foreign patents licensed from Dolby laboratories.

Design and specifications are subject to change without notice.

---

## Troubleshooting

The following checklist will help you remedy problems you may encounter with your unit. Before going through the checklist below, check the connection and operating procedures.

---

### General

#### No sound.

- Rotate the volume control dial clockwise to adjust the volume.
- Cancel the ATT function.
- Set the fader control to the center position for a 2-speaker system.

---

#### The message "LP" appears in the display. MDLP tracks cannot be played back.

- An optional MD unit does not conform to MDLP playback.
- Use this unit to playback the MDLP tracks.

---

#### The contents of the memory have been erased.

- The RESET button has been pressed.  
→ Store again into the memory.
- The power cord or battery has been disconnected.
- The power connecting cord is not connected properly.

---

#### No beep sound.

- The beep sound is cancelled (page 18).
- An optional power amplifier is connected and you are not using the built-in amplifier.

---

#### Indications disappear from/do not appear in the display.

- The clock display disappears if you press (OFF) for 2 seconds.  
→ Press (OFF) again for 2 seconds to display the clock.
- Remove the front panel and clean the connectors. See "Cleaning the connectors" (page 23) for details.

---

#### Stored stations and correct time are erased.

#### The fuse has blown.

#### Makes noise when the ignition key is in the ON, ACC, or OFF position.

The leads are not matched correctly with the car's accessory power connector.

---

#### No power is being supplied to the unit.

- Check the connection. If everything is in order, check the fuse.
- The car does not have an ACC position.  
→ Press (SOURCE) (or insert a disc) to turn on the unit.

---

#### The power is continuously supplied to the unit.

The car does not have an ACC position.

---

---

#### The power antenna does not extend.

The power antenna does not have a relay box.

---

#### The operation buttons do not function.

Press the RESET button.

---

#### Cannot turn off the "-----" indication.

You entered the name edit mode.

→ Press (LIST) for 2 seconds.

---

---

### CD/MD playback

---

#### A disc cannot be loaded.

- Another MD/CD is already loaded.
- The MD/CD is forcibly inserted upside down or in the wrong way.

---

#### Playback does not begin.

- Defective MD or dirty CD.
- CD-R that is not finalized.
- You tried to playback a CD-R not designed for audio use.
- Some CD-Rs may not play due to its recording equipment or the disc condition.

---

#### A disc is automatically ejected.

The ambient temperature exceeds 50°C (122°F).

---

#### The sound skips from vibration.

- The unit is installed at an angle of more than 20°.
- The unit is not installed in a sturdy part of the car.

---

#### The sound skips.

Dirty or defective disc.

---

---

### Radio reception

---

#### Preset tuning is not possible.

- Store the correct frequency in the memory.
- The broadcast signal is too weak.

---

#### The stations cannot be received.

#### The sound is hampered by noises.

- Connect a power antenna control lead (blue) or accessory power supply lead (red) to the power supply lead of a car's antenna booster. (Only when your car has built-in FM/AM antenna in the rear/side glass.)
- Check the connection of the car antenna.
- The auto antenna will not go up.  
→ Check the connection of the power antenna control lead.
- Check the frequency.

---

#### Automatic tuning is not possible.

- The local seek mode is set to "ON."  
→ Set the local seek mode to "OFF." (page 18)
  - The broadcast signal is too weak.  
→ Perform manual tuning.
-

---

**The "ST" indication flashes.**

- Tune in the frequency accurately.
- The broadcast signal is too weak.  
→ Set to the monaural reception mode (page 18).

---

**A program broadcast in stereo is heard in monaural.**

- The unit is in monaural reception mode.  
→ Cancel monaural reception mode (page 18).

---

**Interference occurs during FM reception.**

- The wide mode is selected.  
→ Set the IF mode to "IF AUTO" (page 18).
- 

---

## Error displays/Messages

---

### Error displays

---

**(For this unit and optional CD/MD changers)**

The following indications will flash for about 5 seconds, and an alarm sound will be heard.

---

**BLANK**<sup>\*1</sup>

- No tracks have been recorded on an MD.<sup>\*2</sup>  
→ Play an MD with recorded tracks on it.

---

**ERROR**<sup>\*1</sup>

- A CD is dirty or inserted upside down.<sup>\*2</sup>  
→ Clean or insert the CD correctly.
- A CD/MD cannot play because of some problem.<sup>\*2</sup>  
→ Insert another CD/MD.

---

**HI TEMP**

- The ambient temperature is more than 50°C (122°F).  
→ Wait until the temperature goes down below 50°C (122°F).

---

**NO DISC**

- No disc is inserted in the CD/MD unit.  
→ Insert discs in the CD/MD unit.

---

**NO MAG**

- The disc magazine is not inserted in the CD/MD unit.  
→ Insert the magazine in the CD/MD unit.

---

**NOTREADY**

- The lid of the MD unit is open or the MDs are not inserted properly.  
→ Close the lid or insert the MDs properly.

---

**RESET**

- The CD/MD unit cannot be operated because of some problem.  
→ Press the RESET button on the unit.
- 

<sup>\*1</sup> When an error occurs during playback of a MD or CD, the disc number of the MD or CD does not appear in the display.

<sup>\*2</sup> The disc number of the disc causing the error appears in the display.

If these solutions do not help improve the situation, consult your nearest Sony dealer.

---

### Messages

---

**LSEEK +/-**

The Local Seek mode is on during automatic tuning (page 13).

---

**NOT READ**

The unit is reading the TOC\* information.

---

**\*\*WAIT\*\***

The unit is reading the TOC\* information.

---

**"LL LL" or "rr rr"**

You have reached the beginning or the end of the disc and you cannot go any further.

---

\* TOC = Table of Contents

<http://www.world.sony.com/>

Sony Corporation Printed in Thailand