

SHARP SERVICE MANUAL

No. SX789MDMS702H

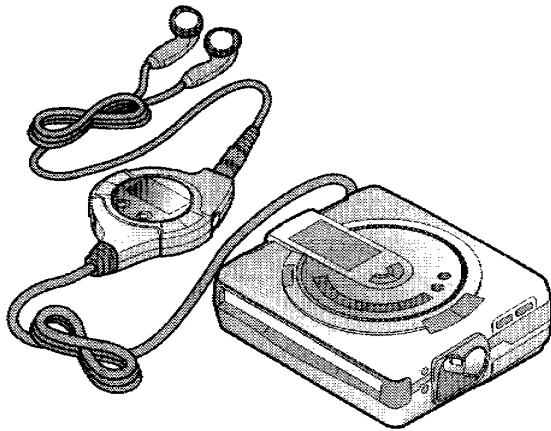


Illustration: MD-MS701H

MD-MS701H MD-MS702H(BL) MD-MS702H(GY)

• In the interests of user-safety the set should be restored to its original condition and only parts identical to those specified should be used.



CONTENTS


	Page
SAFETY PRECAUTION FOR SERVICE MANUAL	2
SPECIFICATIONS	3
NAMES OF PARTS	4
OPERATION MANUAL	5
DISASSEMBLY	8
REMOVING AND REINSTALLING THE MAIN PARTS	9
ADJUSTMENT	10
NOTES ON SCHEMATIC DIAGRAM	28
BLOCK DIAGRAM	29
SCHEMATIC DIAGRAM/WIRING SIDE OF P.W.BOARD	30
WAVEFORMS OF CD CIRCUIT	39
TROUBLE SHOOTING	40
FUNCTION TABLE OF IC	43
PARTS GUIDE/EXPLODED VIEW	
PACKING METHOD (FOR UK ONLY)	

SAFETY PRECAUTION FOR SERVICE MANUAL

Precaution to be taken when replacing and servicing the Laser Pickup.

The AEL (Accessible Emission Level) of Laser Power Output for this model is specified to be lower than Class I Requirements. However, the following precautions must be observed during servicing to protect your eyes against exposure to the laser beam.

- (1) When the cabinet has been removed, the power is turned on without a compact disc, and the Pickup is on a position outer than the lead-in position, the Laser will light for several seconds to detect a disc. Do not look into the Pickup Lens.
- (2) The Laser Power Output of the Pickup inside the unit and replacement service parts have already been adjusted prior to shipping.
- (3) No adjustment to the Laser Power should be attempted when replacing or servicing the Pickup.
- (4) Under no circumstances look directly into the Pickup Lens at any time.
- (5) CAUTION - Use of controls or adjustments, or performance of procedures other than those specified herein may result in hazardous radiation exposure.

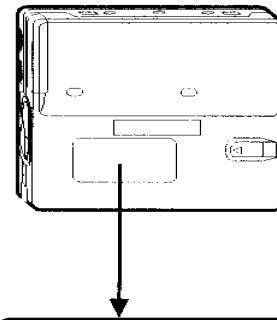


LASER KLASSE 1
LUOKAN 1 LASERLAITE
KLASS 1 LASERAPPARAT
LASER TRÍDY 1
LASER TRIEDY 1

Laser Diode Properties

- Material: GaAlAs
- Wavelength: 785 nm
- Pulse time:

Read mode: 0.8 mW Continuous
Write mode: max 10 mW 0.5
min cycle 1.5S
Repetition

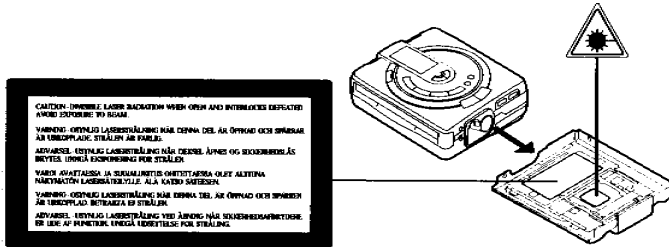

CAUTION: DANGER! LASER RADIATION WHEN OPEN AND REINTEGRATED DEFLECTED. AVOID EXPOSURE TO BEAM.
VARNING: OSYNLIG LASERSTRÅLNING NÄR DENNA DEL ÄR ÖPPNAD OCH SPÄRREN ÄR URKOPPLAD. BETRakta EJ STRÅLEN.
AVVARNING: OSYNLIG LASERSTRÅLNING NÄR DENNA DEL ÖPPNAS OCH SPÄRRENS ÅTERMONTERING ÄR AVSLUTAD. BETRakta EJ STRÅLEN.
VARO! AVATTASSA JA SUOJALUKITUS OHITETTAESSA OLET ALTIINA NÄKYMÄTTÖMÄLLE LASERSÄTEILYLLE. ÄLÄ KATSO SÄTEESEEN.
VARNING: OSYNLIG LASERSTRÅLNING NÄR DENNA DEL ÄR ÖPPNAD OCH SPÄRREN ÄR URKOPPLAD. BETRakta EJ STRÅLEN.
AVVARNING: OSYNLIG LASERSTRÅLNING NÄR DENNA DELS ÅTERMONTERING ÄR AVSLUTAD. BETRakta EJ STRÅLEN.

VAROITUS! LAITTEEN KÄYTTÄMINEN MUULLA KUIN TÄSSÄ KÄYTTÖOHJEESSA MAINITULLA TAVALLA SAAJTAA ALTISTAA KÄYTTÄJÄN TURVALLISUUSLUOKAN 1 YLITTÄVÄLLE NÄKYMÄTTÖMÄLLE LASERSÄTEILYLLE.
VARNING - OM APPARATEN ANVÄNDS PÅ ANNAT SÄTT ÄN I DENNA BRUKSANVISNING SPECIFICERAS. KAN ANVÄNDAREN UTSÄTTAS FÖR OSYNLIG LASERSTRÅLNING, SOM ÖVERSKRIDER GRÄNSEN FÖR LASERKLASS 1.

VARO! Avattaessa ja suojalukitus ohitettaessa olet alttiina näkymättömälle lasersäteilylle. Älä katso säteeseen.
VARNING! Osynlig laserstrålning när denna del är öppnad och spärren är urkopplad. Betrakta ej strålen.

Precaution to be taken when replacing and servicing the laser pickup.
The following precautions must be observed during servicing to protect your eyes against exposure to the laser.
Warning of possible eye damage when repairing:
If the AC adaptor or batteries are connected when the top housing (disc cover) of the unit is removed, and the PLAY key is pressed, the laser will light up during focus access (2-3 seconds). (Fig. 2-1) During the operation, the laser will leak from the opening between the magnetic head and the mechanical chassis (Fig. 2-2). In order to protect your eyes, you must not look at the laser during repair. Before repairing be sure to disconnect the AC adaptor and remove the batteries.

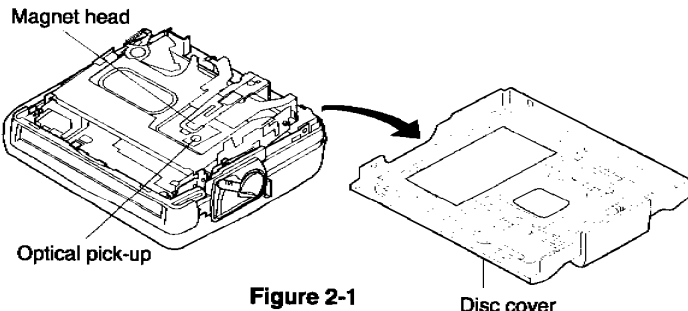


Figure 2-1

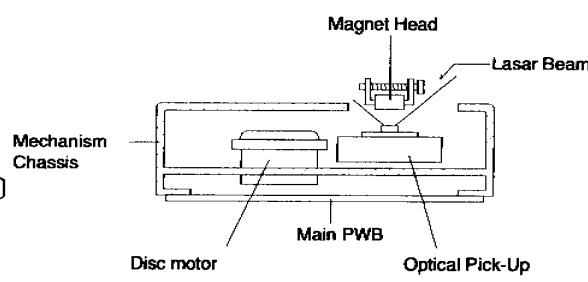


Figure 2-2

FOR A COMPLETE DESCRIPTION OF THE OPERATION OF THIS UNIT, PLEASE REFER TO THE OPERATION MANUAL.

SPECIFICATIONS

● **General**

Power source: DC 3.6 V (rechargeable lithium-ion battery x 1)
 DC 5 V (AC adaptor)
 AC 110 - 240V, 50/60 Hz
 DC 3V: Separately available battery case, AD-M70BC (commercially available, "AA" size, alkaline battery x 2)
 DC 4.5V: Separately available car adaptor, AD-CA20X (for cars with a 12-24V DC negative earth electrical system)

Power consumption: 0.15 A (AC adaptor)
 4 W

Output power: RMS; 20 mW (10 mW + 10mW) (0.2% T.H.D.)

Charging time: Approx. 2.5 hours
 (When using the AC adaptor included with the unit)

Battery life:

When using the rechargeable battery (fully charged) included with the unit	When using two, commercially available, high capacity, "AA" size, alkaline batteries (in the separately available battery case)	When using two, commercially available, high capacity, "AA" size batteries with the rechargeable battery (fully charged)
Continuous recording: Approx. 3.5 hours	Continuous recording: Approx. 4 hours	Continuous recording: Approx. 7.5 hours
Continuous play: Approx. 5 hours	Continuous play: Approx. 8 hours	Continuous play: Approx. 13 hours

- The continuous recording time is for analogue input when the volume level is set to "VOL 0".
- The continuous play time shows the value when the volume level is set to "VOL 15".
- The above values are the standard values when the unit is charged and used at an ambient temperature of 20°C.
- The operating time when using alkaline batteries may be different, depending on the type and manufacturer of the batteries, and on the operating temperature.

Input sensitivity:

Recording level	Reference input level	Input impedance
MIC H	0.25 mV	10 k ohms
MIC L	2.5 mV	10 k ohms
LINE	100 mV	20 k ohms

Output level:

	Specified output	Maximum output level	Load impedance
Headphones	—	10 mW + 10 mW	32 ohms
LINE	300mV (-12dB)	—	50 kohms

Dimensions:

Width: 87.0 mm (3-7/16")
 Height: 29.4 mm (1-3/16")
 Depth: 81.5 mm (3-7/32")

Weight: MD-MS701H: 216 g (0.48 lbs.) with rechargeable battery
 MD-MS702H: 219 g (0.49 lbs.) with rechargeable battery

Input socket: Line/Mic/optical digital, microphone (powered by the main unit)

Output socket: Headphones (impedance: 32 ohms)/remote control unit

● **MiniDisc Recorder**

Type: Portable MiniDisc recorder

Signal readout: Non-contact, 3-beam semi-conductor laser pick-up

Audio channels: Stereo 2 channels/monaural (long-play mode) 1 channel

Frequency response: 20 - 20,000 Hz (± 3 dB)

Rotation speed: Approx 400 - 900 rpm

Error correction: ACIRC (Advanced Cross Interleave Reed-Solomon Code)

Coding: ATRAC (Adaptive TRansform Acoustic Coding), 24-bit computed type

Recording method: Magnetic modulation overwrite method

Sampling frequency: 44.1 kHz (32 kHz and 48 kHz signals are converted to 44/1 kHz, and then recorded.)


Wow and flutter: Unmeasurable (less than ±0.001% W.peak)

Specifications for this model are subject to change without prior notice

NAME OF PARTS




■ Remote Control Unit

- 1. Synchro Recording Indicator
- 2. Character/Time Information Indicator
- 3. Record Indicator
- 4. Repeat Indicator: ⇐
- 5. Random Indicator
- 6. Disc Mode Indicator
- 7. Total Track Number Display
- 8. Track Number Indicator
- 9. Battery Indicator: ⇐
- 10. Headphones Socket
- 11. Hold Switch
- 12. Play Mode Button
- 13. Volume Buttons: +, -
- 14. Bass Button
- 15. Display Button
- 16. Play/Pause Button: ▶ ||
- 17. Stop/Power Off Button: ■
- 18. Fast Reverse/Fast Forward Buttons: ◀◀ / ▶▶

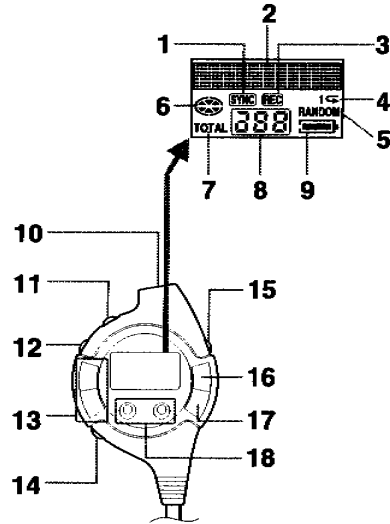

■ Main Unit


- 1. Monaural Long-Play Mode Indicator
- 2. Record Indicator
- 3. Level Meter
- 4. Repeat Indicator: ⇐
- 5. TOC Indicator
- 6. Battery Indicator: ⇐
- 7. Random Indicator
- 8. Track Number Indicator
- 9. Character/Time Information Indicator
- 10. Synchro Recording Indicator
- 11. Disc Mode Indicator
- 12. Disc Name Indicator
- 13. Track Name Indicator
- 14. Remaining Recording Time Indicator
- 15. Total Track Number Display
- 16. Record/Track Mark Button
- 17. Volume/Name Select Buttons: +, -
- 18. Display/Lowercase Characters Button
- 19. Character Button
- 20. Stop/Power Off/Charge Button: ■ /:OFF
- 21. Play/Pause Button: ▶ ||
- 22. Fast Reverse/Fast Forward/Recording Level Control/Cursor Buttons: ◀◀ / ▶▶
- 23. Enter/Fast Play/Synchro Button
- 24. Editor/Auto Mark/Time Mark Button
- 25. Eject Lever
- 26. Bass/Delete Button
- 27. Mode/Insert Button
- 28. Microphone Input Socket
- 29. Hold Switch
- 30. Rechargeable Lithium-Ion Battery Compartment
- 31. Optical/Line Input Socket
- 32. Headphones Socket
- 33. 5V DC Input Sockets
- 34. Battery Case Connection Terminals

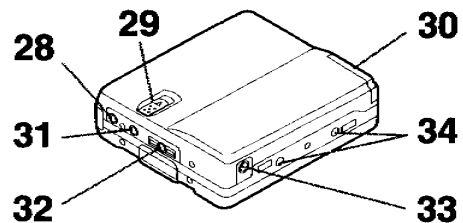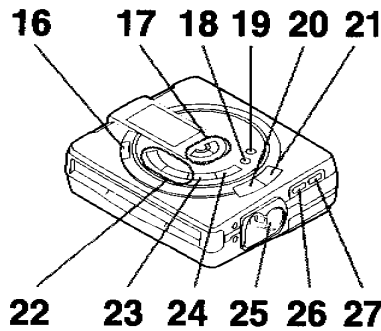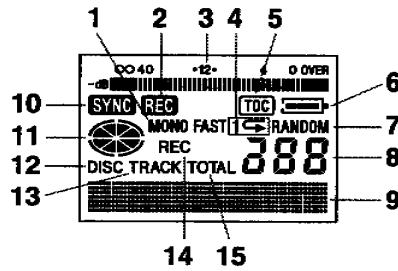

OPERATION MANUAL

POWER SOURCE

This unit can be used with 4 different power sources: a rechargeable battery, an AC adaptor, a separately available battery case (AD-M70BC), and a separately available car adaptor (AD-CA20X).

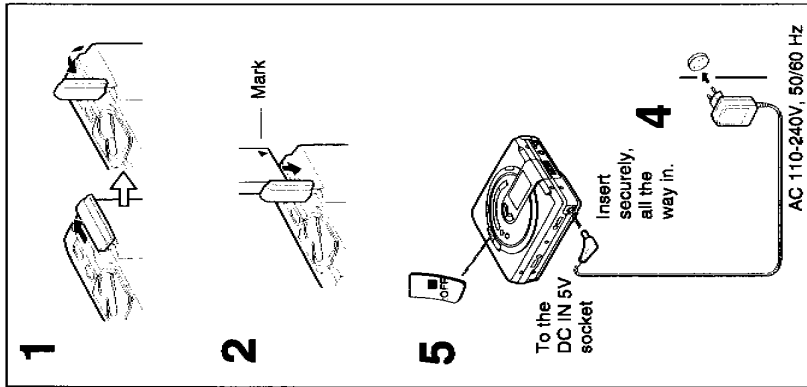

- Rechargeable battery power**
- When the rechargeable battery is used for the first time or when you want to use it after a long period of disuse, be sure to charge it fully.
- 1** Open the rechargeable battery compartment cover.
- 2** Insert the rechargeable battery. Insert the side with the arrow first.
- 3** Close the rechargeable battery compartment cover.
- 4** Plug the AC adaptor into the AC socket, and then insert the plug on the AC adaptor lead into the DC IN 5V socket.
- 5** Press the **ON/OFF** button twice to begin charging.
 - " " will appear, and the battery will begin charging.
 - Battery charging will be complete in 2.5 hours. When the charging is complete, " " will go out.


- Notes:**
- After charging has been completed, the AC adaptor may be left connected. (For example, when charging at night)
 - The battery will not be charged whenever the power to the main unit is turned on.
 - If the AC adaptor is removed from the main unit or from the AC socket whilst charging, " " will not disappear for about 1 minute. This is normal.

MINIDISC SYSTEM LIMITATIONS

MiniDiscs are recorded using a different system than is used for cassette tapes or DAT recordings. Therefore, the following conditions may be encountered, depending on how the disc has been recorded or edited. These are due to system limitations, and should be considered normal.

Even if the maximum recording time of a MiniDisc has not been reached, "DISC FULL" or "TOC FULL" may be displayed.	When the number of tracks used reaches the limit, regardless of the remaining recording time, further recording will be impossible. (Maximum number of tracks: 254) If a MiniDisc has been recorded or edited repeatedly or if a MiniDisc has scratches on it, it may not be possible to record the maximum number of tracks on it.
Even if the number of tracks and the recording time have not reached the limit, "DISC FULL" may be displayed.	If there are scratches on a disc, the unit will automatically avoid recording in those areas. The recording time will be reduced.
Even if several short tracks are erased, the remaining recording time may not show an increase.	When the remaining recording time of a disc is displayed, short tracks less than 8 seconds long may not be included in the total.
Two tracks may not be combined in editing.	For MiniDiscs on which repeated recording and editing operations were performed, the COMBINE function may not work.
The total of the recorded time and time remaining on a disc may not add up to the maximum possible recording time.	A cluster (about 2 seconds) is normally the minimum unit of recording. So, even if a track is less than 2 seconds long, it will use about 2 seconds of space on the disc. Therefore, the time actually available for recording may be less than the remaining time displayed. If there are scratches on discs, those sections will be automatically avoided (no recording will be placed in those sections). Therefore, the recording time will be reduced.
When recorded tracks are played back using the cue and review operations, some sounds may be skipped.	For MiniDiscs on which repeated recording and editing were performed, some sounds may be skipped whilst cueing and reviewing.
A track number can be created in the middle of a track.	If there are scratches or dust on a MiniDisc, the track numbers following that track will be increased by one.

RECORDING USING A SEPARATELY AVAILABLE DIGITAL CABLE

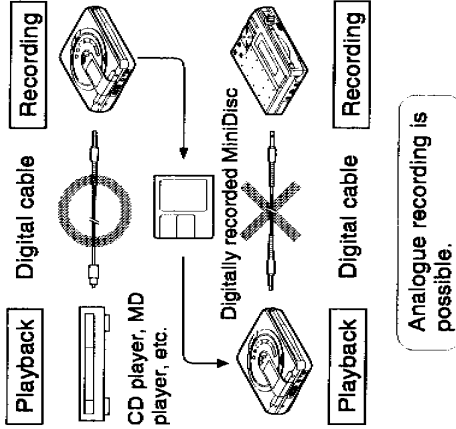

There are cases where digital recording may be impossible. In the following cases digital recording is impossible, even if you are using digital cables.

When you attempt to make a new digital recording from a track that was digitally recorded on a MiniDisc


- MiniDiscs are designed so that only first generation digital copies can be made, further digital copies are prevented by the SCMS (Serial Copy Management System).

Analogue recording is possible.

CONVENIENT OPERATION OF THE UNIT

Checking the remaining amount of battery charge

The remaining amount of battery charge is shown by the battery indicator () during operation.




Notes:

- When the AC adaptor included with this unit or a separately available car adaptor is used, the battery indicator will not be shown.
- The number of bars shown in the battery indicator may increase or decrease, depending on the operation being performed. This is normal.
- When the rechargeable battery and the alkaline batteries are used at the same time, the rechargeable battery is used first, and then the alkaline batteries. Since the battery indicator shows the remaining amount of the particular battery being used, the number of bars will increase when the unit switches to the alkaline batteries.

How to read the battery indicator >

When the battery is completely charged



Charging is needed.

When the battery needs charging, it is impossible to start recording or editing.

TROUBLESHOOTING

Moisture condensation

In the following cases, condensation may form inside the unit.

- Shortly after turning on a heater.
- When the unit is placed in a room where there is excessive steam or moisture.
- When the unit is moved from a cool place to a warm place.

Many potential "problems" can be resolved by the owner without calling a service technician. If something seems to be wrong with this product, check the following before calling your authorised SHARP dealer or service centre.

PROBLEM	CAUSE
The unit does not turn on.	<ul style="list-style-type: none"> ● Is the AC adaptor disconnected? ● Is the battery exhausted? ● Is the unit in the safety mode? ● Has condensation formed inside the unit? ● Is the unit being influenced by mechanical shock or by static electricity?
No sound is heard from the headphones.	<ul style="list-style-type: none"> ● Is the volume set too low? ● Is the remote control unit or the headphones plugged in? ● Are you trying to play a MiniDisc with data on it instead of a MiniDisc containing music?
When the operation buttons are pressed, the unit does not respond.	<ul style="list-style-type: none"> ● Is the unit in the safety mode? ● Is the battery exhausted? ● Is the remote control unit plug or the headphone plug inserted firmly?
Some sounds are skipped.	<ul style="list-style-type: none"> ● Is the battery exhausted? ● Is the unit being subjected to excessive vibration?
The MiniDisc cannot be ejected.	<ul style="list-style-type: none"> ● Has the track number or character information been written on the disc yet? ● Is the unit in the recording or editing mode?
Recording and editing are impossible.	<ul style="list-style-type: none"> ● Is the MiniDisc protected against accidental erasure? ● Is the unit connected properly to the other equipment? ● Is the AC adaptor unplugged or did a power failure occur whilst recording or editing? ● Is the unit in the safety mode?

If trouble occurs

- When this product is subjected to strong external interference (mechanical shock, excessive static electricity, abnormal supply voltage due to lightning, etc.) or if it is operated incorrectly, it may malfunction. If such a problem occurs, do the following:
1. Unplug the AC adaptor from the AC socket.
 2. Remove the battery.
 3. Leave the unit completely unpowered for approximately 30 seconds.
 4. Plug the AC adaptor back into the AC socket and retry the operation.
- If strange sounds, smell or smoke come out of the unit or an object is dropped into the unit, remove the AC adaptor from the AC socket immediately and contact an authorised Sharp service centre.

ERROR MESSAGES

Error messages	Meaning	Remedy
BATT EMPTY	<ul style="list-style-type: none"> The battery run down. 	<ul style="list-style-type: none"> Charge the rechargeable battery or replace the alkaline batteries (or use the AC adaptor for power).
BLANK DISC	<ul style="list-style-type: none"> Nothing is recorded. 	<ul style="list-style-type: none"> Replace the disc with a recorded disc.
Can't COPY	<ul style="list-style-type: none"> No copy can be made because of the SCMS copyright system. 	<ul style="list-style-type: none"> Record using the analogue cable.
Can't EDIT	<ul style="list-style-type: none"> A track cannot be edited. 	<ul style="list-style-type: none"> Change the stop position of the track and then try editing it.
Can't REC	<ul style="list-style-type: none"> Recording cannot be performed correctly due to vibration or shock in the unit. 	<ul style="list-style-type: none"> Re-record or replace it with another recordable disc.
Can't WRITE	<ul style="list-style-type: none"> Editing is impossible. The disc is scratched. 	<ul style="list-style-type: none"> Check the number of tracks. If the sound you hear is not right, try recording again. Replace the disc with another recordable disc.
DEFECT		
Din UNLOCK	<ul style="list-style-type: none"> Poor connection of the digital cable. 	<ul style="list-style-type: none"> Connect the digital cable securely.
DISC ERROR	<ul style="list-style-type: none"> The disc is damaged. 	<ul style="list-style-type: none"> Reload the disc or replace it.
DISC FULL	<ul style="list-style-type: none"> The disc is out of recording space. 	<ul style="list-style-type: none"> Replace it with another recordable disc.
HOLD	<ul style="list-style-type: none"> The unit is in the safety mode. 	<ul style="list-style-type: none"> Return the HOLD switch to its original position.
LOCKED LOCK ERROR	<ul style="list-style-type: none"> The EJECT lever was moved during recording or editing. 	<ul style="list-style-type: none"> Turn off the power and remove the MiniDisc.
NO DISC	<ul style="list-style-type: none"> A disc has not been loaded. 	<ul style="list-style-type: none"> Load a disc.
PB DISC PROTECTED	<ul style="list-style-type: none"> The disc is write protected. You tried to record on a playback-only disc. 	<ul style="list-style-type: none"> Move the write protection knob back to its original position. Replace it with a recordable disc.
POWER ?	<ul style="list-style-type: none"> Improper power is being supplied. 	<ul style="list-style-type: none"> Use one of the specified power sources.
SORRY	<ul style="list-style-type: none"> Since a track number is currently being located or written to, the unit cannot accept your command. 	<ul style="list-style-type: none"> Wait for a while and try the operation again.
SYSTEM ERR	<ul style="list-style-type: none"> You have come to the conclusion that the unit is out of order. 	<ul style="list-style-type: none"> To have it repaired, go to the distributor where you purchased the unit.
TEMP OVER	<ul style="list-style-type: none"> The temperature is too high. 	<ul style="list-style-type: none"> Turn off the power, and wait for a while.
TOC ERROR	<ul style="list-style-type: none"> A large portion of the disc has been damaged. 	<ul style="list-style-type: none"> Replace it with another recorded disc.
TOC FULL	<ul style="list-style-type: none"> There is no space left for recording character information (track names, disc names, etc.). 	<ul style="list-style-type: none"> Replace it with another recordable disc.
Tr. Protect	<ul style="list-style-type: none"> The track has been protected from being erased. 	<ul style="list-style-type: none"> Edit the track with the device on which it was recorded.
U TOC ERROR	<ul style="list-style-type: none"> A large portion of the disc has been damaged. There is an error in the recorded signal. 	<ul style="list-style-type: none"> Replace it with another recorded disc. Erase all of the signal errors, and then try recording again.
? DISC	<ul style="list-style-type: none"> A disc which contains data other than music was played. There is an error in the signal from the disc. 	<ul style="list-style-type: none"> A disc which contains non-music data cannot be played. Replace it with another recorded disc.

DISASSEMBLY

Caution on Disassembly

Follow the below-mentioned notes when disassembling the unit and reassembling it, to keep it safe and ensure excellent performance:

1. Take the battery and minidisc out of the unit.
2. When disassembling the machine, be sure to withdraw the power plug from the socket in advance.
3. When disassemble the parts, remove the nylon band or wire holder as necessary.

To assemble after repair, be sure to arrange the wires as they were.

If a screw of different length is fitted to the MD mechanism (the screw of the part to be fitted to the MD mechanism chassis), it may contact the optical pickup, resulting in malfunction.

4. When repairing, pay due attention to electrostatic charges of IC.

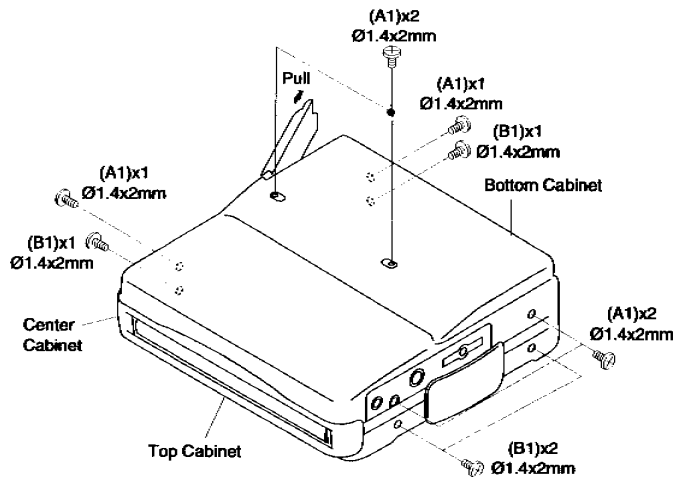


Figure 8-1

STEP	REMOVAL	PROCEDURE	FIGURE
1	Bottom Cabinet	1. Open the battery Lid. 2. Screw (A1) x6	8-1
2	Top Cabinet	1. Screw (B1) x4 2. Flat Cable (B2) x2	8-1
3	Main PWB	1. Screw (C1) x2 2. Flat Cable (C2) x3	8-2
4	Mechanism Unit	1. Lift the left side, and remove in the arrow direction.	8-3

Caution:

1. Handle carefully the main PWB and flexible PWB.
After removing the flexible PWB (*1) for optical pickup from the connector, wrap the front end of flexible PWB in conductive aluminum foil so as to protect the optical pickup from electrostatic damage.
2. When removing the mechanism from the cabinet or when installing it, it is advisable to rotate the unit lock plate to lower the holder section.

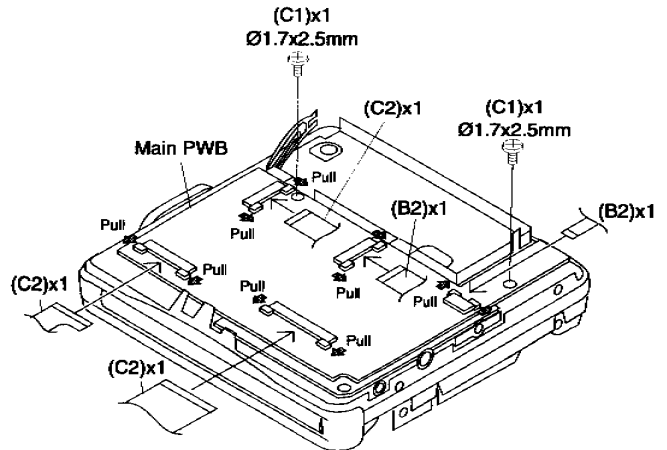


Figure 8-2

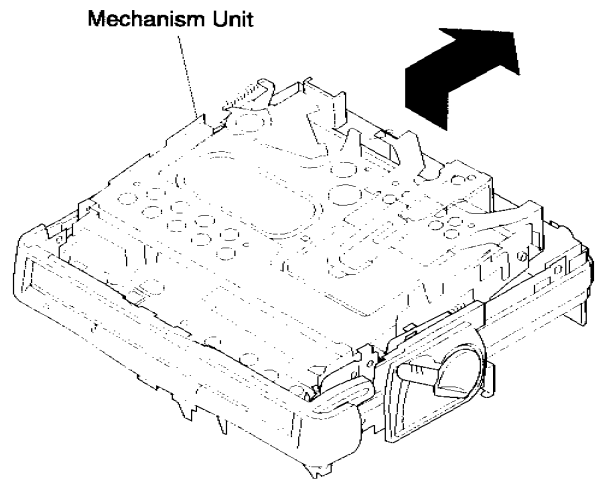


Figure 8-3

REMOVING AND REINSTALLING THE MAIN PARTS

Remove the mechanism according to the disassembling methods 1 to 3. (See Page 8.)

How to remove the spindle motor (See Fig. 9-1.)

1. Remove the solder joint (A1) x 1 of flex PWB.
2. Remove the stop (A2) x 3 pcs. and remove the spindle motor.

How to remove the lift motor (See Fig. 9-2.)

1. Remove the solder joint (B1) x 2 of slide motor lead wire.
2. Remove the stop washer (B2) x 1 pc., and remove the drive gear (B3) x 1 PC.
3. Remove the screw (B4) x 1, and remove the lift motor.

Note:

Take care so that the motor gear is not damaged.
(If the gear is damaged, noise is raised in search mode.)

How to remove the sled motor (See Fig. 9-3.)

1. Remove the solder joint (C1) x 2 of slide motor lead wire.
2. Remove the screw (C2) x 2, and remove the sled motor.

Note:

Take care so that the motor gear is not damaged.
(If the gear is damaged, noise is raised in search mode.)

How to remove the magnetic head (See Fig. 9-4.)






1. Remove the screw (D1) x 2 pc.
2. Remove the screw (D2) x1 which connects the magnetic head to the head relay flex PWB, and remove the soldering joint (D3) x2 pcs.

Note:

Mount carefully so as not to damage the magnetic head.

How to reinstall the optical pickup unit (See Fig. 9-5.)

1. Remove the screws (E1) x 1 pcs.
2. Remove the soldering joint (C2) x2 places of flex PWB, and remove the sled motor.

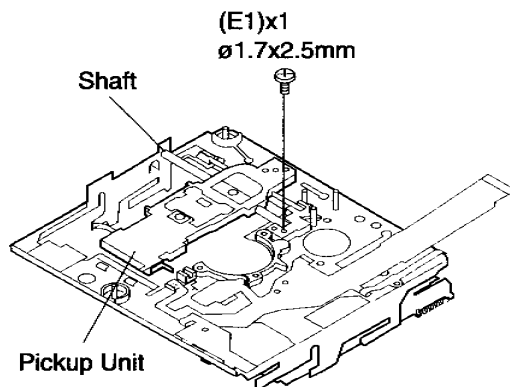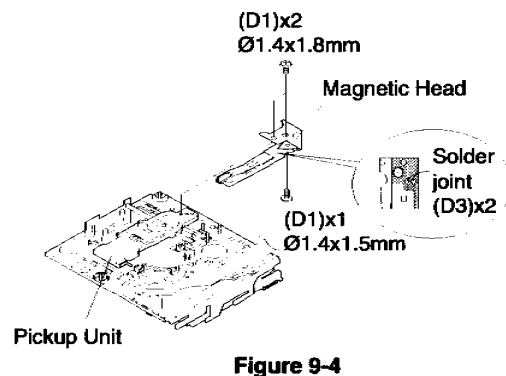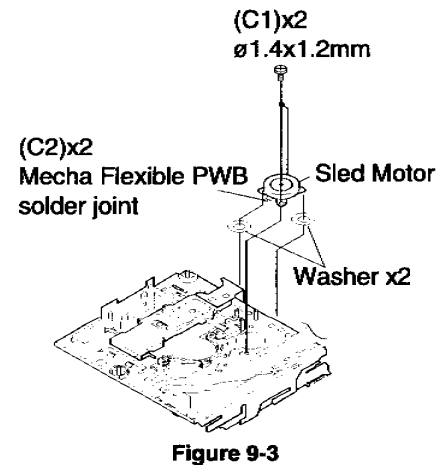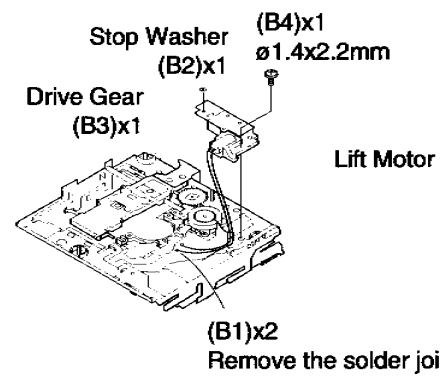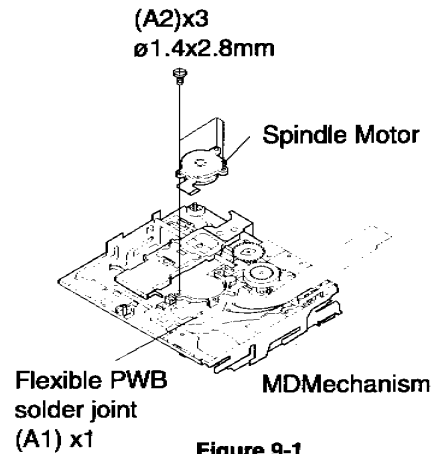

ADJUSTMENT

● Test disc

MD adjustment needs two types of disc, namely recording disc (low reflection disc) and playback-only disc (high reflection disc).

	Type	Test disc	Parts No.
1	High reflection disc	MMD-110 (TEAC Test MD)	88GMMD-110
2	Lowreflection disc	MMD-212 (TEAC Test MD)	88GMMD-212
3	Low reflection disc	Recording minidisc	UDSKM0001AFZZ

Note: Use the low reflection disc on which music has been recorded.

● Extension Cable (See Fig.10)

	Type	Parts No.
1	Flat Cable for servicing 16Pin	QCNWK0110AFZZ
2	Extension Connector for Service 16Pin	RUNTK0460AFZZ

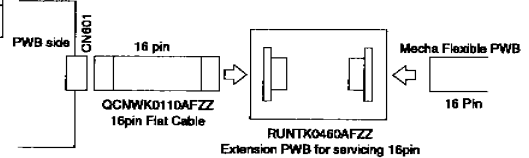


Figure 10


● Entering the TEST mode

1. Setting at port (in standby state, disc-free state or power nonconnected state)

- (1) Set the port as follows.
TEST1 : "Low"
TEST0 : "High"
- (2) Press the PLAY button in the standby state (it is allowed to insert the disc or to connect the power supply).
- (3) Test Mode STOP [_ T E S T _]

2. Setting by special button operation (in standby state)

- (1) Holding down the DISP button and ENTER button, press the PLAY button.
- (2) Normal mode setting initialization (BASS setting, VOL setting, etc.)
- (3) Indication of microcomputer version for one second [○○○○○○]



- (4) Whole LCD lighting for 2 seconds
 - (5) Test Mode STOP [_ T E S T _]
- *When the PLAY button is pressed during indication (3) and (4), the process proceeds to (5).

● Leaving the TEST mode

- (1) Press the STOP button in the TEST mode stop state or version indicating state or whole LCD lighting state.
- (2) EEPROM rewrite-enable area updating, adjustment error setting (so as to adjust all the items when the power supply is turned on in the normal mode)
- (3) Change to standby state

● Test Mode

1. AUTO 1 Mode	<ul style="list-style-type: none"> Perform preliminary automatic adjustment. If the combination of mechanism and pickup PWB has been changed, be sure to start from AUTO1.
2. AUTO 2 Mode	<ul style="list-style-type: none"> Perform ATT (attenuator) automatic adjustment. Perform continuous playback (error rate display, jump test)
3. MANUAL 1 Mode	<ul style="list-style-type: none"> Temperature is displayed. (Updating in real time) Seeing the displayed adjustment value, perform preliminary manual adjustment. (Error rate indication, jump test)
4. MANUAL 2 Mode	<ul style="list-style-type: none"> Temperature is displayed. (Updating in real time) Seeing the displayed adjustment value perform manually the preliminary adjustment. (Error rate indication, jump test) Continuous playback is performed (error rate display, jump test).
5. RESULT 1 Mode	<ul style="list-style-type: none"> The value adjusted in AUTO1 or MANUAL1 is indicated. (Execution in servo "OFF" state).
6. RESULT 2 Mode	<ul style="list-style-type: none"> The value adjusted in AUTO 2 or MANUAL 2 is indicated. Adjustment value is changed manually. (error rate display, jump test).
7. TEST-PLAY Mode	<ul style="list-style-type: none"> Continuous playback from the specified address is performed. 1 line, 10 lines or 400 lines manual jump is performed. C1 error rate display (pit section), ADIP error rate display (groove section) The temperature correction is performed only when servo start is performed, but the posture correction is not performed during continuous playback.

8. TEST-REC Mode	<ul style="list-style-type: none"> Continuous record from the specified address is performed. Change of record laser output (servo gain is also changed according to laser output). The temperature correction is performed only when servo start is performed, but the posture correction is not performed during continuous recording.
9. NORMAL Mode	<ul style="list-style-type: none"> The mode is changed from the TEST mode to the normal mode without adjustment. In the normal mode the internal operation mode, memory capacity, etc. are indicated. In the normal mode both temperature correction and posture correction are performed.
10. DIGITAL INPUT mode	<ul style="list-style-type: none"> Digital input information is displayed.
11. ERROR INFORMATION Mode	<ul style="list-style-type: none"> Error information is displayed. Error information is initialized
12. E ² -PROM Mode	<ul style="list-style-type: none"> Factors of digital servo are changed manually. (Each servo is turned on individually.) Cut-off frequency of BASS1, BASS2 and BASS3 is selected manually. Temperature detection terminal voltage is measured, and the reference value is set. Defaults are selected and set. Setting of EEPROM protect area is updated. (In case of protect releasing)
13. INNER Mode	<ul style="list-style-type: none"> Determine the position where the INNER switch is turned on. (only high reflection disc). The temperature correction is performed only when servo start is performed, but the posture correction is not performed.

● Operation in each TEST mode

1. AUTO1 Mode

- When the STOP button is pressed while the AUTO1 menu appears or during automatic adjustment, the mode changes to the TEST mode stop state. At this time the adjustment value is not output.
- Be sure to adjust, using the specified disc MMD-212.
At this time release the EEPROM (IC402) protection. (Refer to EEPROM write procedure.)
- Adjustment NG; Adjustment item out of range, focus ON failure, and adjustment error
- When the PLAY button is pressed while ADJ. OK is displayed, AUTO2 is executed.

2. AUTO2 Mode

- When the STOP button is pressed while the AUTO2 menu appears or during automatic adjustment, the mode changes to the TEST mode stop state. At this time the adjustment value is not output.
- Adjustment NG; Adjustment item out of range, and adjustment error

3. MANUAL1 Mode

- Adjustment item to be made in AUTO1 mode is performed manually.
- When the VOL UP button is pressed during adjustment, the setting increases, and the new setting is output.
- If the VOL DOWN button is pressed during adjustment, the setting decreases and the new setting is output.
- If the VOLUP/DOWN button is held down, the setting changes continuously with 100 ms cycle.
- If the setting is within the allowable range, the RANDOM display lights.
- When the STOP button is pressed during MANUAL1 MENU or measurement or adjustment, the state is changed to the TEST mode stop state.

4. MANUAL2 Mode

- Adjustment item to be made in AUTO2 mode is performed manually.
- When the VOL UP button is pressed during adjustment, the setting increases, and the new setting is output.
- If the VOL DOWN button is pressed during adjustment, the setting decreases and the new setting is output.
- If the VOLUP/DOWN button is held down, the setting changes continuously with 100 ms cycle.
- If the setting is within the allowable range, the RANDOM display lights.
- When the STOP button is pressed during MANUAL2 MENU or measurement or adjustment, the state is changed to the TEST mode stop state.
- When the PLAY button is pressed in B-ATT set state, the mode is changed to the continuous playback mode.
- As for operation during continuous playback refer to "TEST-PLAY mode explanation".

5. RESULT1 Mode

- The measurement value and set value of adjustment items for AUTO1 and MANUAL 1 are displayed.
- If the VOL UP button is pressed during setting indication, the setting increases. If the VOL DOWN button is pressed, the setting reduces. And then the new setting is stored in the RAM.
- When the VOL UP/DOWN button is held down, the setting changes continuously, one cycle being 100 ms.
- If the STOP button is pressed during RESULT1 menu or measurement value indication or set value indication, the state is changed to the TEST mode STOOP state.

6. RESULT2 Mode

- The measurement value and set value of adjustment items for AUTO2 and MANUAL 2 are displayed.
- If the VOL UP button is pressed during setting indication, the setting increases. If the VOL DOWN button is pressed, the setting reduces. And then the new setting is stored in the RAM.
- When the VOL UP/DOWN button is held down, the setting changes continuously, one cycle being 100 ms.
- If the STOP button is pressed during RESULT2 menu or measurement value indication or set value indication, the state is changed to the TEST mode STOOP state.

7. TEST-PLAY Mode

- When the STOP button is pressed while the TEST-PLAY menu appears, or in TEST-PLAY or continuous playback mode, the mode changes to the TEST mode stop state.
- When the PLAY button is pressed while the TEST-PLAY menu appears, continuous playback is initiated from the current pickup position.
- Whenever the DISP button is pressed in the TEST-PLAY mode, the address changes as follows.
0050 — 03C0 — 0700 — 08A0 — 0050 —
- Whenever the BASS key is pressed in the TEST-PLAY mode, the digit which is changed by the SKIP UP/DOWN button changes as follows.
0050 — 0050 — 0050 — 0050 — 0050 —
- When the SKIP UP button is pressed in the TEST-PLAY mode, the digit of address specified by the BASS button is set to +1h. (0 to F)
- When the SKIP DOWN button is pressed in the TEST-PLAY mode, the digit of address specified by the BASS button is set to -1h. (0 to F)
* When the SKIP UP/DOWN button is held down, the setting changes continuously, one cycle being 100 ms.
- When the BASS button is pressed in the continuous playback mode, the number of jump lines changes as follows.
1 — 10 — 400 — 1
* After the number of jump lines is indicated for one second, the address indication is restored. [▲▲▲TR_]
- When the SKIP UP button is pressed in the continuous playback mode, the specified number of lines is jumped in the FWD direction.
- When the SKIP DOWN button is pressed in the continuous playback mode, the specified number of lines is jumped in the REV direction.
* When the SKIP UP/DOWN button is held down, jump is repeated every approx. 100 ms.

MD-MS701H/MS702H

•Whenever the DISP button is pressed in the continuous playback mode, the indication changes as follows.

* Pit section	
Continuous playback (SUBQ address indication)	[S Q □□□□]
Continuous playback (C1 error indication)	[C E □□□□]
Continuous playback (SUBQ address indication)	[S Q □□□□]
* Groove section	
Continuous playback (ADIP address indication)	[A P □□□□]
Continuous playback (C1 error indication)	[C E □□□□]
Continuous playback (ADIP error indication)	[A E ★★★★★]
Continuous playback (ADIP address indication)	[A P □□□□]

8. TEST-REC Mode

- When the STOP button is pressed while the TEST-REC menu appears, or in the TEST-REC mode or continuous record mode, the mode changes to the TEST mode stop state.
- When the PLAY button is pressed while the TEST-REC menu appears, the continuous record is initiated from the current pickup position.
- Whenever the DISP button is pressed in the TEST-REC mode, the address changes as follows.
0050 — 03C0 — 0700 — 08A0 — 0050 —
- Whenever the BASS button is pressed in the TEST-REC mode, the digit which is changed by the SKIP UP/DOWN button changes as follows.
0050 — 0050 — 0050 — 0050 — 0050 —
- When the SKIP UP button is pressed in the TEST-REC mode, the digit of address specified by the BASS button is set to +1h. (0 to F)
- When the SKIP DOWN button is pressed in the TEST-REC mode, the digit of address specified by the BASS button is set to -1h. (0 to F)
* When the SKIP UP/DOWN button is held down, the setting changes continuously, one cycle being 100 ms.
- When the VOL UP/DOWN button is pressed in the TEST-REC mode or continuous record mode, the laser record power changes. (Servo gain changes also according to record power.)
* After the laser record power is indicated for one second, the address indication is restored. [R P W ▽▽]
- : Address
- ▽▽ : Laser power cord
- Operation is disabled if the premastered disc or disc is in miserase-protected state.

9. NORMAL Mode

- When the STOP button is pressed while the NORMAL menu appears, the mode changes to the TEST mode stop state.
- Indication during operation
Indication of memory capacity on main unit LCD [□□□ _ * * * * _ * * *] + Level meter
□□ : Internal mode
* * * * : Address (Cluster section)
* * : Address (Sector section)
- Selection of sound volume, BASS, etc. is possible (without indication)
- Recording is also possible.

10. Digital input display Mode (Din Mon)

- When the STOP button is pressed while the digital input indication menu appears or during digital input information indication, the mode changes to the TEST mode stop state.
- In case of analog input or digital input unlocking the indication data is _.

11. Error data display Mode

- Reversing when SKIP DOWN button is pressed
- When the STOP button is pressed while the error data indication menu appears or during error data indication, the mode changes to the TEST mode stop state.
- Error data 0 is the latest error.
- Error which occurred in the TEST mode is also stored in the memory.
- When the DISP button is pressed while the error data indication menu appears, the error data is initialized. [C L E A R _]
- : Error Code

● Explanation of error history code

- 12h : RF side FG, TG, and TCRS adjustment termination failure
- 13h : Adjustment servo retraction excessive retrial
- 17h : A, B, E, F, and TCRSO offset measurement value out of tolerable range
- 21h : Focus retraction completion allowable time-over
- 23h : Track search completion allowable time-over
- 32h : P-TOC read failure
- 42h : U-TOC read failure
- 44h : U-TOC write data write disabled/read check error
- 52h : SD write data write disabled
- 71h : Pickup position initialization time-over

- 72h : EEPROM data read check sum error
- 73h : Record head drive disabled (by EJECT lever)
- 82h : Power overvoltage detection
- 91h : Ambient temperature is higher than the allowable temperature.


12. INNER Mode

- when the STOP button is pressed on the INNER menu (SQ□□□□), the state is changed to the TEST mode STOP state.
- □□□□ : Address

E²-PROM (IC402) writing procedure

1. Procedure to replace E²-PROM and write initial value of microcomputer in E²-PROM

- (1) Replace E²-PROM.
- (2) Deprive E²-PROM of protection (connect the pins 8 and 6 of IC402).
- (3) Refer to the latest E²-PROM data list.
- (4) Press the Display/Lower-case Character button, Enter/Synchro button and Play/Pause button to start the test mode.
- (5) Version display

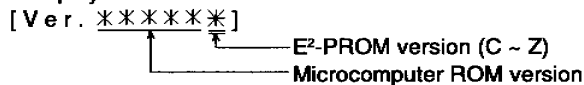[V e r . * * * * *]


- (6) The whole LCD lights.
- (7) Test mode stop state
[T E S T]
- (8) Press the "BASS" button, and press twice the "SKIP DOWN" button.
[E E P R O M]
- (9) Perform the operation to display "E²-PROM SETTING MODE CHART", compare the E²-PROM DATA LIST with the display, and set according to the E²-PROM DATA LIST with the VOL UP or VOL DOWN key.
- (10) Set the temperature reference. (Refer to the Temperature Reference Setting Method.)
- (11) Set according to the E²-PROM DATA LIST.
- (12) Press the Stop button.
[T E S T]
- (13) Press the Stop button.
- (14) After data is written in E²-PROM, turn off power .
- (15) Restore protection of E²-PROM (Disconnect connection made in Step (2) above).

2. Temperature reference setting method

[1] Measurement, calculation and setting procedure

- (1) Set the TEST mode.
 - Set TEST 1, 0 = '01', and turn on power (or set PLAY ON in standby state).
- (2) Start the EEPROM mode 'Temp' menu.
 - In the TEST mode STOP state, press the keys as follows: BASS, SKIP-DOWN x 2 times, PLAY, SKIP-DOWN x 4 times, and PLAY in this order.
 - 'TM\$\$%%' is displayed. (\$\$= Temperature code, %% = Temperature reference)
- (3) Once press SKIP-UP, and determine the displayed microcomputer TEMP input AD value.
 - 'TPin##' is displayed. (## = TEMP input AD value)
- (4) At the ambient temperature, determine the temperature corrected value from the temperature measurement value correction table.
- (5) Determine the temperature reference, using the following formula.
 - Temperature reference = Microcomputer TEMP input AD value + Temperature corrected value
 - An example: Environmental temperature is 22°C and set voltage is 1.25V.

MD-MS701H/MS702H

[2] Temperature measurement value correction table

Ambient temperature	Temperature correction	Center temperature
+14°C ~ +16°C	- 03h	+ 15.0°C
+17°C ~ +19°C	- 02h	+ 17.8°C
+20°C ~ +22°C	- 01h	+ 20.7°C
+23°C ~ +25°C	± 00h	+ 23.6°C
+26°C ~ +27°C	+ 01h	+ 26.5°C
+28°C ~ +30°C	+ 02h	+ 29.4°C

***Meaning of values**

- Temperature reference = Value to be predicted to be measured by the microcomputer at reference temperature (+23.6°C)

- Temperature correction = Value to convert to measurement value at reference temperature (+23.6°C)

***Determining the temperature correction value**

- Temperature detection characteristics formula

$$\text{Ambient temperature (°C)} = (-2.876 \times \text{TEMP input AD value}) + 463$$

$$\text{Hence, TEMP input AD value} = (463 - \text{Ambient temperature})/2.876$$

- The reference temperature (+23.6°C) is taken as a reference. (it is taken as '0'). Whenever the input AD value changes by '1', temperature is determined.

For temperature correction, the input AD value is +/- inverted.

[3] Power IC VREF feed control output

- Test/R-ROM write power input

Ambient temperature	Temperature correction	Center temperature
-5°C ~ +9°C	08h	+ 0.5°C
+6°C ~ +21°C	07h	+ 12.5°C
+17°C ~ +32°C	06h	+ 23.6°C
+29°C ~ +44°C	05h	+ 35.0°C

● E²-PROM DATA LIST

TEMP setting

Item display	Set values
T M _ _ ○○	Calculate values

BASS setting

Item display	Set values
B S 1 _ ○○	02H
B S 2 _ ○○	A4H
B S 3 _ ○○	C4H

Fucus setting

Item display	Set values
F G _ _ ○○	63H
F F 1 _ ○○	70H
F F 2 _ ○○	F0H
F Z H _ ○○	EDH
F L n _ ○○	09H
D J G _ ○○	14H
F R V _ ○○	00H
F P f _ ○○	88H
F L V _ ○○	19H
W T f _ ○○	20H
F S S _ ○○	02H

Tracking setting

Item display	Set values
T G _ _ ○○	26H
T F 1 _ ○○	70H
T F 2 _ ○○	E0H
T F S _ ○○	00H
T B o _ ○○	2BH
T B t _ ○○	17H
T K o _ ○○	2BH
T K t _ ○○	19H
T D o _ ○○	67H
T D t _ ○○	2AH
S C o _ ○○	00H
S C t _ ○○	40H
S C m _ ○○	53H
D B O _ ○○	00H
C L p _ ○○	12H
C L r _ ○○	24H
W T m _ ○○	E0H

Spindle setting

Item display	Set values
S P G _ ○○	14H
S P i _ ○○	AAH
S P m _ ○○	79H
S P o _ ○○	4FH
S P 1 _ ○○	10H
S P 2 _ ○○	60H
S P 3 _ ○○	F2H
S P 4 _ ○○	F2H
S P 5 _ ○○	10H
S P D _ ○○	61H
S P R _ ○○	C4H

Sled setting

Item display	Set values
S L G _ ○○	94H
S L 2 _ ○○	30H
S L M _ ○○	4FH
S L V _ ○○	36H
S K k _ ○○	43H
S K t _ ○○	40H
S K m _ ○○	43H

ADJ. SET setting

Item display	Set values
C O K _ ○○	A0H
F A T _ ○○	C0H
T A T _ ○○	3FH
C A T _ ○○	20H
F A B _ ○○	00H


EQ. SET setting

Item display	Set values
H Q 1 _ ○○	90H
H Q 2 _ ○○	90H
H S G _ ○○	11H
H S O _ ○○	FDH
L Q 1 _ ○○	90H
L Q 2 _ ○○	90H
L S G _ ○○	11H
L S O _ ○○	00H
G Q 1 _ ○○	98H
G Q 2 _ ○○	84H
G S G _ ○○	11H
G S O _ ○○	00H
G Q R _ ○○	00H

Control setting

Item display	Set values
C T 0 _ ○○	48H
C T 1 _ ○○	E0H
P W L _ ○○	00H
R C 0 _ ○○	C0H
R C 1 _ ○○	FEH
S Y C _ ○○	A6H
D R 1 _ ○○	A0H
D R 2 _ ○○	A6H
I N 1 _ ○○	D4H
I N 2 _ ○○	67H
C T R _ ○○	6DH
C T 2 _ ○○	14H
C T 3 _ ○○	03H
C T 4 _ ○○	64H
C T 5 _ ○○	74H
C T 6 _ ○○	08H
C T 7 _ ○○	00H
S P M _ ○○	00H
M S L _ ○○	80H
R S L _ ○○	00H

Test Mode Change Chart
Tset Mode Menu

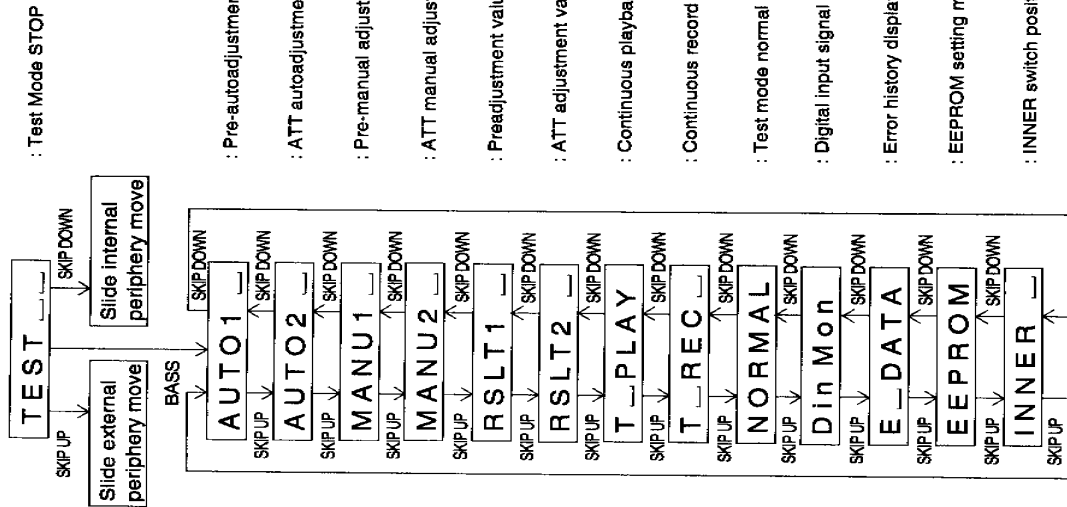

: Test Mode STOP

: Pre-autoadjustment menu

: ATT autoadjustment menu

: Pre-manual adjustment menu

: ATT manual adjustment menu

: Preadjustment value check menu

: ATT adjustment value check menu

: Continuous playback menu

: Continuous record menu (record/playback machine only)

: Test mode normal playback menu

: Digital input signal monitor menu (record/playback machine only)


: Error history display menu

: EEPROM setting menu

: INNER switch position measurement menu

* When the "STOP" button is pressed in specific menu, the TEST MODE STOP state is set.

Preadjustment Adjustment

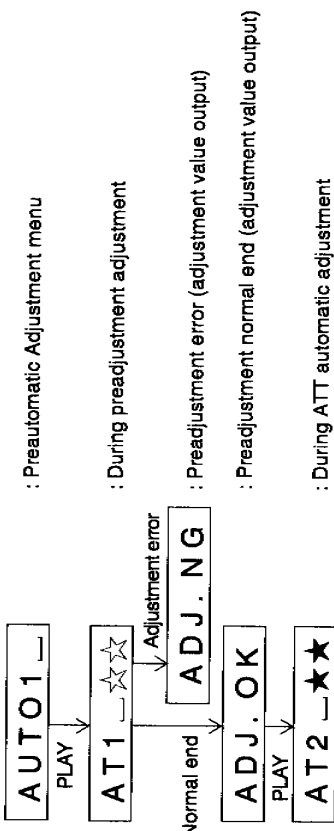

: Preadjustment Adjustment menu

: During preadjustment adjustment

: Preadjustment error (adjustment value output)


: Preadjustment normal end (adjustment value output)

: During ATT automatic adjustment

* When the "STOP" button is pressed in specific menu, the TEST MODE STOP state is set.
 * "☆☆" represent the adjustment number as follows.

- 00 : Innermost periphery move
- 02 : ABEF offset tentative measurement
- 04 : RF side focus gain coarse adjustment
- 05 : Focus ATT tentative setting
- 06 : RF side bit section tracking gain adjustment
- 07 : COUT level setting for pit section adjustment
- 08 : External periphery move
- 09 : RF side groove section tracking gain adjustment
- 10 : COUT level setting for groove section adjustment
- 11 : RF side TCRS gain adjustment
- 12 : Tracking ATT initial setting
- 13 : RF side focus gain minor adjustment
- 14 : Focus ATT initial setting
- 15 : S gain "High" ABEF offset measurement
- 16 : TCRS offset measurement
- 17 : S gain "Low" ABEF offset measurement

ATT Autoadjustment

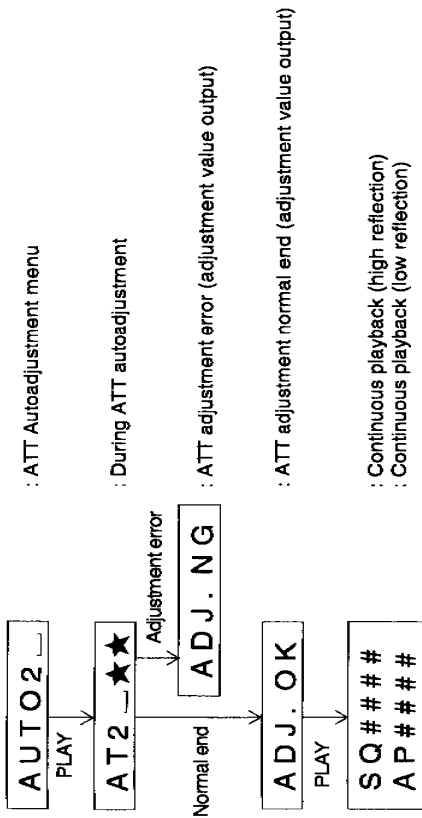

: ATT Autoadjustment menu

: During ATT autoadjustment

: ATT adjustment error (adjustment value output)

: ATT adjustment normal end (adjustment value output)


: Continuous playback (high reflection)

: Continuous playback (low reflection)

* When the "STOP" button is pressed in specific menu, the TEST MODE STOP state is set.
 * "★★" represent the adjustment number as follows.

- 0 0 : Innermost periphery move
- 0 3 : Pit section tracking ATT setting
- 0 4 : Pit section focus ATT setting
- 0 6 : External periphery move
- 0 7 : TCRS ATT setting
- 0 8 : Groove section tracking ATT setting
- 0 9 : Groove section focus ATT setting

Pre-Manual Adjustment

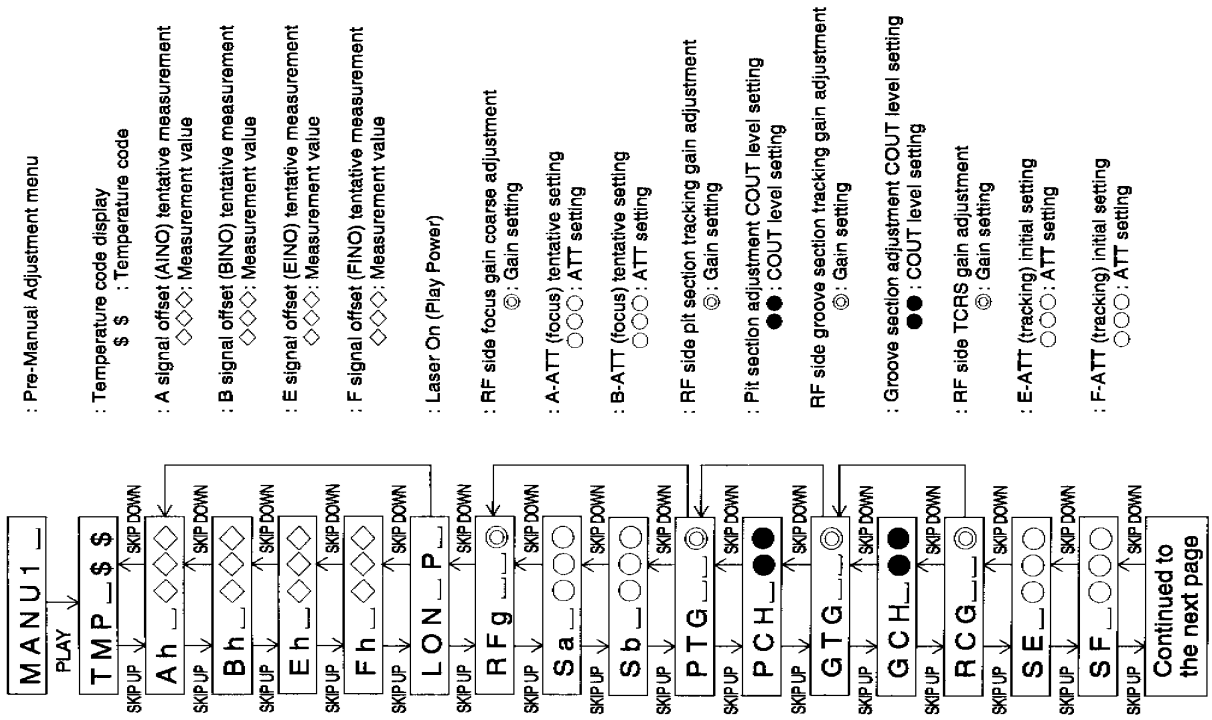

: Pre-Manual Adjustment menu

: Temperature code display
 \$ \$: Temperature code

: A signal offset (AINO) tentative measurement
 ◇◇◇◇: Measurement value

: B signal offset (BINO) tentative measurement
 ◇◇◇◇: Measurement value

: E signal offset (EINO) tentative measurement
 ◇◇◇◇: Measurement value

: F signal offset (FINO) tentative measurement
 ◇◇◇◇: Measurement value

: Laser On (Play Power)

: RF side focus gain coarse adjustment
 ◎: Gain setting

: A-ATT (focus) tentative setting
 ○○○○: ATT setting

: B-ATT (focus) tentative setting
 ○○○○: ATT setting

: RF side pit section tracking gain adjustment
 ◎: Gain setting

: Pit section adjustment COUJ level setting
 ●●: COUJ level setting

: RF side groove section tracking gain adjustment
 ◎: Gain setting




: Groove section adjustment COUJ level setting
 ●●: COUJ level setting

: RF side TCRS gain adjustment
 ◎: Gain setting


: E-ATT (tracking) initial setting
 ○○○○: ATT setting

: F-ATT (tracking) initial setting
 ○○○○: ATT setting


* In the setting display state the value of selected digit changes in the range of "0h to Fh" when [VOL UP/DOWN] key is pressed. However, the RF side gain setting changed in the range of "0h to 6h".
 * When the [DISP] key is pressed, the display changes as follows.

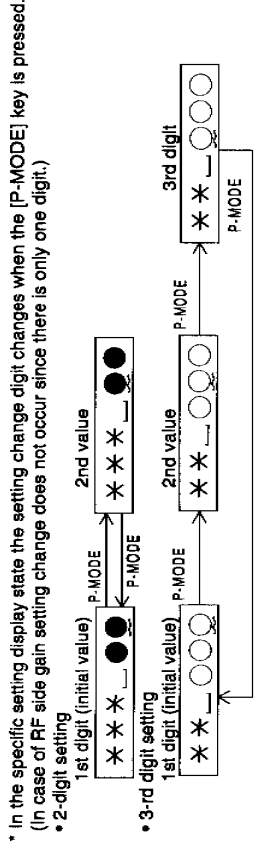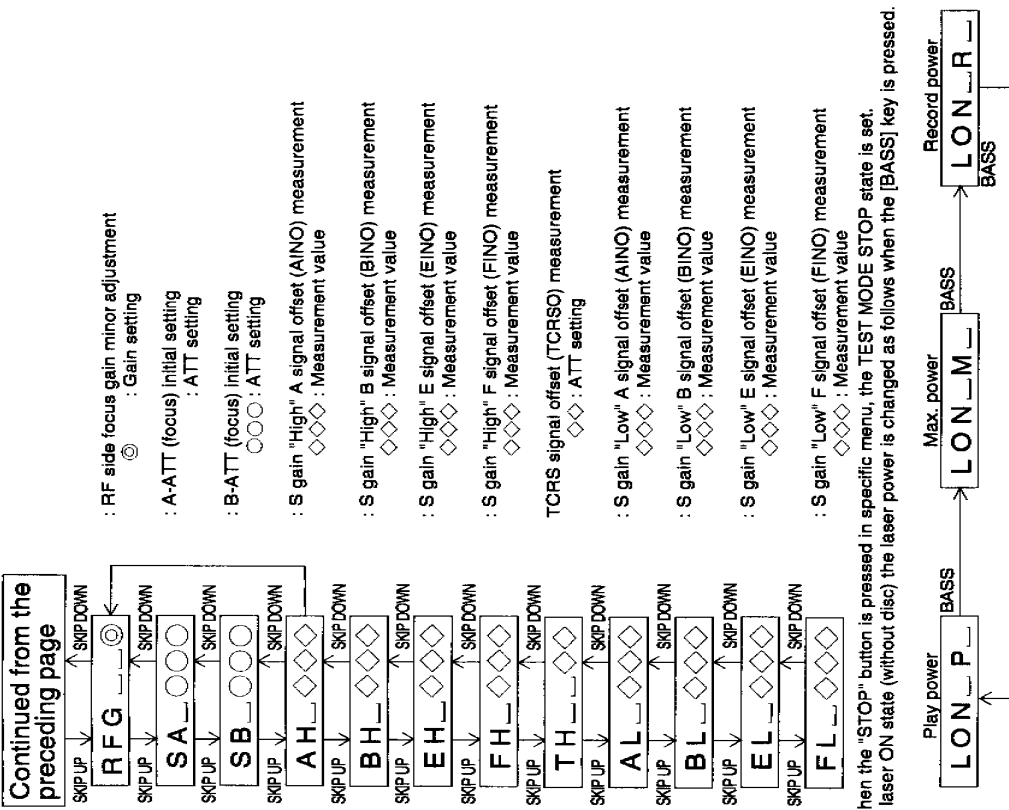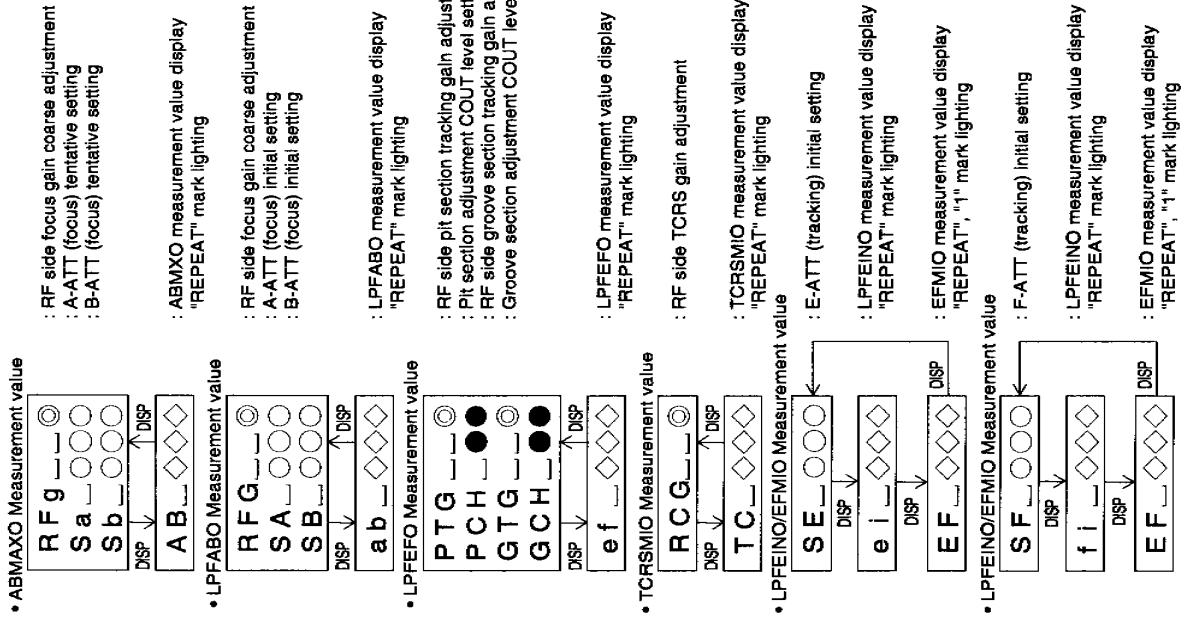

ATT Manual Adjustment

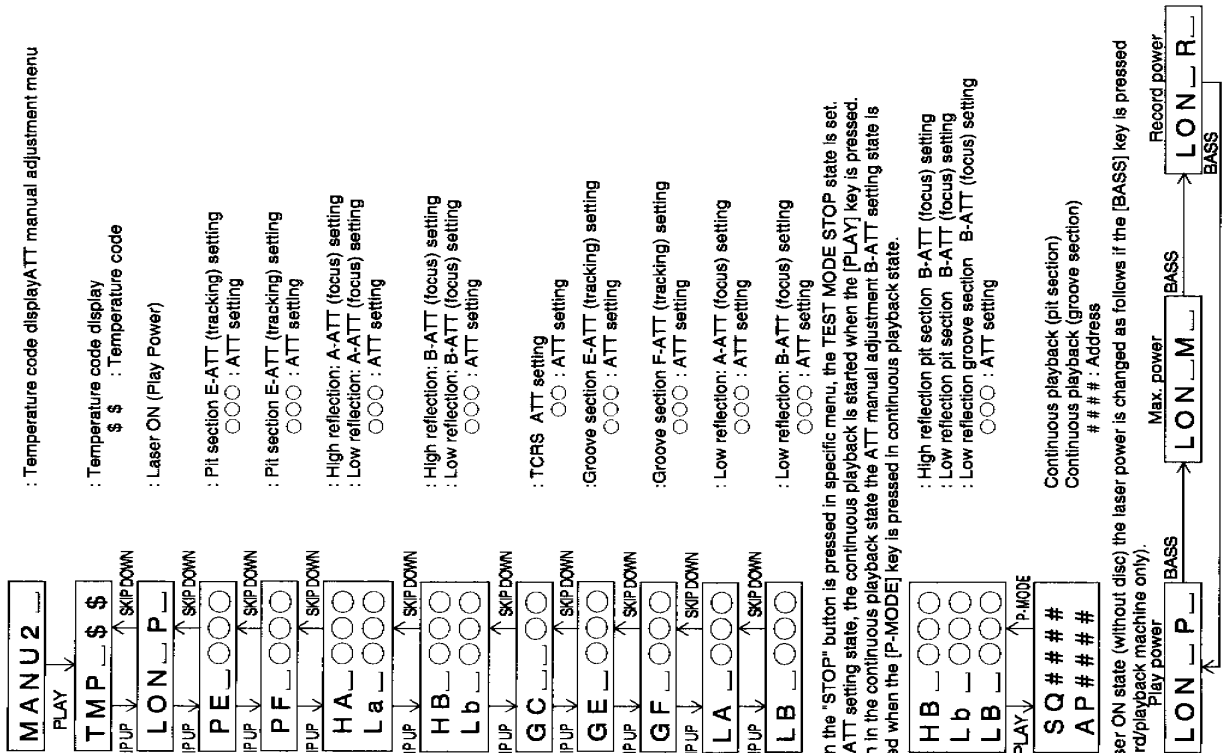

* In the specific setting display state the setting change digit changes when the [P-MODE] key is pressed.




* In the specific setting display state the selection digit value changes in the range of "0h to Fh" when [VOL UP/DOWN] key is operated.


* When the [DISP] key is pressed, the display changes as follows.

- LPFABO Measurement value
 - HA_ _ _
 - HB_ _ _
 - La_ _ _
 - Lb_ _ _
 - LA_ _ _
 - LB_ _ _
 - : High reflection pit section A-ATT (focus) setting
 - : High reflection pit section B-ATT (focus) setting
 - : Low reflection pit section A-ATT (focus) setting
 - : Low reflection pit section B-ATT (focus) setting
 - : Low reflection groove section A-ATT (focus) setting
 - : Low reflection groove section B-ATT (focus) setting
- LPFABO measurement value display "REPEAT" mark lighting
 - DISP a b _ _
- TCRSMIO Measurement value
 - GC_ _ _
 - DISP
 - TC_ _ _
 - : TCRS ATT setting
- TCRSMIO measurement value display "REPEAT" mark lighting
 - DISP
 - PE_ _ _
 - GE_ _ _
 - DISP
 - e i_ _ _
 - DISP
 - EF_ _ _
 - : LPFEINO/FEMIO Measurement value
 - : Pit section E-ATT (tracking) setting
 - : Groove section E-ATT (tracking) setting
- LPFEINO measurement value display "REPEAT" mark lighting
 - DISP
 - PF_ _ _
 - GF_ _ _
 - DISP
 - f i_ _ _
 - DISP
 - EF_ _ _
 - : LPFEINO measurement value
 - : Pit section F-ATT (tracking) setting
 - : Groove section F-ATT (tracking) setting
- LPFEINO measurement value display "REPEAT" mark lighting
 - DISP
 - EF_ _ _
 - : EFMIO measurement value display "REPEAT" mark lighting


Pre-Adjustment Value Check

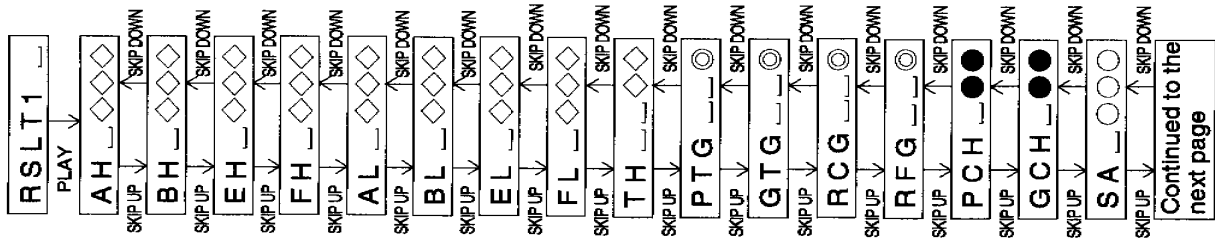

- : Pre-Adjustment Value Check menu
- : S gain "High" A signal offset measurement value (setting)
- : S gain "High" B signal offset measurement value (setting)
- : S gain "High" E signal offset measurement value (setting)
- : S gain "High" F signal offset measurement value (setting)
- : S gain "Low" A signal offset measurement value (setting)
- : S gain "Low" B signal offset measurement value (setting)
- : S gain "Low" E signal offset measurement value (setting)
- : S gain "Low" F signal offset measurement value (setting)
- : TCRS signal offset measurement value
- : RF side pit section tracking gain setting
- : RF side groove section tracking gain setting
- : RF side TCR gain setting
- : RF side focus gain setting
- : Pit section adjustment COUT level setting
- : Groove section adjustment COUT level setting
- : A-ATT (focus) initial setting

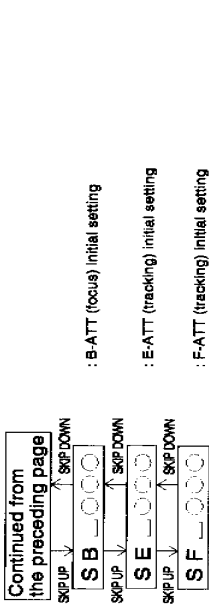


- : B-ATT (focus) initial setting
- : E-ATT (tracking) initial setting
- : F-ATT (tracking) initial setting

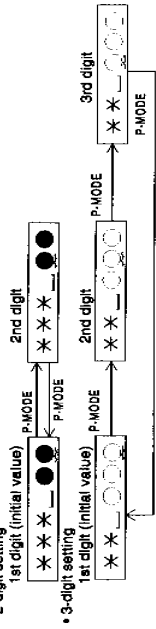


* When the "STOP" button is pressed in specific menu, the TEST MODE STOP state is set.
 * In the specific setting display state the setting change digit changes when the [P-MODE] key is pressed.
 (For RF side gain setting only one digit is provided. Therefore change does not occur.)
 * In the specific setting display state the value of selected digit changes in the range of "0h to Fh" when the [VOL UP/DOWN] key is pressed.
 However, the RF side gain setting changes in the range of "0h to 5h".

ATT Setting Check

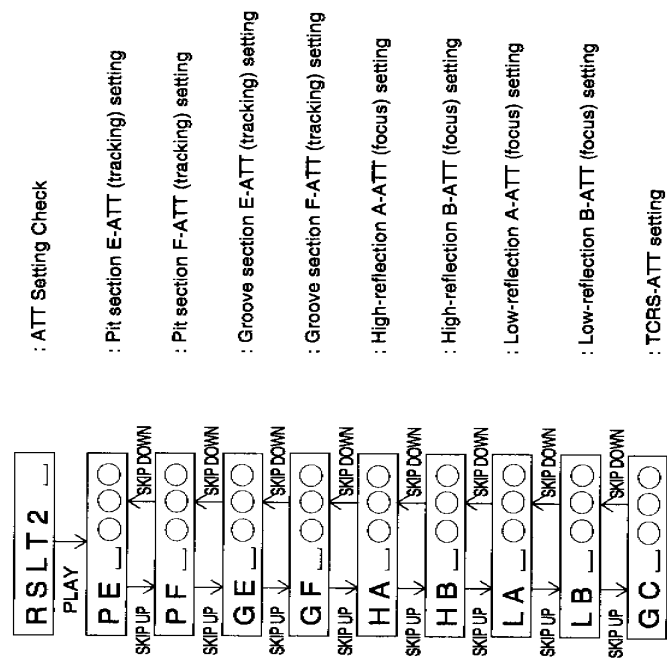



- When the "STOP" button is pressed in specific menu, the TEST MODE STOP state is set.
 - In the specific setting display state the setting change digit changes when the [P-MODE] key is pressed.
 - 3-digit setting
 - 1st digit (initial value)
 - 2nd digit
 - 3rd digit
- In the specific setting display state the value of selection digit changes in the range of "0h to Fh" when the [VOL UP/DOWN] key is pressed.

Continuous Playback

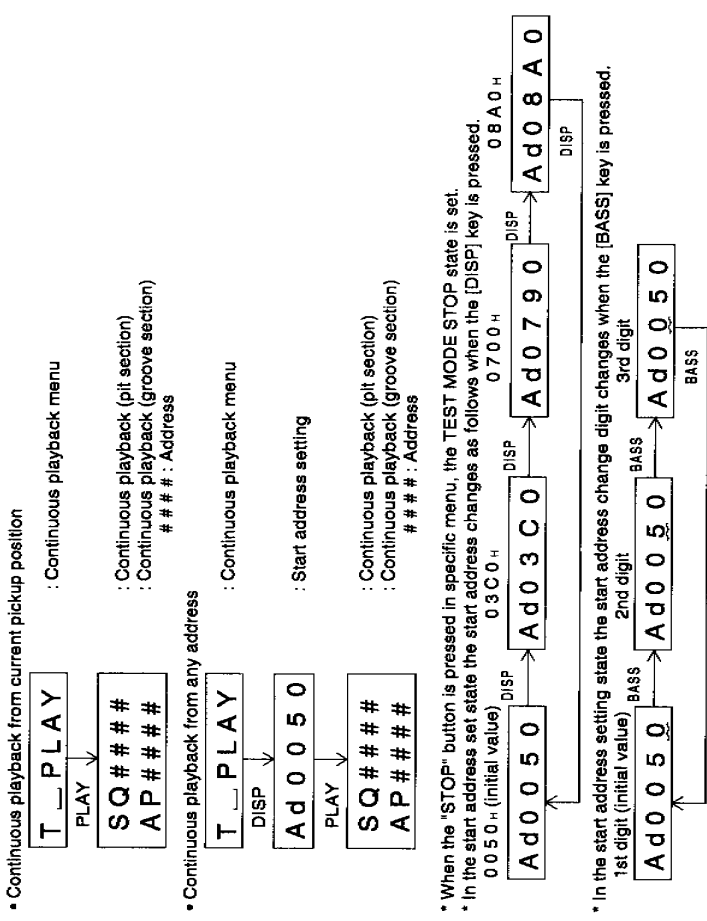


- Continuous playback from current pickup position
 - : Continuous playback menu
 - : Continuous playback (pit section)
 - : Continuous playback (groove section)
 - ### : Address
- Continuous playback from any address
 - : Continuous playback menu
 - : Start address setting
 - : Continuous playback (pit section)
 - : Continuous playback (groove section)
 - ### : Address
- When the "STOP" button is pressed in specific menu, the TEST MODE STOP state is set.
- In the start address set state the start address changes as follows when the [DISP] key is pressed.
 - 0050_H (initial value) 03C0_H 0700_H 08A0_H
- In the start address setting state the start address change digit changes when the [BASS] key is pressed.
 - 1st digit (initial value) 2nd digit 3rd digit
 - Ad050 Ad0050 Ad0050
 - BASS BASS
- In the start address set state the value of selection digit changes in the range of "0h to Fh" when the [SKIP UP/DOWN] key is pressed.
- In the continuous playback state the state is changed to ATT manual adjustment B-ATT setting state when the [P-MODE] key is pressed.
 - SQ ### : Continuous playback (pit section)
 - AP ### : Continuous playback (groove section)
 - ### : Address
 - P-MODE
 - HB : High reflection pit section B-ATT (focus) setting
 - LB : High reflection groove section B-ATT (focus) setting
 - OOO : ATT setting
- In the continuous playback state the number of jump lines changes as follows shown
 - the [BASS] key is pressed.
 - 1 (initial value) 10 400
 - 1TR 10TR 400TR
 - BASS BASS BASS
- In the continuous playback state, jump occurs in the specified number external periphery direction. If the key is held down, jump occurs continuously with 100 ms period.

Continuous Record

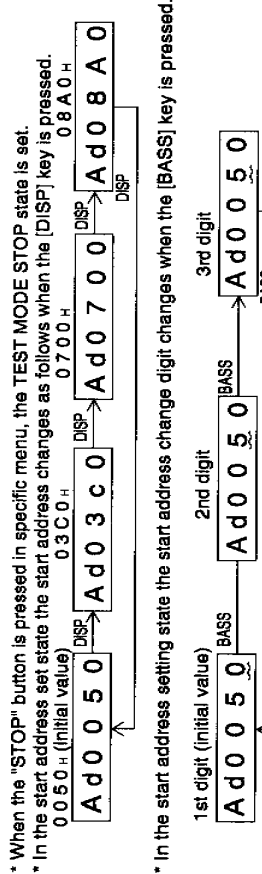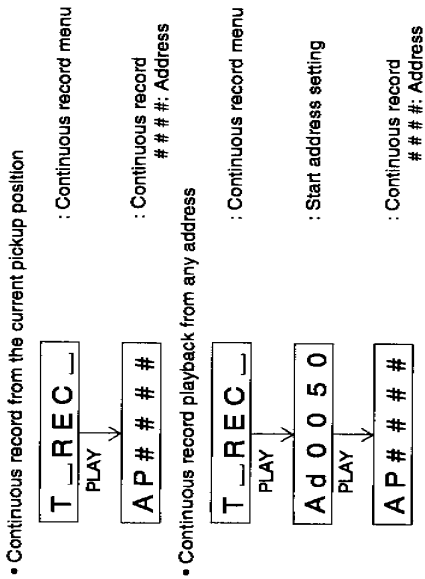


- * In the start address set state the value of selection digit changes in the range of 0h to Fh when the [SKIP UP/DOWN] key is pressed.
- * In the continuous record state and start address set state the record laser power changes in the range of "0h to Fh" when the [VOL UP/DOWN] key is pressed.

Inner Switch Position Measurement

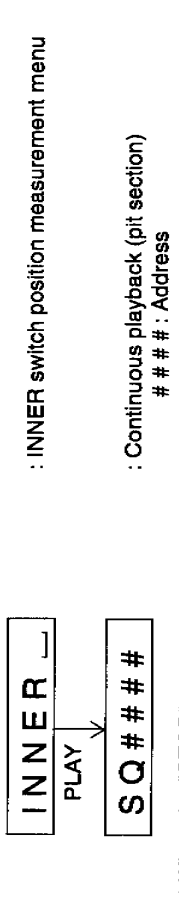


* When the "STOP" button is pressed in specific menu, the TEST MODE STOP state is set.

Test Mode Normal Playback

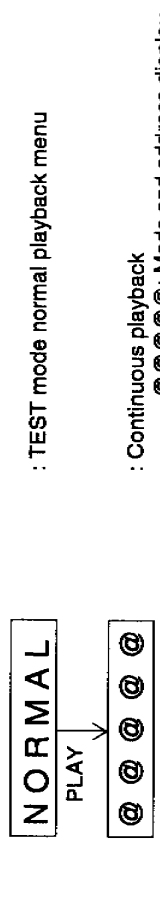


* When the "STOP" button is pressed in specific menu, the TEST MODE STOP state is set.

Digital Input Signal Monitor

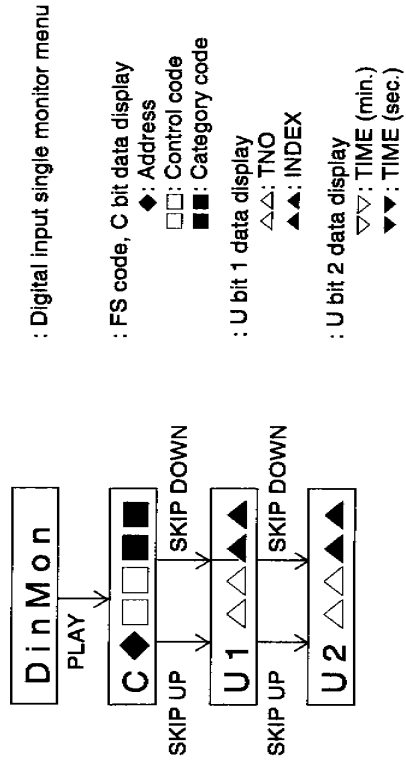


* When the "STOP" button is pressed in specific menu, the TEST MODE STOP state is set.

Error History Display

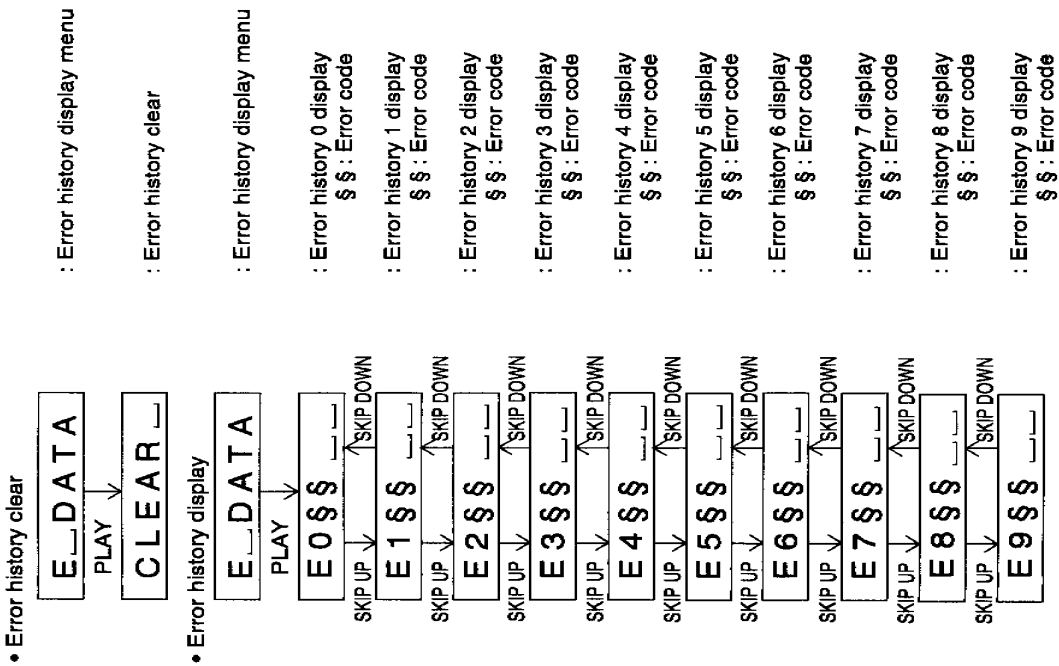


* When the "STOP" button is pressed in specific menu, the TEST MODE STOP state is set.

EEPROM Setting

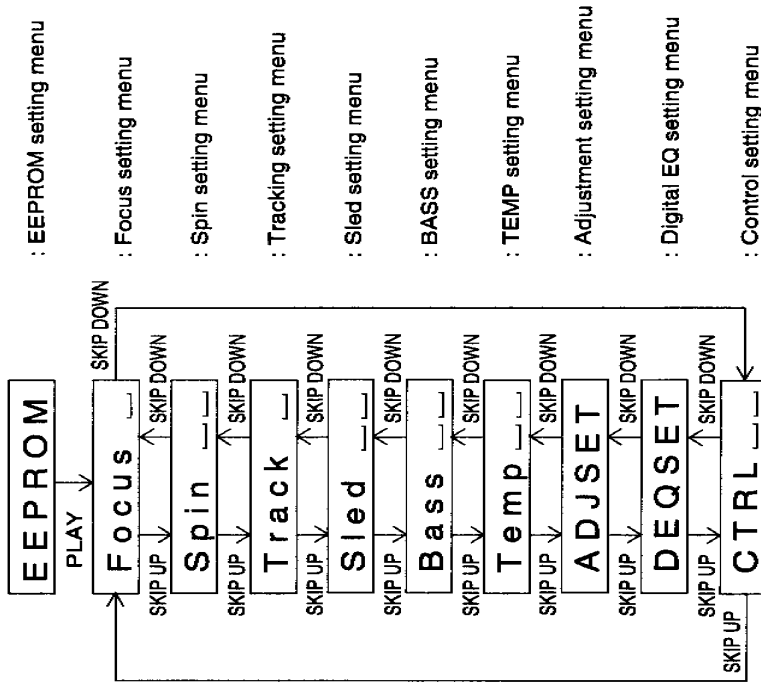

* When the "STOP" button is pressed in specific menu, the TEST MODE STOP state is set.


Focus Setting

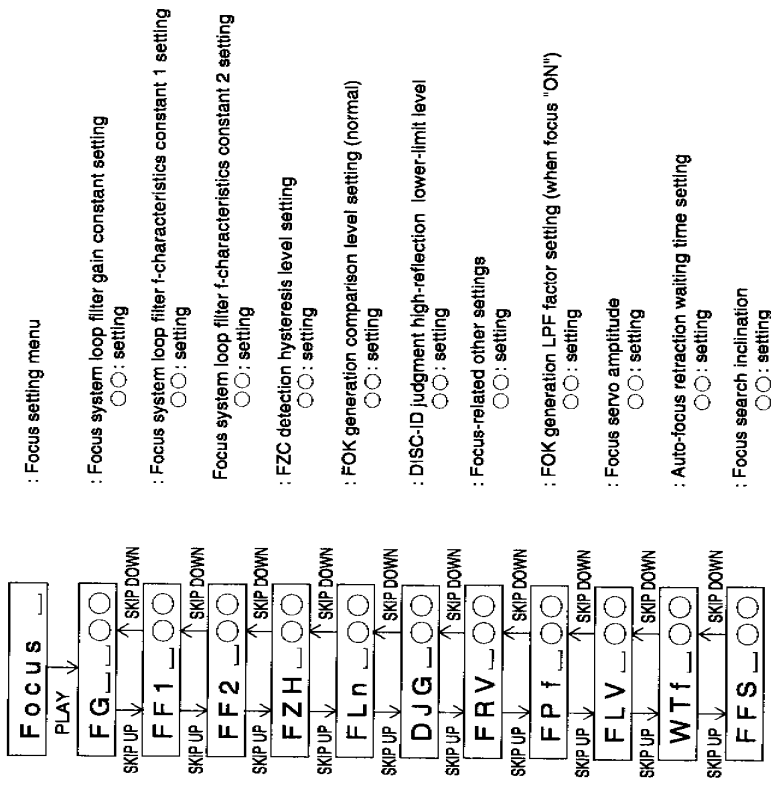

- : Focus setting menu
- : Focus system loop filter filter gain constant setting
○○: setting
- : Focus system loop filter f-characteristics constant 1 setting
○○: setting
- : Focus system loop filter f-characteristics constant 2 setting
○○: setting
- : FZC detection hysteresis level setting
○○: setting
- : FOK generation comparison level setting (normal)
○○: setting
- : DISC-ID judgment high-reflection lower-limit level
○○: setting
- : Focus-related other settings
○○: setting
- : FOK generation LPF factor setting (when focus "ON")
○○: setting
- : Focus servo amplitude
○○: setting
- : Auto-focus retraction waiting time setting
○○: setting
- : Focus search inclination
○○: setting

* When the "STOP" button is pressed in specific menu, the TEST MODE STOP state is set.
 * In the specific state pressing the [DISP] key causes change to "focus setting menu".
 * In specific state the setting changed in the range of "00h to FFh" when the [VOL UP/DOWN] key is pressed.
 (The upper limit varies depending on the items)

Spin Setting

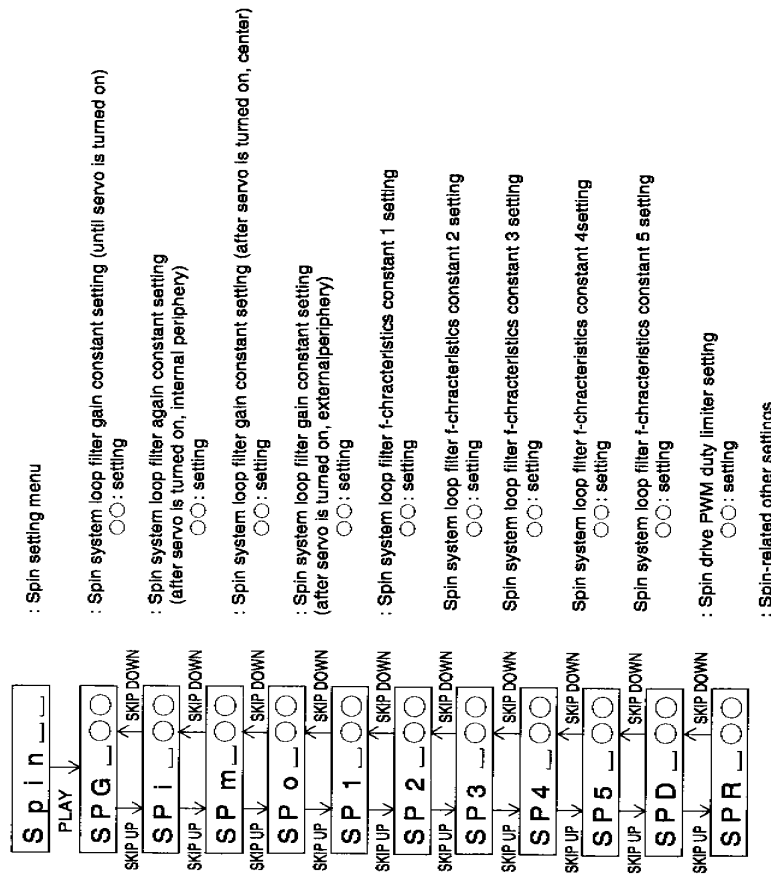

- : Spin setting menu
- : Spin system loop filter filter gain constant setting (until servo is turned on)
○○: setting
- : Spin system loop filter again constant setting (after servo is turned on, internal periphery)
○○: setting
- : Spin system loop filter gain constant setting (after servo is turned on, center)
○○: setting
- : Spin system loop filter filter gain constant setting (after servo is turned on, external/periphery)
○○: setting
- : Spin system loop filter f-characteristics constant 1 setting
○○: setting
- : Spin system loop filter f-characteristics constant 2 setting
○○: setting
- : Spin system loop filter f-characteristics constant 3 setting
○○: setting
- : Spin system loop filter f-characteristics constant 4 setting
○○: setting
- : Spin system loop filter f-characteristics constant 5 setting
○○: setting
- : Spin drive PWM duty limiter setting
○○: setting
- : Spin-related other settings
○○: setting

* When the "STOP" button is pressed in specific menu, the TEST MODE STOP state is set.
 * In the specific state pressing the [DISP] key causes change to "focus setting menu".
 * In specific state the setting changed in the range of "00h to FFh" when the [VOL UP/DOWN] key is pressed.
 (The upper limit varies depending on the items)

Tracking setting

T r a c k PLAY →	: Tracking setting menu
T G _ _ _ SKIP UP ↓ ↑ SKIP DOWN	: Tracking system loop filter gain constant setting ○○ : setting
T F 1 _ _ SKIP UP ↓ ↑ SKIP DOWN	: Tracking system loop filter f-characteristics constant 1 setting (normal) ○○ : setting
T F 2 _ _ SKIP UP ↓ ↑ SKIP DOWN	: Tracking system loop filter f-characteristics constant 2 setting (normal) ○○ : setting
T F S _ _ SKIP UP ↓ ↑ SKIP DOWN	: Tracking system filter selection switch setting ○○ : setting
T B o _ _ SKIP UP ↓ ↑ SKIP DOWN	: Tracking brake level setting (1 line jump) ○○ : setting
T B t _ _ SKIP UP ↓ ↑ SKIP DOWN	: Tracking brake level setting (10 line jump) ○○ : setting
T K o _ _ SKIP UP ↓ ↑ SKIP DOWN	: Tracking kick level setting (1 line jump) ○○ : setting
T K t _ _ SKIP UP ↓ ↑ SKIP DOWN	: Tracking kick level setting (10 line jump) ○○ : setting
T D o _ _ SKIP UP ↓ ↑ SKIP DOWN	: Tracking drive pulse width time setting (1 line jump) ○○ : setting
T D t _ _ SKIP UP ↓ ↑ SKIP DOWN	: Tracking drive pulse width time setting (10 line jump) ○○ : setting
S C o _ _ SKIP UP ↓ ↑ SKIP DOWN	: Tracking slip stop time setting (1 line jump) ○○ : setting
S C t _ _ SKIP UP ↓ ↑ SKIP DOWN	: Tracking slip stop time setting (10 line jump) ○○ : setting
S C m _ _ SKIP UP ↓ ↑ SKIP DOWN	: Tracking slip stop time setting (move) ○○ : setting
D B O _ _ SKIP UP ↓ ↑ SKIP DOWN	: PWM output offset setting ○○ : setting
C L P _ _ SKIP UP ↓ ↑ SKIP DOWN	: COU generation comparison level setting (PLAY) ○○ : setting
C L r _ _ SKIP UP ↓ ↑ SKIP DOWN	: COU generation comparison level setting (REC) ○○ : setting
W T m _ _ SKIP UP ↓ ↑ SKIP DOWN	: Auto-move waiting time setting ○○ : setting

* When the "STOP" button is pressed in specific menu, the TEST MODE STOP state is set.
 * In the specific state pressing the [DISP] key causes change to "focus setting menu".
 * In the specific state the setting changes in the range of "00h to FFh" when the [VOL UP/DOWN] key is pressed.
 (The upper limit varies depending on the items)

Slide Setting

S l i d e _ _	: Slide setting menu
S L G _ _ SKIP UP ↓ ↑ SKIP DOWN	: Slide system loop filter gain constant setting ○○ : setting
S L 2 _ _ SKIP UP ↓ ↑ SKIP DOWN	: Slide system filter, specific constant 2 setting ○○ : setting
S L M _ _ SKIP UP ↓ ↑ SKIP DOWN	: Slide drive PWM duty limiter setting ○○ : setting
S L V _ _ SKIP UP ↓ ↑ SKIP DOWN	: Slide serve output dead zone level setting ○○ : setting
S K k _ _ SKIP UP ↓ ↑ SKIP DOWN	: Slide kick pulse level setting (forced shift) ○○ : setting
S K t _ _ SKIP UP ↓ ↑ SKIP DOWN	: Slide kick pulse level setting (for 10 lines jump auxiliary) ○○ : setting
S K m _ _ SKIP UP ↓ ↑ SKIP DOWN	: Slide kick pulse level setting (move) ○○ : setting


* When the "STOP" button is pressed in specific menu, the TEST MODE STOP state is set.
 * In the specific state pressing the [DISP] key causes change to "focus setting menu".
 * In the specific state the setting changes in the range of "00h to FFh" when the [VOL UP/DOWN] key is pressed.
 (The upper limit varies depending on the items)

BASS setting


B a s s _ _	: BASS setting menu
B S 1 _ _ SKIP UP ↓ ↑ SKIP DOWN	: BASS1 characteristics setting ○○ : setting
B S 2 _ _ SKIP UP ↓ ↑ SKIP DOWN	: BASS2 characteristics setting ○○ : setting
B S 3 _ _ SKIP UP ↓ ↑ SKIP DOWN	: BASS3 characteristics setting ○○ : setting

* When the "STOP" button is pressed in specific menu, the TEST MODE STOP state is set.
 * In the specific state pressing the [DISP] key causes change to "focus setting menu".
 * In the specific state the setting changes in the range of "00h to FFh" when the [VOL UP/DOWN] key is pressed.
 (The upper limit varies depending on the items)

TEMP Setting

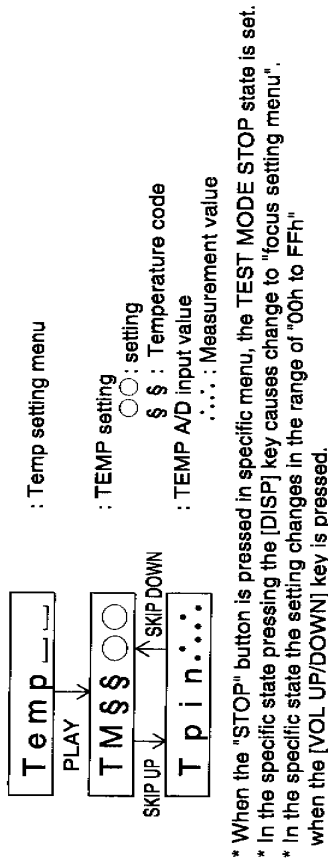


Adjustment Setting

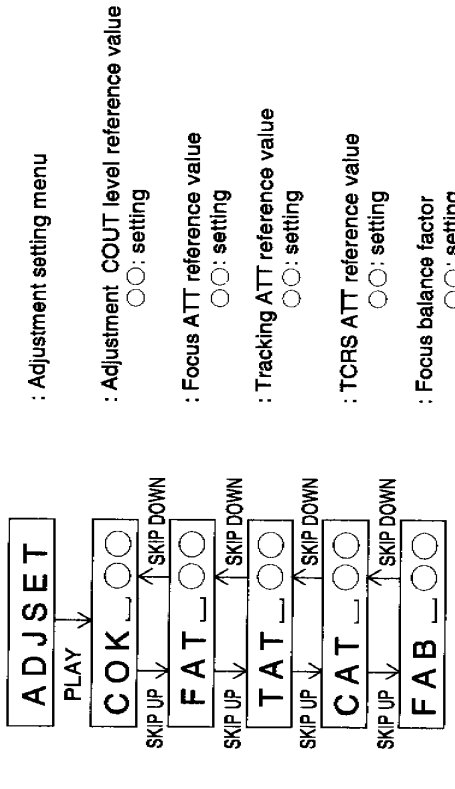

* When the "STOP" button is pressed in specific menu, the TEST MODE STOP state is set.
 * In specific state pressing the [DISP] key causes change to "focus setting menu".
 * In the specific setting display state the setting change digit changes when the [P-MODE] key is pressed.
 when the [P-MODE] key is pressed.
 1st digit (initial value) P-MODE P-MODE 2nd digit

* In the specific state the setting changes in the range of "0h to Fh" when the [VOL UP/DOWN] key is pressed.



Digital EQ Setting

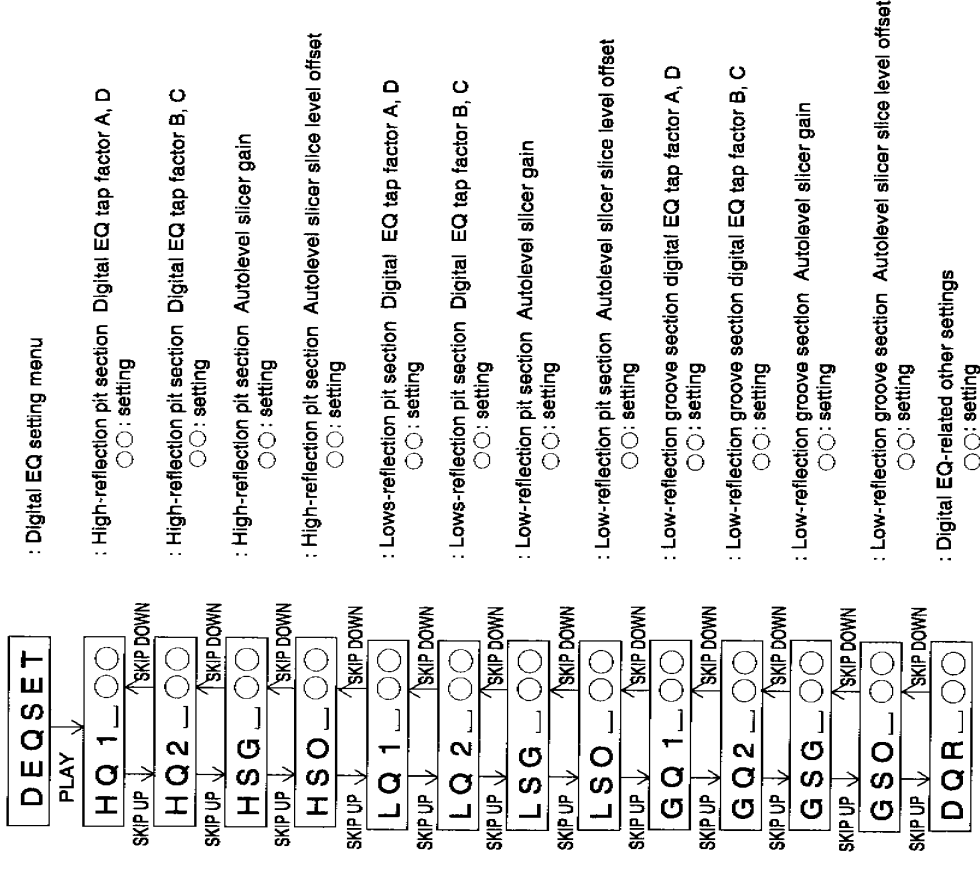


* When the "STOP" button is pressed in specific menu, the TEST MODE STOP state is set.
 * In specific state pressing the [DISP] key causes change to "focus setting menu".
 * In the specific setting display state the setting change digit changes when the [P-MODE] key is pressed.
 when the [P-MODE] key is pressed.
 1st digit (initial value) P-MODE P-MODE 2nd digit

* In the specific state the setting changes in the range of "0h to Fh" when the [VOL UP/DOWN] key is pressed.

Control Setting (record/playback machine)

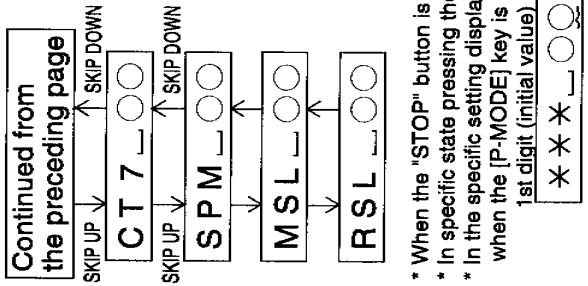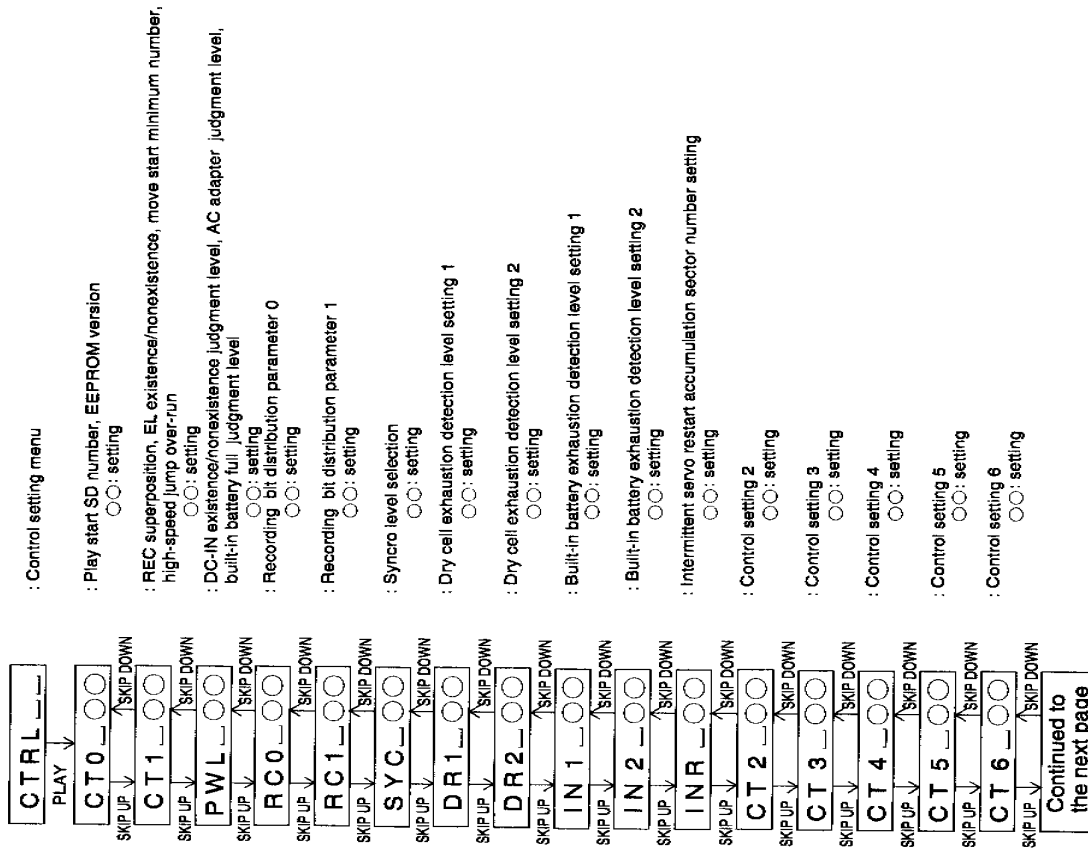

* When the "STOP" button is pressed in specific menu, the TEST MODE STOP state is set.
 * In specific state pressing the [DISP] key causes change to "focus setting menu".
 * In the specific setting display state the setting change digit changes when the [P-MODE] key is pressed.



* In the specific state the setting changes in the range of "0h to Fh" when the [VOL UP/DOWN] key is pressed.

NOTES ON SCHEMATIC DIAGRAM

- Resistor:
To differentiate the units of resistors, such symbol as K and M are used: the symbol K means 1000 ohm and the symbol M means 1000 kohm and the resistor without any symbol is ohm-type resistor. Besides, the one with "Fusible" is a fuse type.
- Capacitor:
To indicate the unit of capacitor, a symbol P is used: this symbol P means micro-micro-farad and the unit of the capacitor without such a symbol is microfarad. As to electrolytic capacitor, the expression "capacitance/withstand voltage" is used.

(CH), (TH), (RH), (UJ): Temperature compensation
(ML): Mylar type

- The indicated voltage in each section is the one measured by Digital Multimeter between such a section and the chassis with no signal given.
- Parts marked with "⚠" (□ = = = □) are important for maintaining the safety of the set. Be sure to replace these parts with specified ones for maintaining the safety and performance of the set.

REF. NO	DESCRIPTION	POSITION
SW401	EJECT	OFF—ON
SW402	HOLD	OFF—ON
SW901	DISC IN	OFF—ON
SW902	DISC PROTECT	OFF—ON

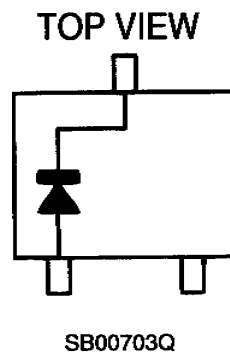
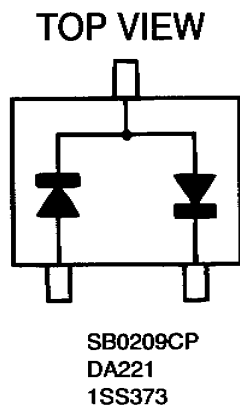
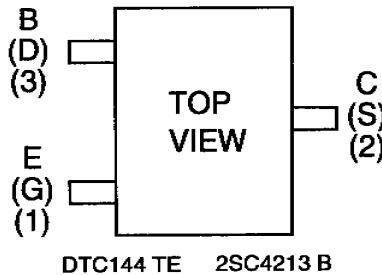
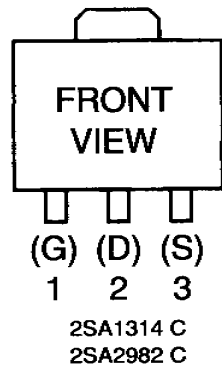


Figure 28 TYPES OF TRANSISTORS AND DIODES

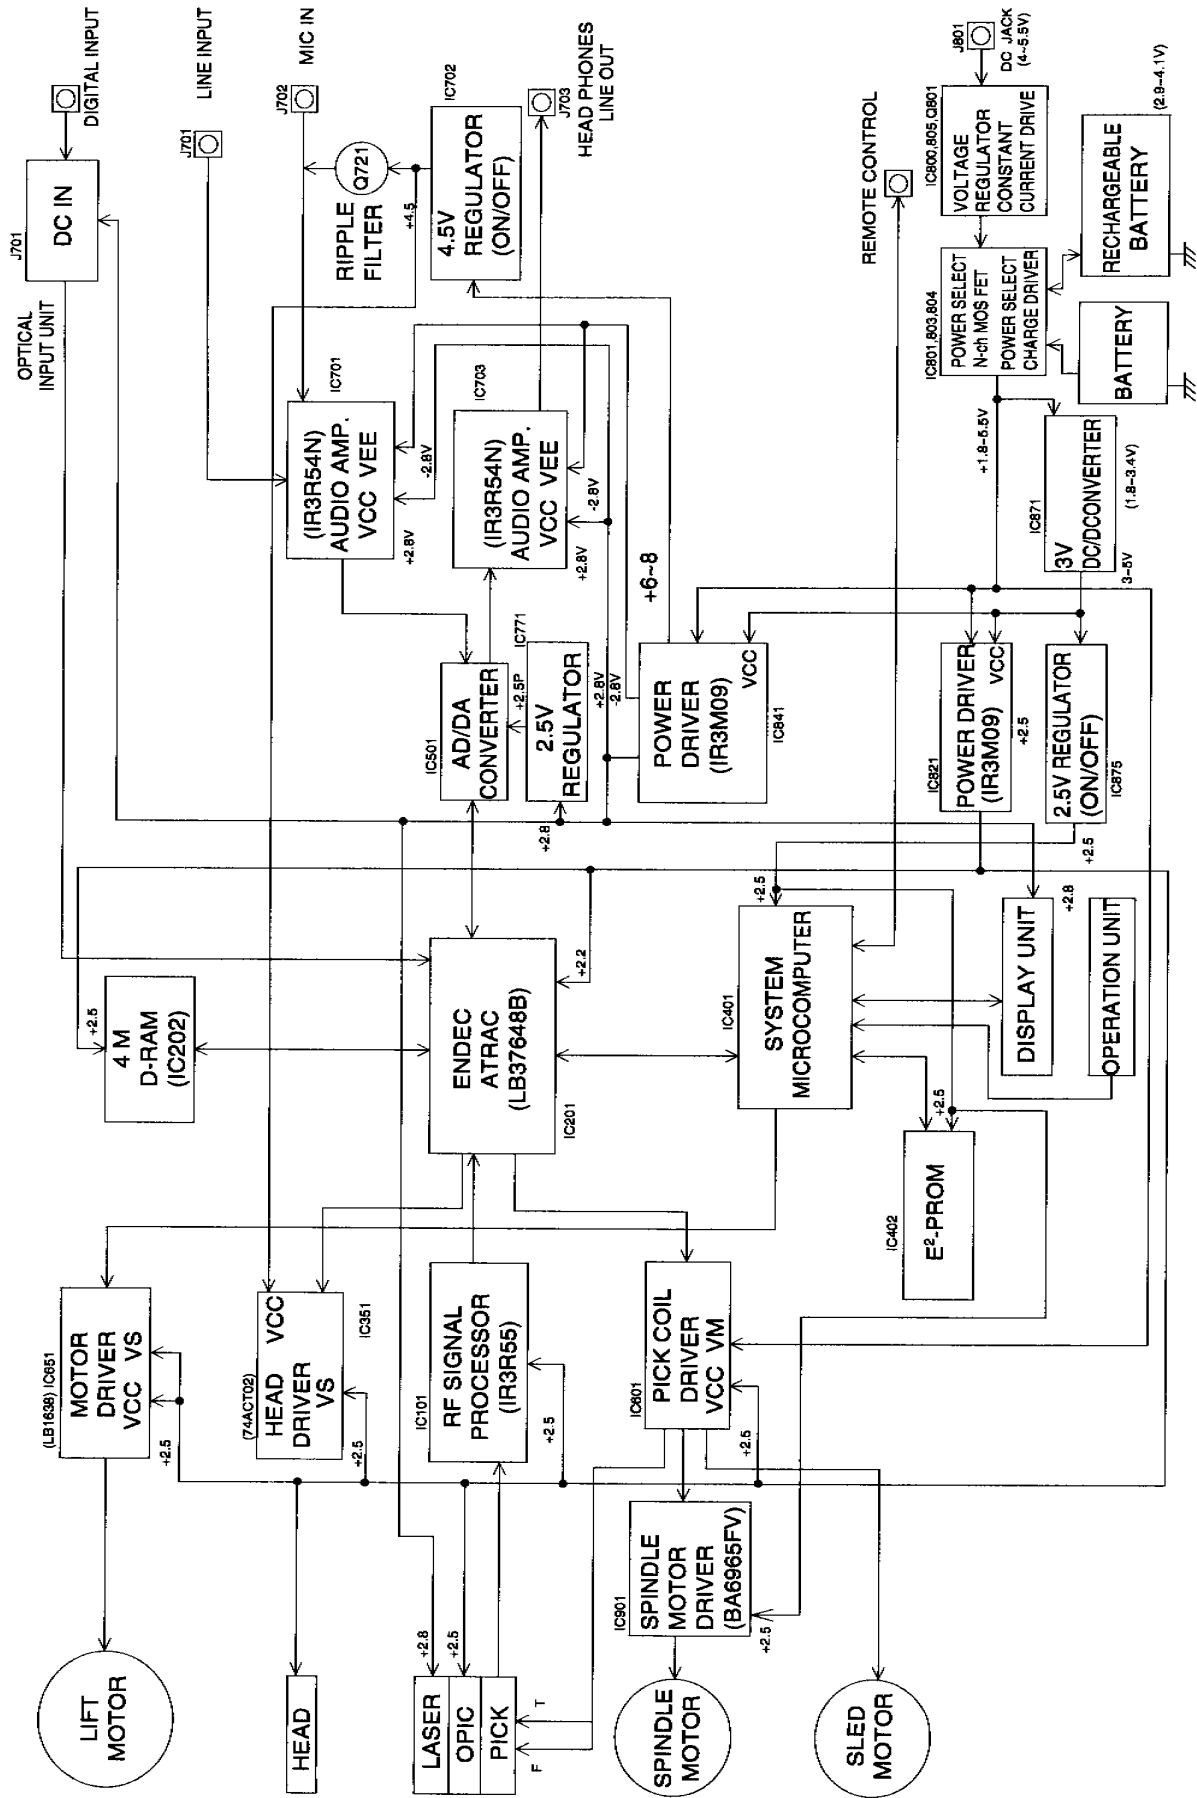


Figure 29 BLOCK DIAGRAM

MD-MS701H/MS702H


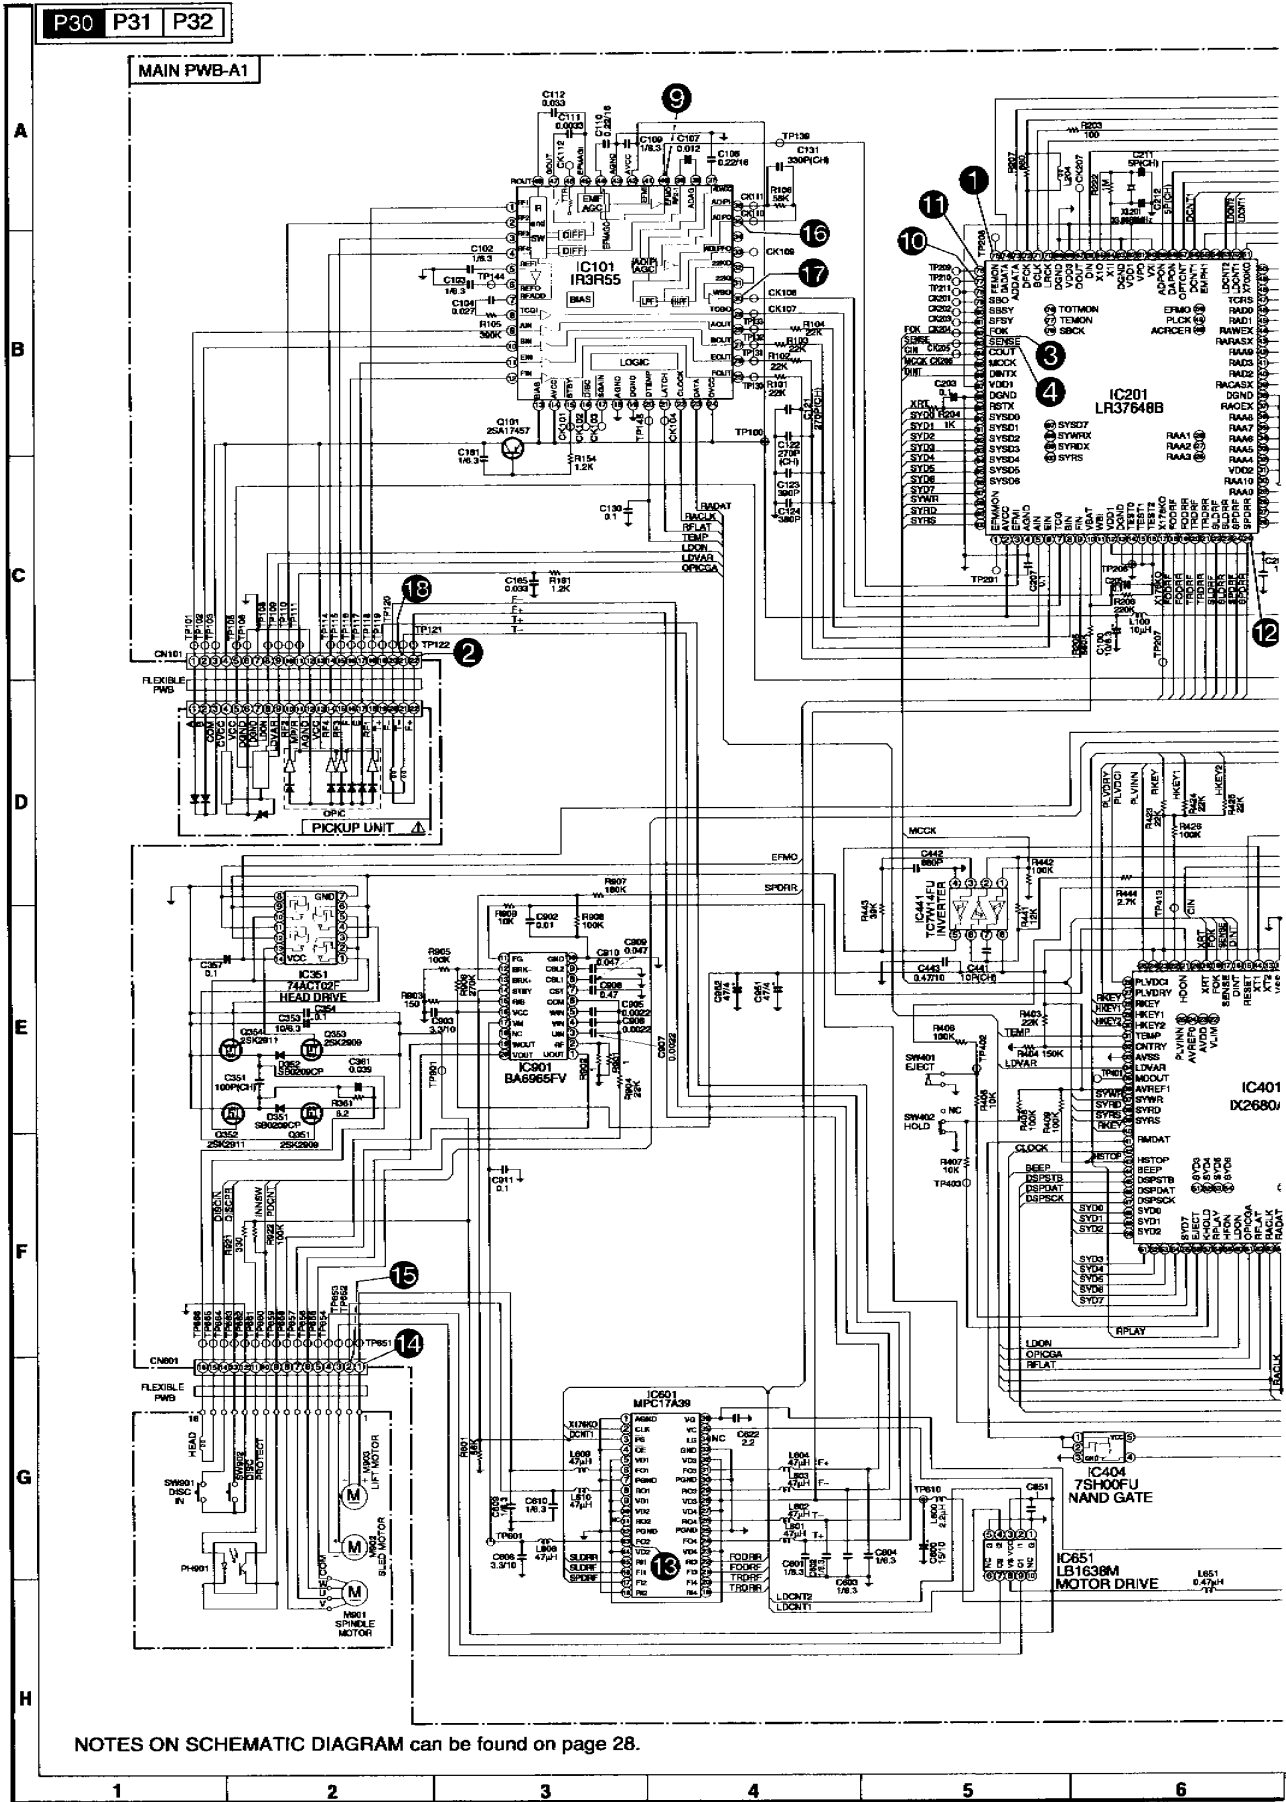


Figure 30 SCHEMATIC DIAGRAM (1/4)

P30 P31 P32

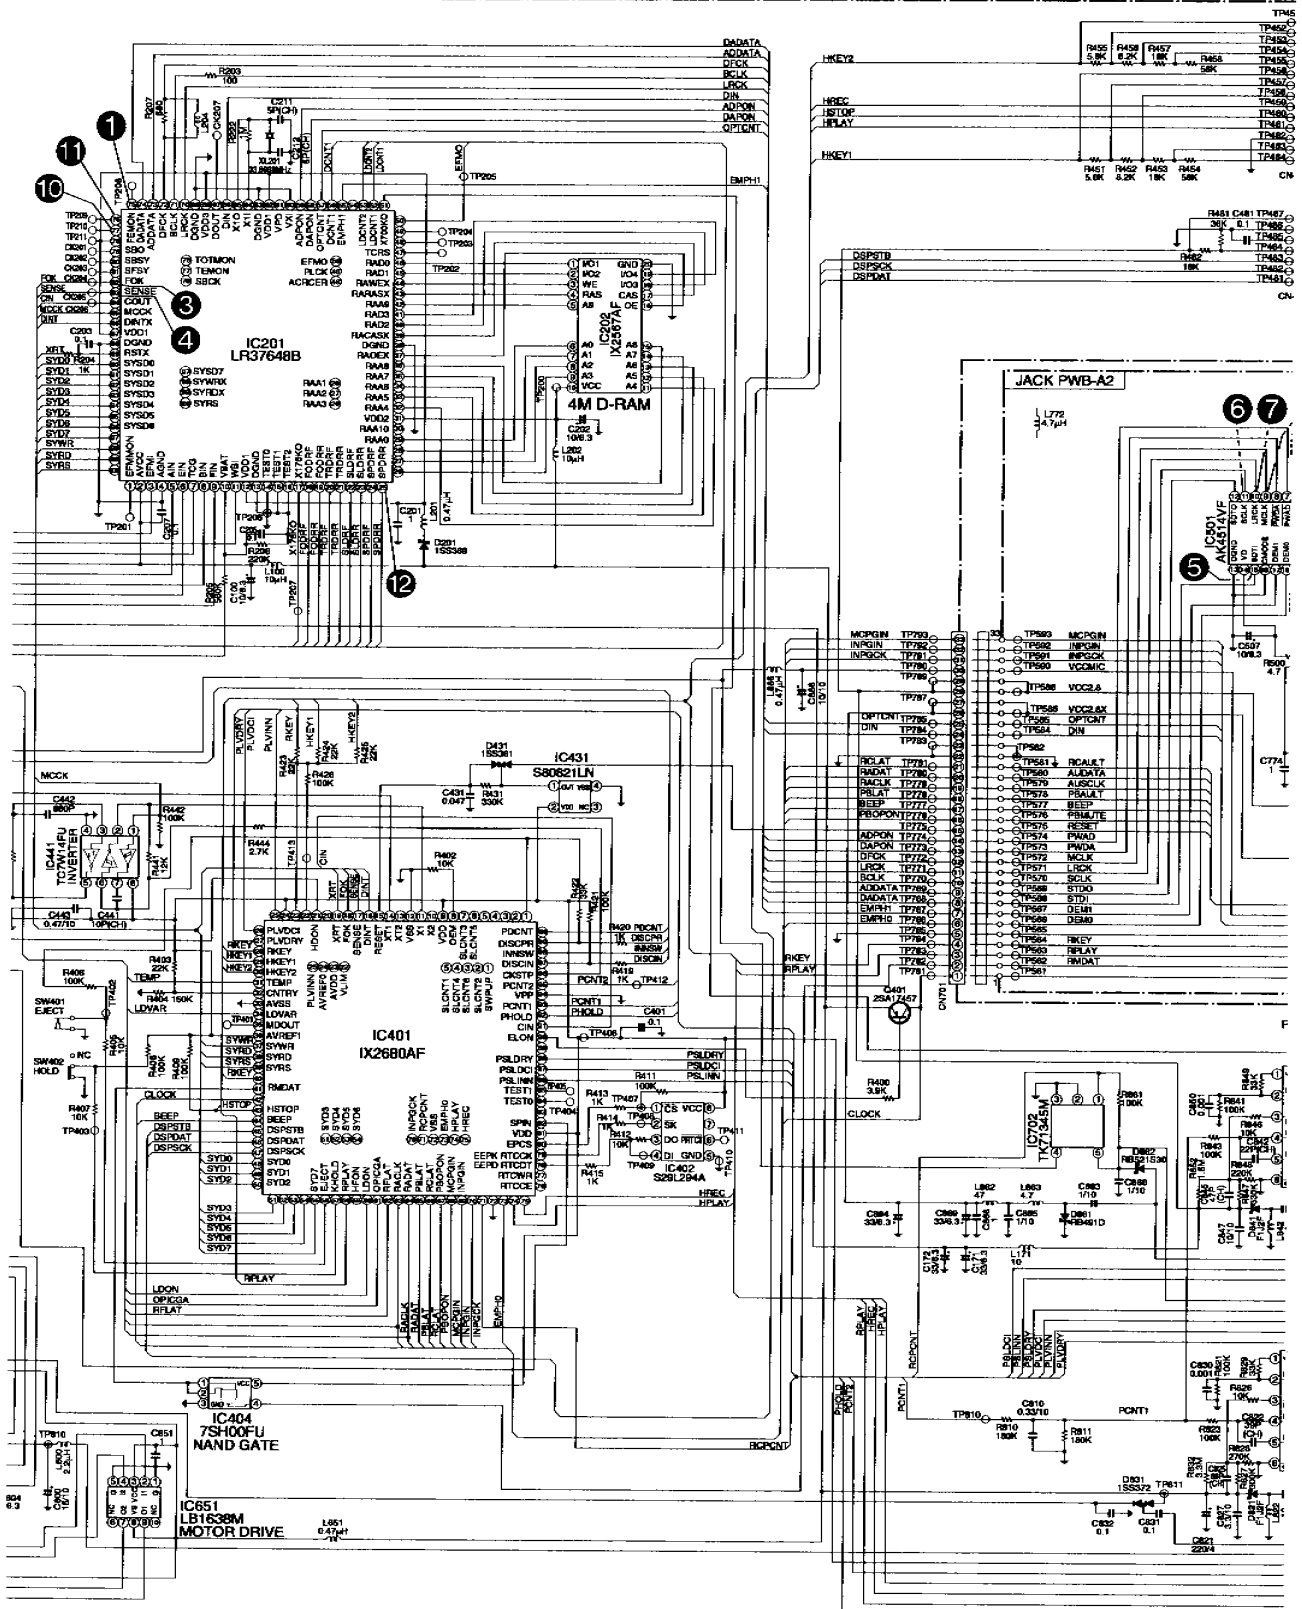

The numbers 1 to 12 are waveform numbers shown in page 39.

7	8	9	10	11	12
---	---	---	----	----	----

Figure 31 SCHEMATIC DIAGRAM (2/4)

MD-MS701H/MS702H

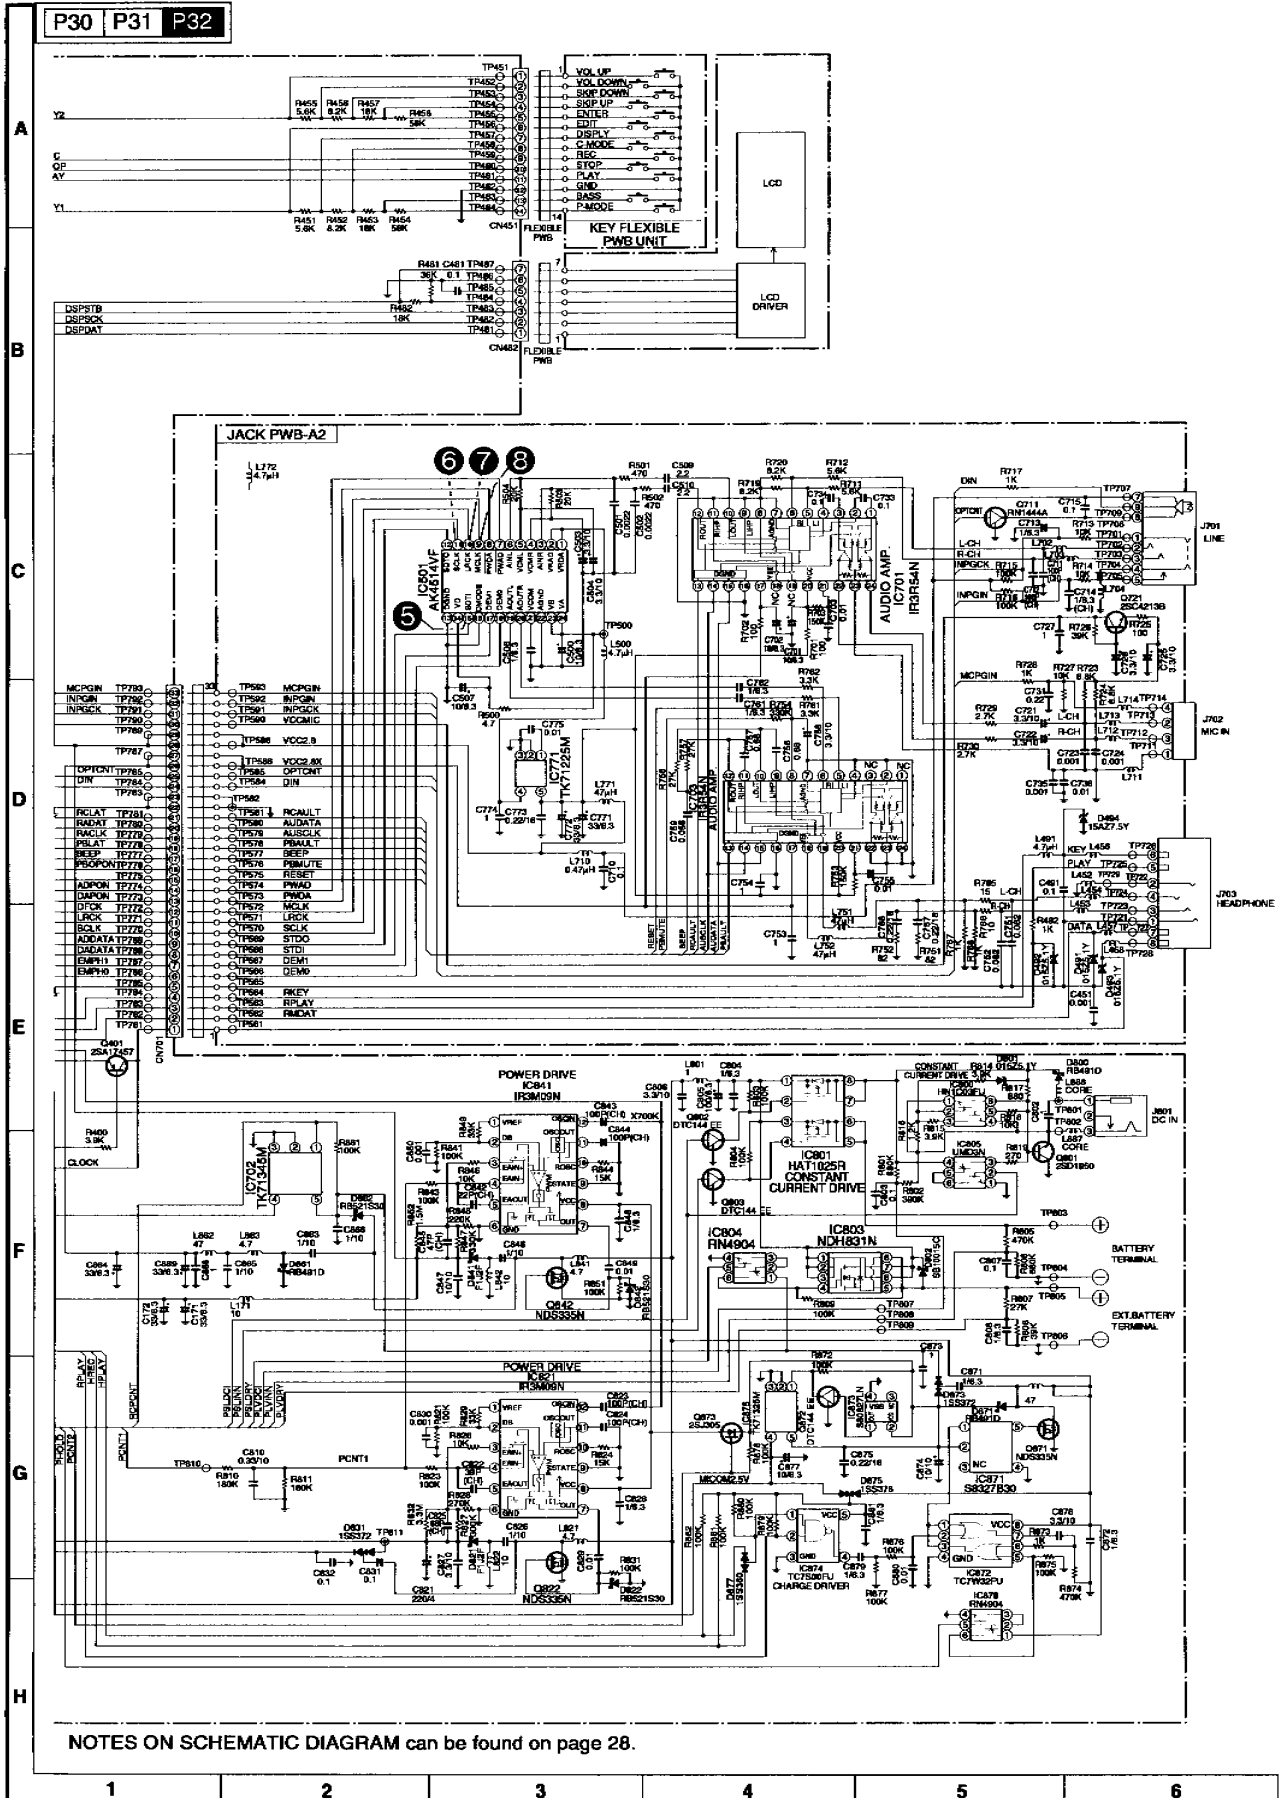


Figure 32 SCHEMATIC DIAGRAM (3/4)

MD-MS701H/MS702H

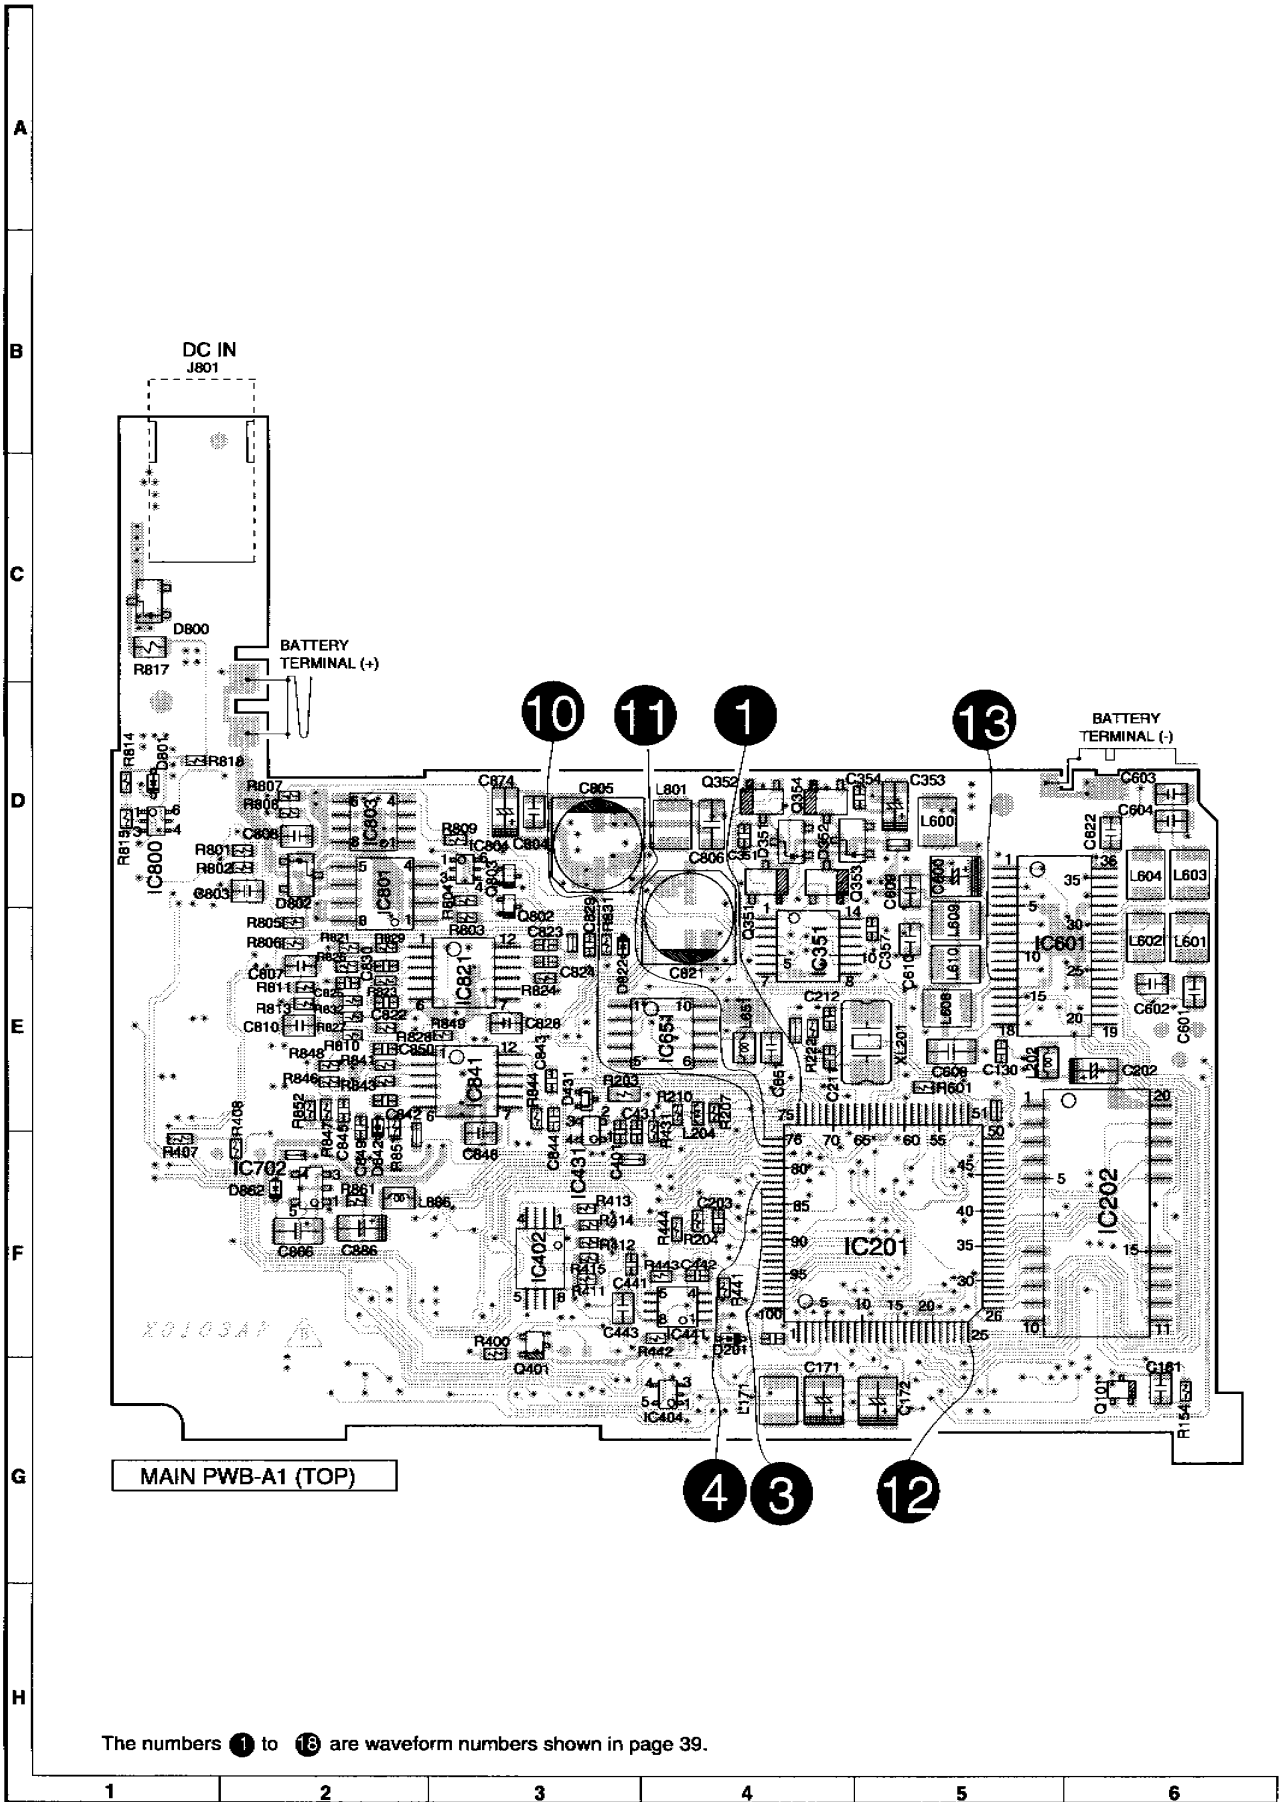


Figure 34 WIRING OF P.W.BOARD (1/5)

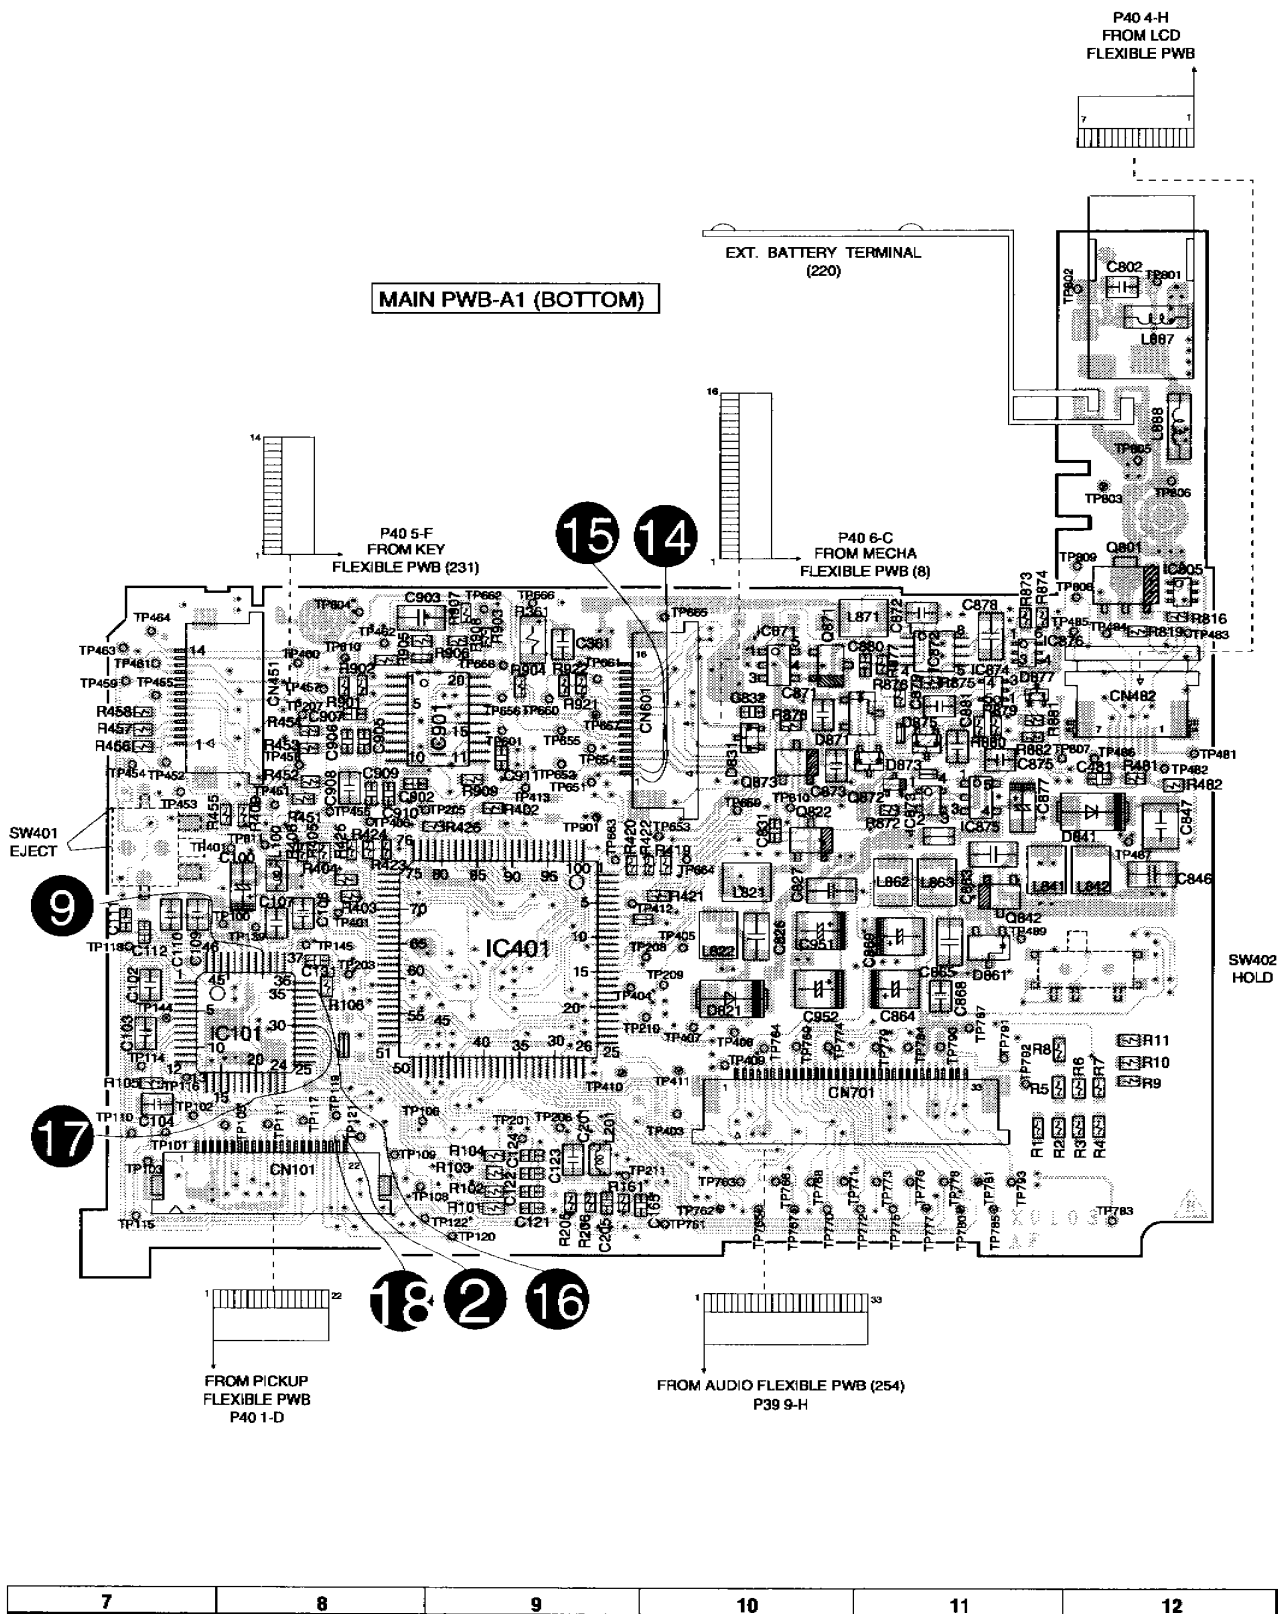


Figure 35 WIRING OF P.W.BOARD (2/5)



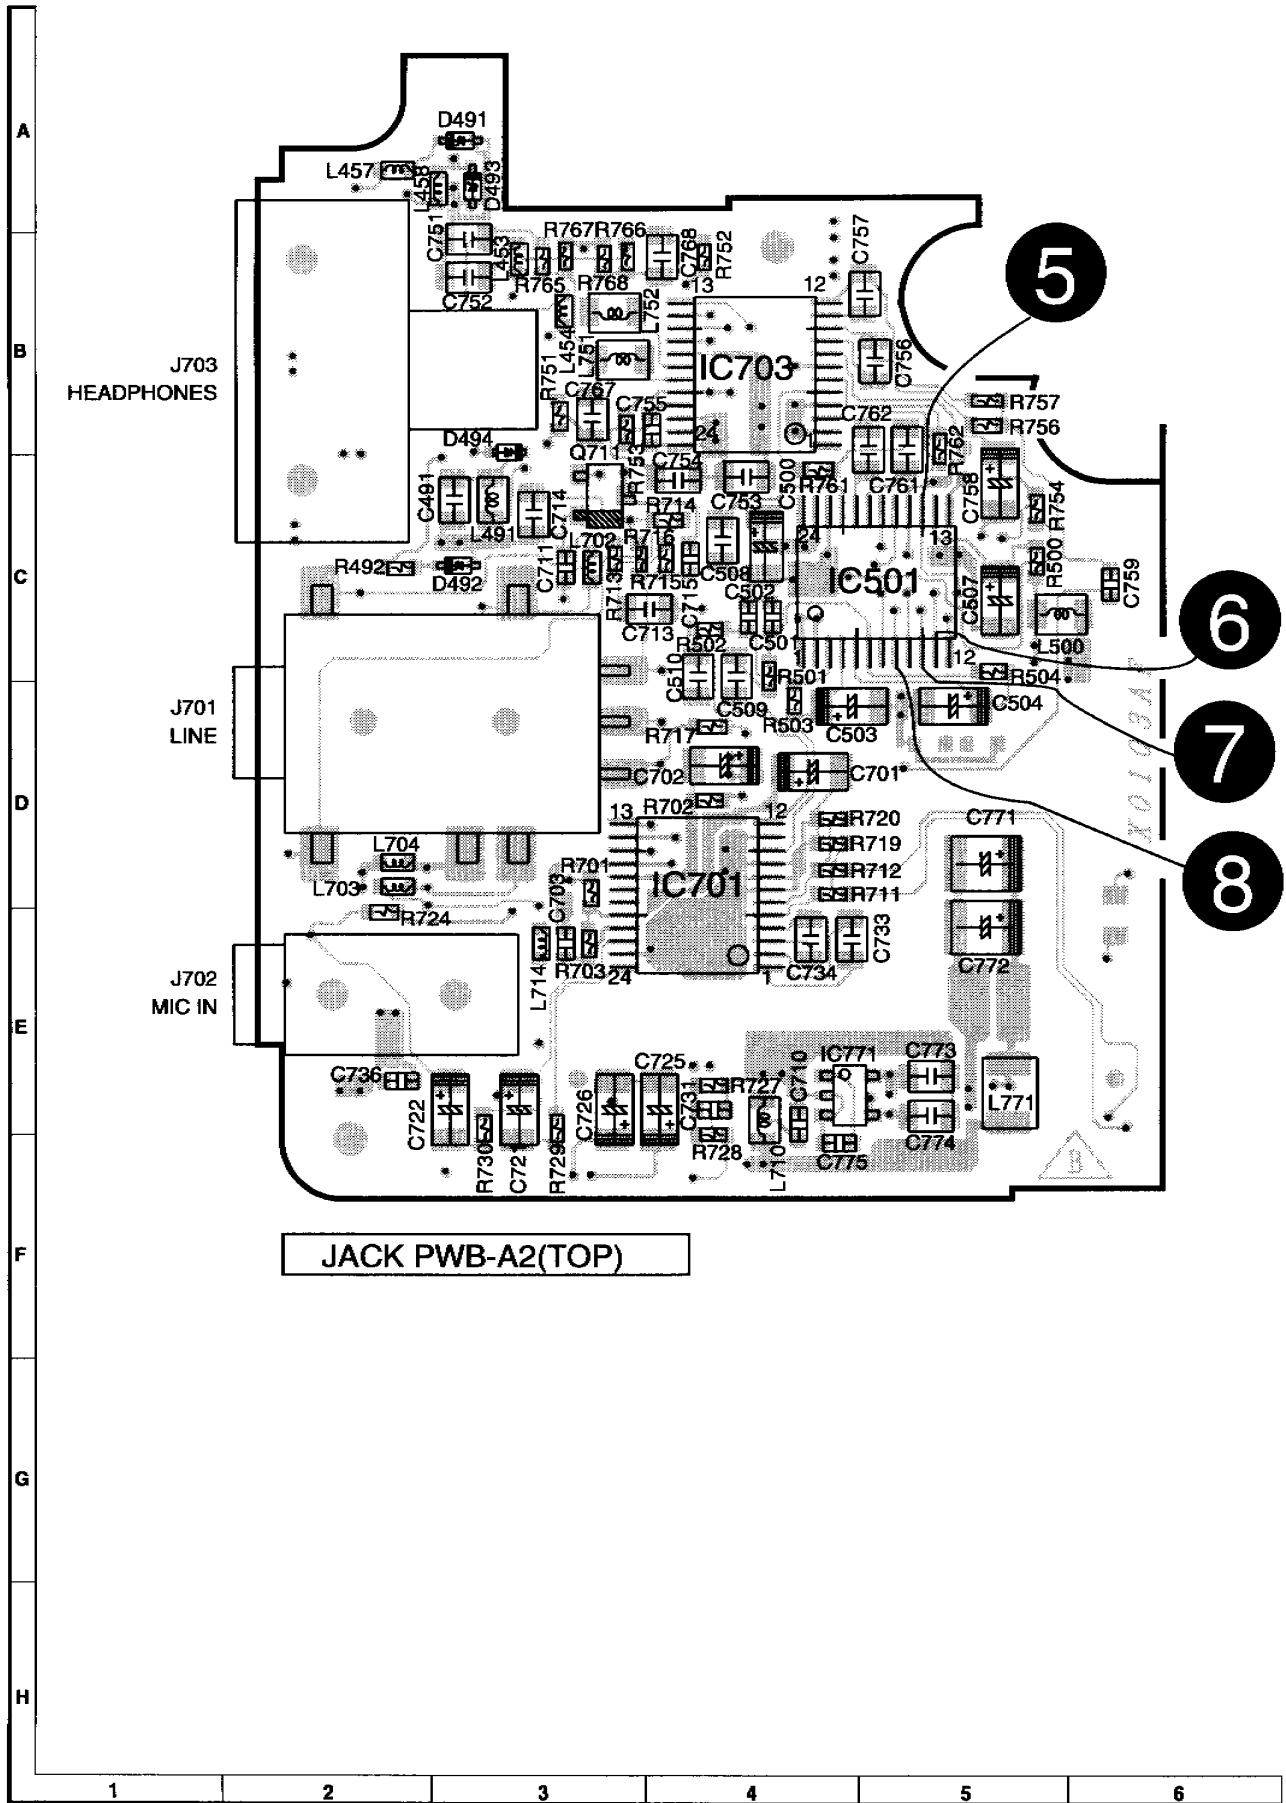


Figure 36 WIRING OF P.W.BOARD (3/5)

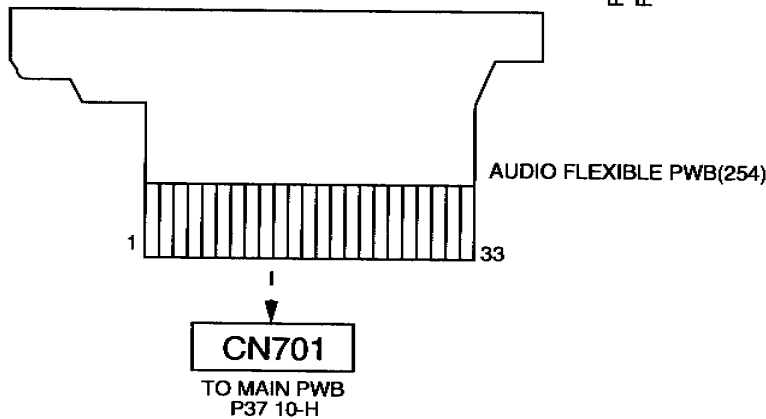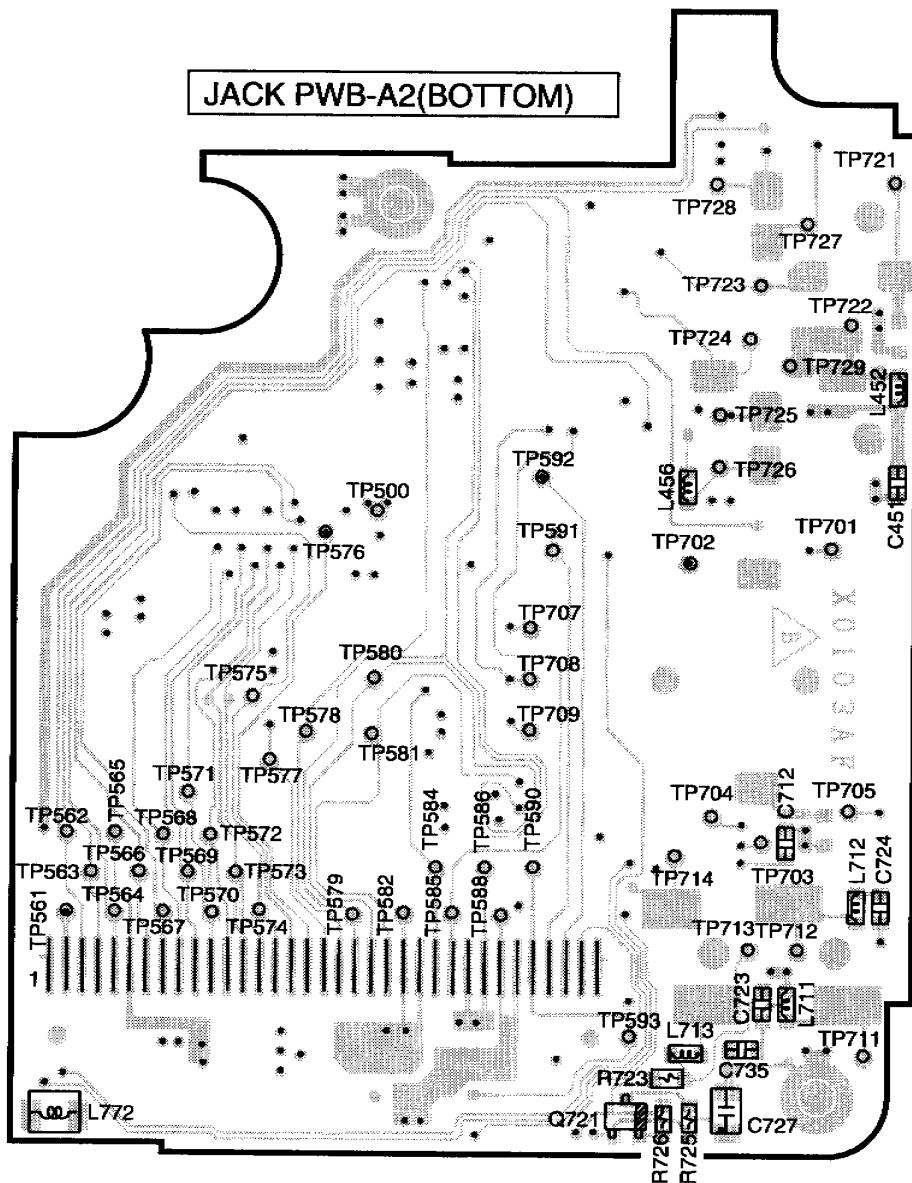

7	8	9	10	11	12
---	---	---	----	----	----

Figure 37 WIRING OF P.W.BOARD (4/5)

MD-MS701H/MS702H












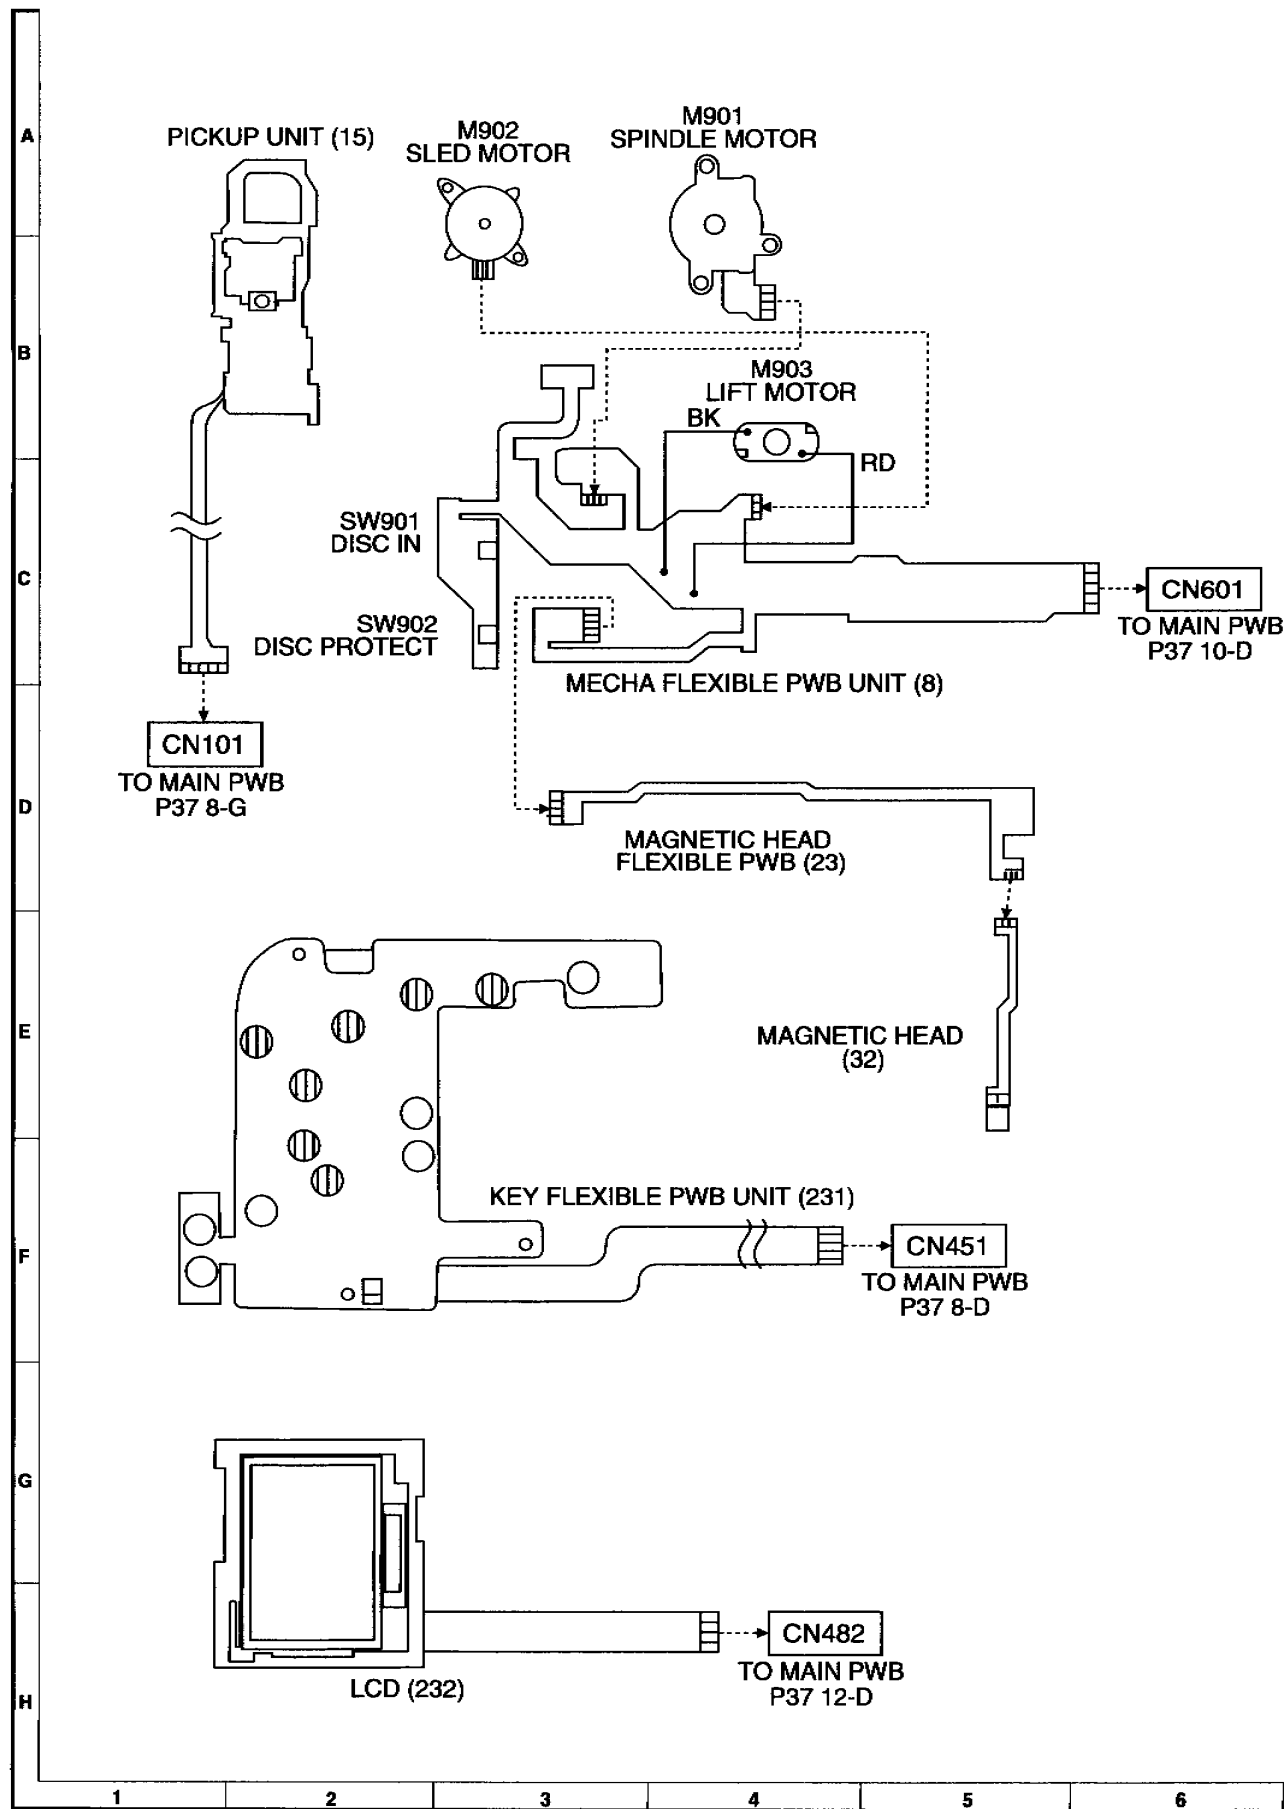


Figure 38 WIRING OF P.W.BOARD (5/5)

WAVEFORMS OF MD CIRCUIT

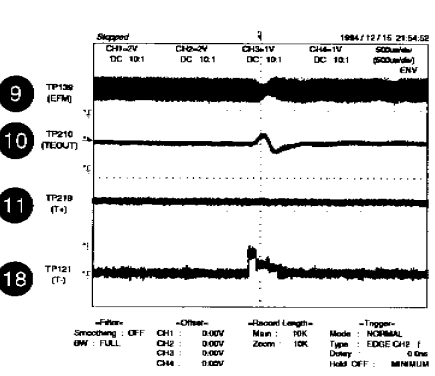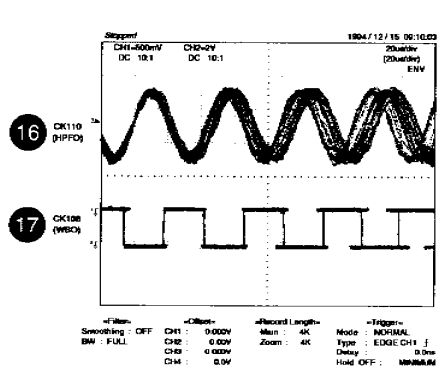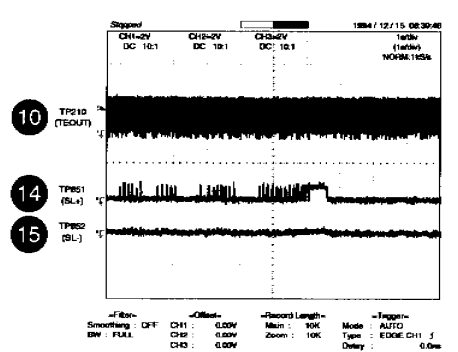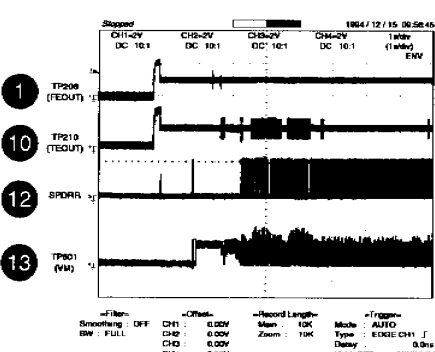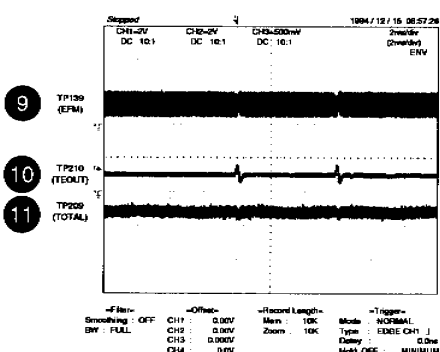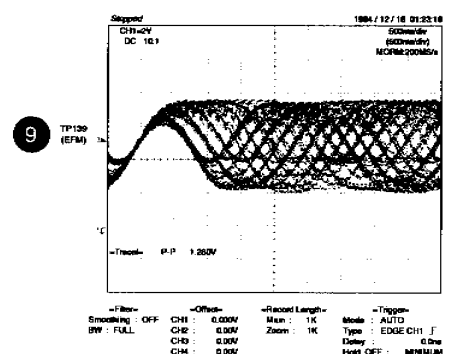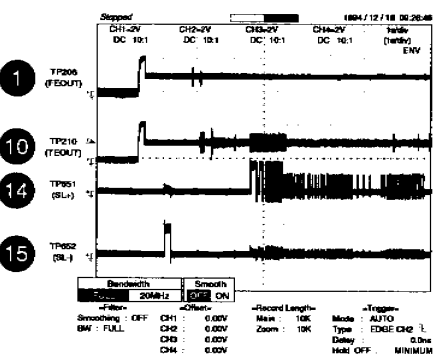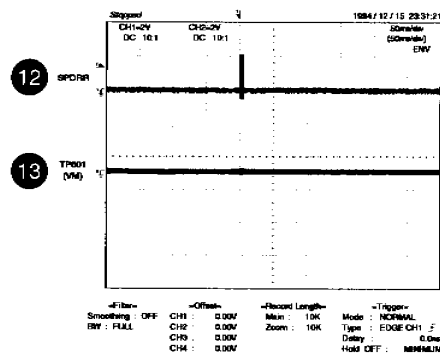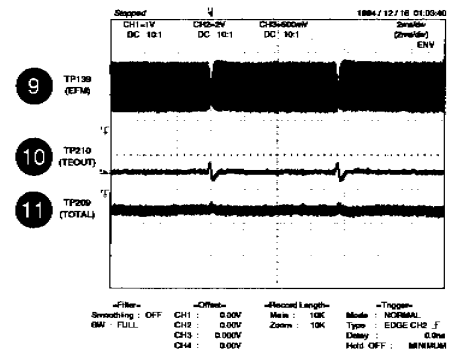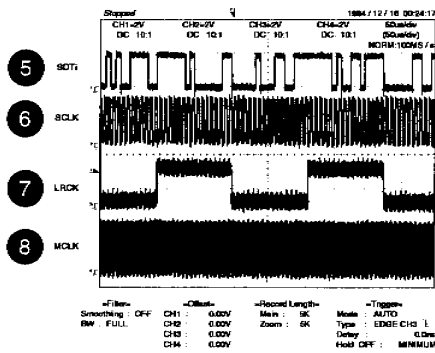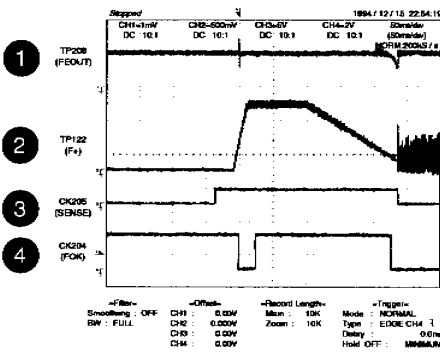

TROUBLESHOOTING

It is advisable to use the TEST mode (refer to Error Data Display Mode, P15) indicating the causes of troubles before starting repair. Causes of operation errors (up to 10 errors) are recorded as error codes. This information is useful for repair.

When does not function

When the CD section does not operate When the objective lens of the optical pickup is dirty, this section may not operate. Clean the objective lens, and check the playback operation. When this section does not operate even after the above step is taken, check the following items.


Remove the cabinet and follow the troubleshooting instructions.

"Track skipping and/or no TOC (Table Of Contents) may be caused by build up of dust or other foreign matter on the laser pickup lens. Before attempting any adjustment make certain that the lens is clean. If not, clean it as mentioned below."


Turn the power off.

Gently clean the lens with a lens cleaning tissue and a small amount of isopropyl alcohol.


Do not touch the lens with the bare hand.

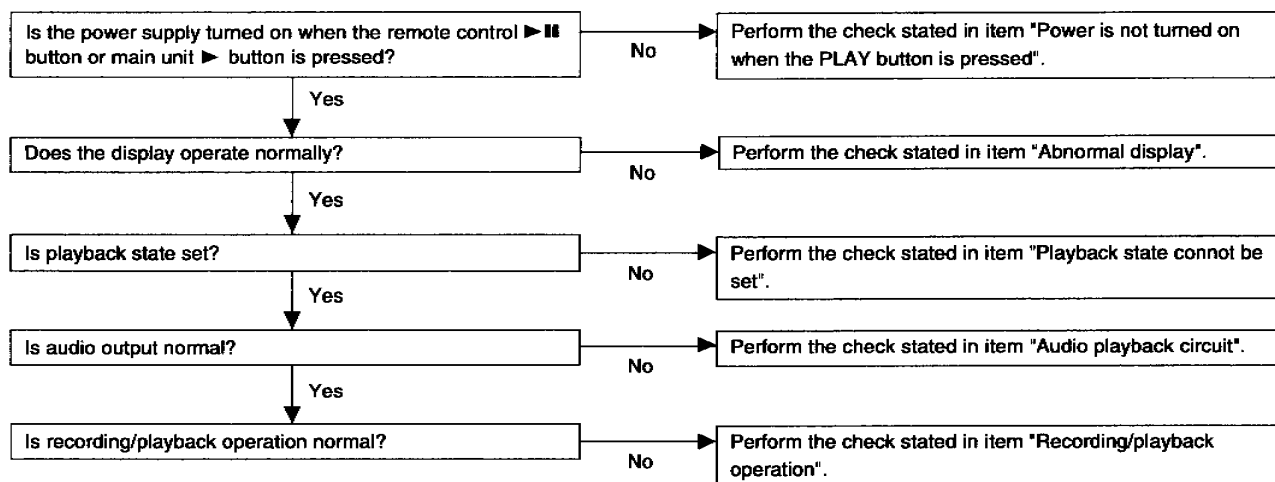

• Power is not turned on when the ► / ►|| button is pressed.

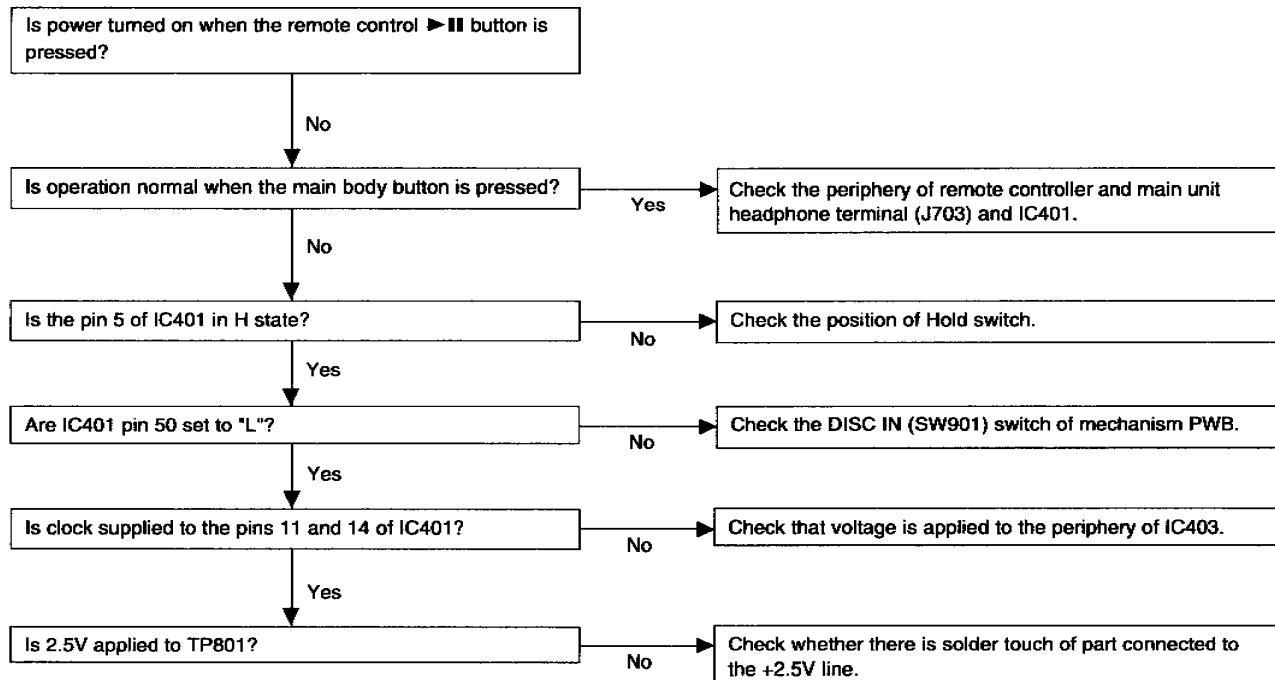


• Abnormal display

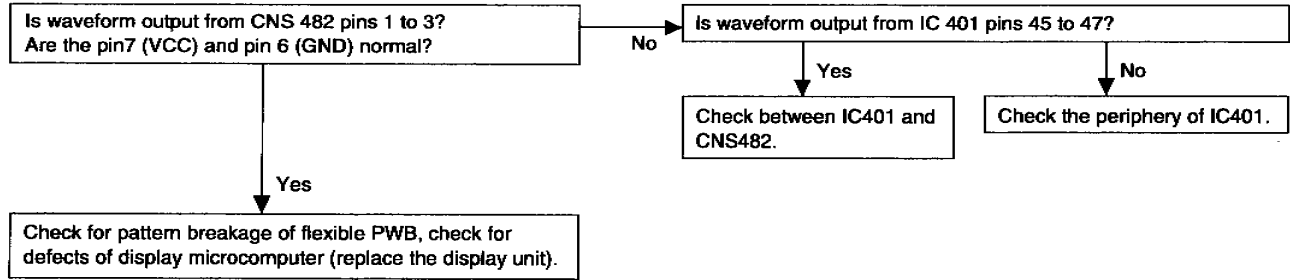


• Playback state cannot be set

When it has been ascertained that the address up to cluster address is normal in the TEST mode.

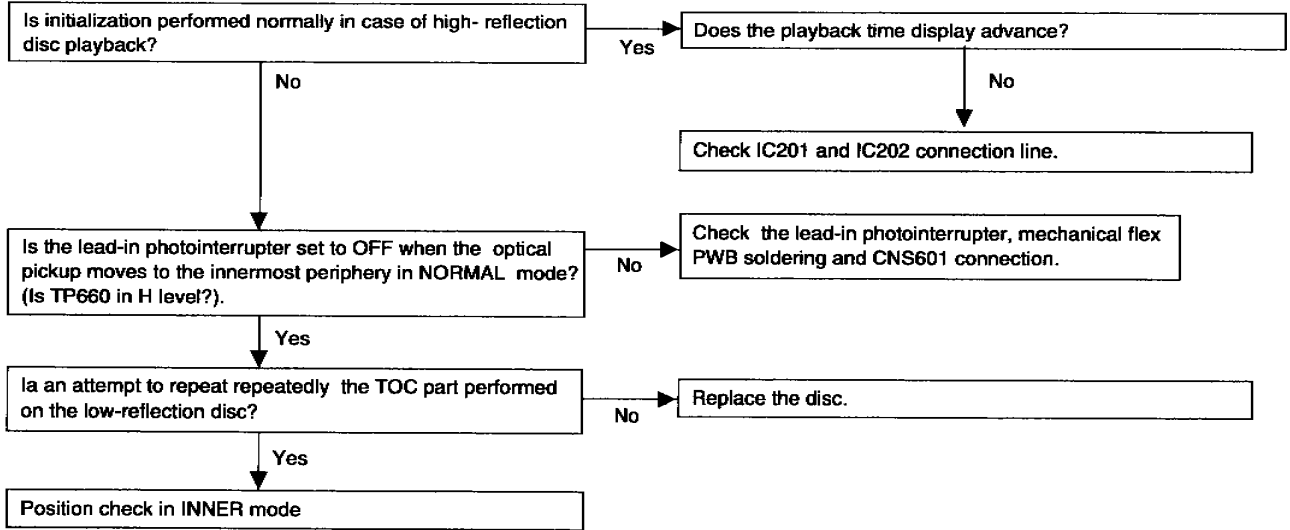


• Audio playback circuit

Although the playback time display is acting., no sound is given during playback in the normal mode.

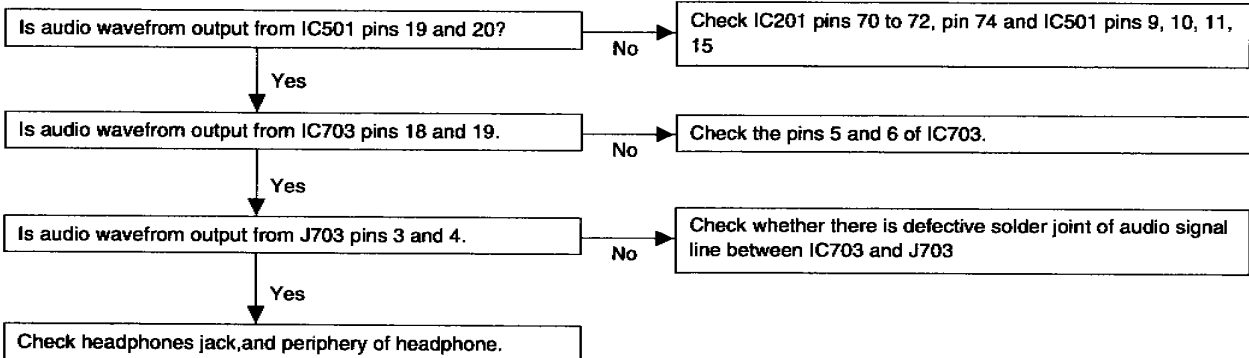


MD-MS701H/MS702H

• The spindle motor fails to run. Does the head move

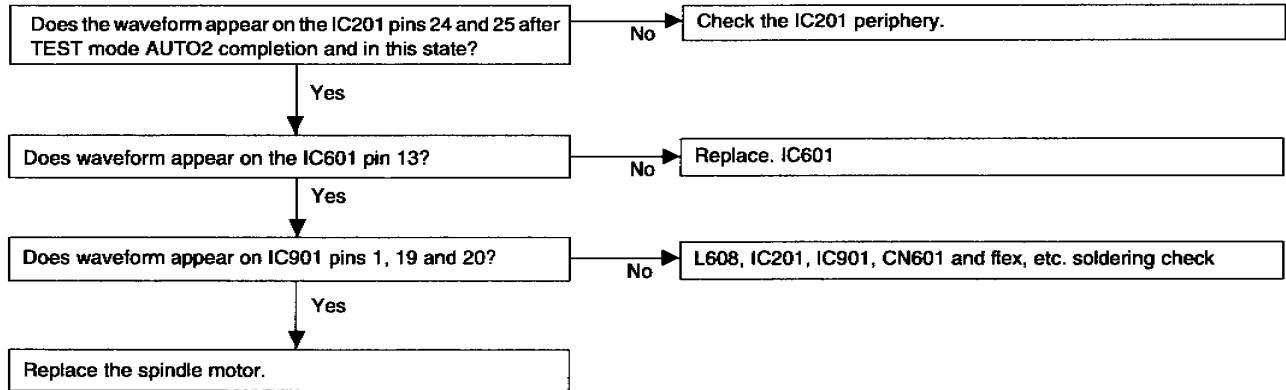

• Recording/playback operation

Insert a low reflection disc, and ascertain audio output by normal playback, and then set TEST REC mode.

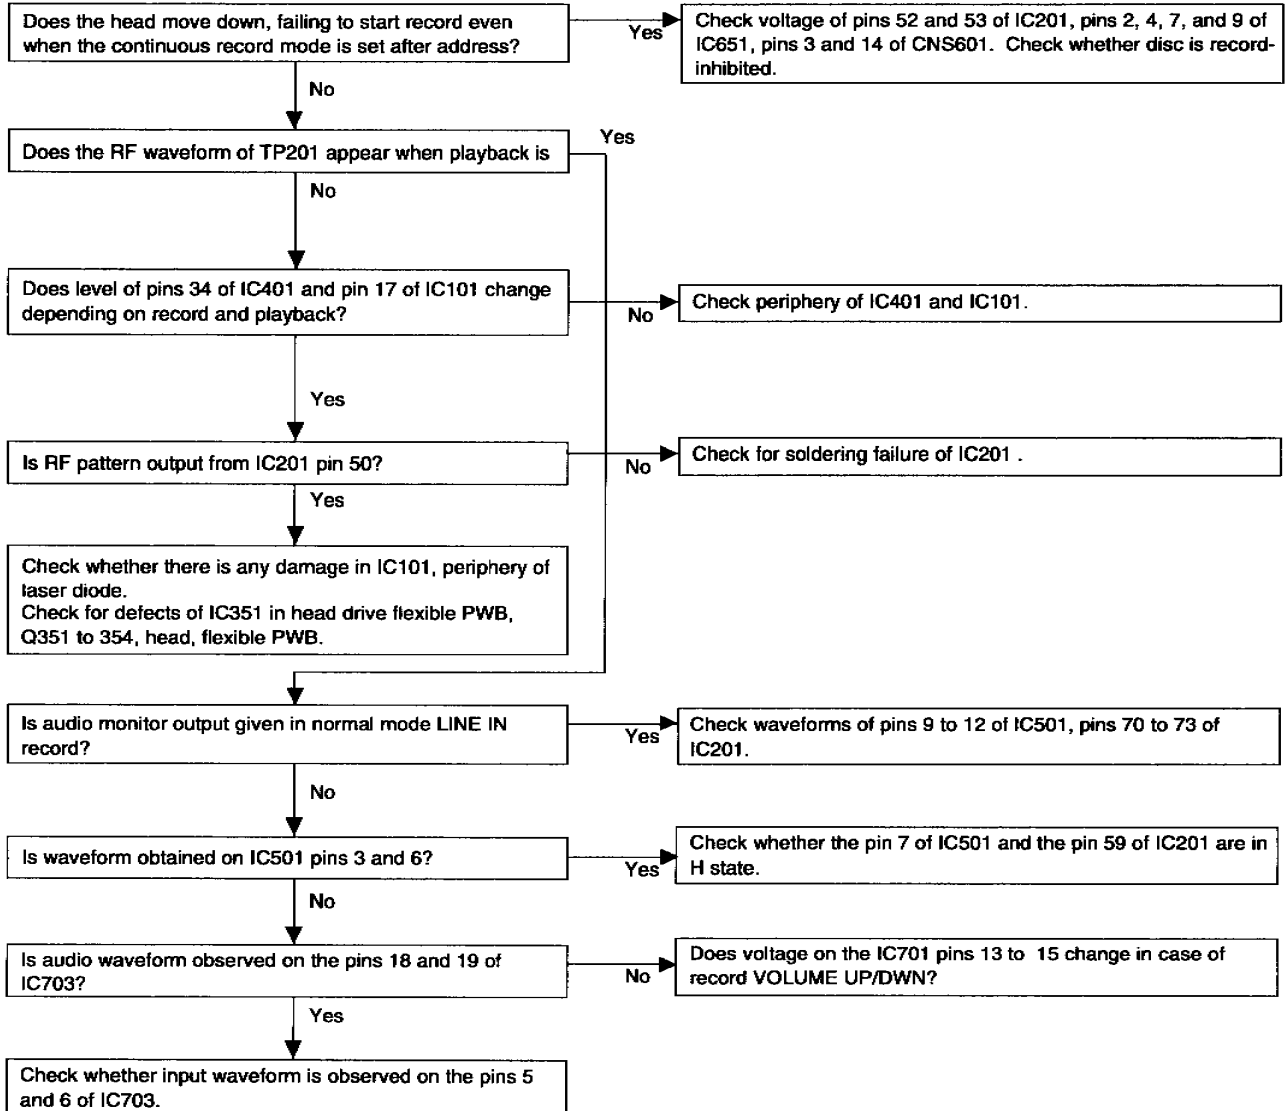

FUNCTION TABLE OF IC

IC401 RH-iX2680AF03(IX2680AF):System Microcomputer (1/2)

Pin No.	Port Name	Terminal Name	Input/Output	Function
1	P120	SWP UP	Output	Asterisk input Output for pull-up
2*~7*	P121~P126	P121~P126	Output	Not used
8	P127	OEM	Input	Product brand ID input
9	VDD	VDD	Input	Positive power supply
10*	X2	X2	Input	Not used
11	X1	X1	Input	Main system clock input
12	VSS	VSS	Input	Ground potential
13*	XT2	XT2	Input	Not used
14	XT1	XT1	Input	Subsystem clock input
15	RESET	RESET	Input	Microcomputer hard reset input
16	INPUT0	DINT	Input	System LSI interruption request input
17	P01	SENSE	Input	System LSI servo sense input
18	P02	FOK	Input	Focus OK signal input
19	P03	XRST	Output	System LSI hard reset output
20*	P04	P04	Output	Not used
21	P05	HDON	Output	Record head current control output
22	P06	VLIM	Input	Volume limiting switch input
23	AVDD	AVDD	Input	A/D converter analog positive power
24	AVREF0	AVREF0	Input	A/D converter reference voltage input
25	ANI0	PLVINN	Input	Built-in battery voltage detection input
26	ANI1	PLVDCI	Input	DC jack voltage detection input
27	ANI2	PLVDRY	Input	Dry cell voltage detection input
28	ANI3	RKEY	Input	Remote controller key operation detection input
29	ANI4	HKEY1	Input	Main unit key operation detection input 1
30	ANI5	HKEY2	Input	Main unit key operation detection input 2
31	ANI6	TEMP	Input	Ambient temperature detection input
32	ANI7	CNTRY	Input	Product destination ID input
33	AVSS	AVSS	Input	A/D converter ground potential
34	ANO0	LDVAR	Output	P.U. laser power set output
35*	ANO1	MDOUT	Output	Internal motion mode output
36	AVREF1	AVREF1	Output	D/A converter reference voltage input
37	P70	SYWR	Output	System LSI write enable output
38	P71	SYRD	Output	System LSI read enable output
39	P72	SYRS	Output	System LSI register selection output
40	P20	-	Output	Not used
41	SO1	RMDAT	Output	Remote controller display data output
42	P22	-	Output	
43	P23	HSTOP	Input	Main unit STOP key operation detection input
44	P24/BUZ	BEEP	Output	Beep tone pulse output
45	P25	DSPSTB	Output	Main unit display control strobe output
46	SO0	DSPDAT	Output	Main unit display control serial data output
47	SCK0	DSPSCK	Output	Main unit display control serial clock output
48~55	P80~P87	SYD0~SYD7	In/Output	System LSI parallel data bus
56	P40	EJECT	Input	Eject lever operation detection input *
57	P41	KHOLD	Input	Main unit key hold switch input
58	P42	RPLAY	Input	Remote controller PLAY key operation detection input
59*	P43	HFON	Output	P.U. high frequency superposition control output

In this unit, the terminal with asterisk mark (*) is (open) terminal which is not connected to the outside.

MD-MS701H/MS702H

IC401 RH-IX2680AF03(IX2680AF):System Microcomputer (2/2)

Pin No.	Port Name	Terminal Name	Input/Output	Function
60	P44	LDON	Output	P.U. laser ON/OFF control output
61	P45	OPICGA	Output	P.U. detection sensitivity selection output
62	P46	RFLAT	Output	RF amp. IC data latch output
63	P47	RACLK	Output	RF/audio IC data clock output
64	P50	RADAT	Output	RF/audio IC serial data output
65	P51	PBLAT	Output	Playback audio IC data latch output
66	P52	RCLAT	Output	Record audio IC data latch output
67	P53	PBOPON	Output	Audio IC output stage control output
68	P54	MCPGIN	Input	Mic plug insertion detection input
69	P55	INPGIN	Input	Line/digital plug insertion detection
70	P56	INPGCK	Input	Line/digital plug type detection
71	P57	RPCNT	Output	Record circuit power control output
72	VSS	VSS	Output	Ground potential
73	P60	EMPHO	Output	Audio emphasis control output 0
74	P61	HPLAY	Input	Main unit PLAY key operation detection input
75	P62	HREC	Input	Main unit REC key operation detection input
76*	P63	RTCCE	Output	Clock IC chip enable control output
77*	P64	RTCWR	Output	Clock IC read/write control output
78	P65	CEDT	In/Output	Clock/EEPROM serial data input/output
79	P66	CECK	Output	Clock/EEPROM serial data input/output
80	P67	EPCS	Output	EEPROM chip selection output
81	VDD	VDD	Output	Positive power supply
82	T15	SPIN	Inout	Spindle motor FG pulse detection input
83*	P101	P101	Output	Spare for sled motor control
84*	P102	TEST0	Input	Test mode setting input 0
85*	P103	TEST1	Input	Test mode setting input 1
86	P30	PSLINN	Output	Built-in battery power selection output
87	P31	PSLDCI	Output	DC jack power selection output
88	P32	PSLDRY	Output	Dry cell power selection output
89*	P33	P33	Output	Spare for sled motor control
90	P34	ELON	Output	Remote controller EL light control output
91	T100	CIN	Input	Truck cross signal detection input
92	P36	PHOLD	Output	Dry cell power ON holding output
93	P37	PCNT1	Output	Power IC VREF feed control output
94	TEST/VPP	VPP	Output	Test/R-ROM write power input
95	P90	PCNT2	Output	Power IC VCC feed control output
96	P91	CKSTP	Output	Main clock stop control output
97	P92	DISCIN	Input	Disk insertion detection input
98	P93	INNSW	Input	Mechanism inner SW position detection input
99	P94	DISCPR	Input	Record enable/disable switch detection input
100	P95	PDCNT	Output	PD current control output for inner detection

In this unit, the terminal with asterisk mark (*) is (open) terminal which is not connected to the outside.

SHARP PARTS GUIDE

MODEL MD-MS701H MD-MS702H(BL) MD-MS702H(GY)

"HOW TO ORDER REPLACEMENT PARTS"

To have your order filled promptly and correctly, please furnish the following information.

- | | |
|-----------------|----------------|
| 1. MODEL NUMBER | 2. REF. No. |
| 3. PART NO. | 4. DESCRIPTION |

★ MARK: SPARE PARTS-DELIVERY SECTION

For U.S.A. only

Contact your nearest SHARP Parts Distributor to order.

For location of SHARP Parts Distributor,
Please call Toll-Free;
1-800-BE-SHARP

Explanation of capacitors/resistors parts codes

Capacitors

VCC Ceramic type
 VCK Ceramic type
 VCT Semiconductor type
 VC •• MF Cylindrical type (without lead wire)
 VC •• MN Cylindrical type (without lead wire)
 VC •• TV Square type (without lead wire)
 VC •• TQ Square type (without lead wire)
 VC •• CY Square type (without lead wire)
 VC •• CZ Square type (without lead wire)
 VC •••••••• J .. The 13th character represents capacity difference.
 ("J" $\pm 5\%$, "K" $\pm 10\%$, "M" $\pm 20\%$, "N" $\pm 30\%$,
 "C" ± 0.25 pF, "D" ± 0.5 pF, "Z" $+80-20\%$.)

If there are no indications for the electrolytic capacitors, error is $\pm 20\%$.

Resistors

VRD Carbon-film type
 VRS Carbon-film type
 VRN Metal-film type
 VR •• MF Cylindrical type (without lead wire)
 VR •• MN Cylindrical type (without lead wire)
 VR •• TV Square type (without lead wire)
 VR •• TQ Square type (without lead wire)
 VR •• CY Square type (without lead wire)
 VR •• CZ Square type (without lead wire)
 VR •••••••• J .. The 13th character represents error.
 ("J" $\pm 5\%$, "F" $\pm 1\%$, "D" $\pm 0.5\%$.)

If there are no indications for other parts, the resistors are $\pm 5\%$ carbon-film type.

NOTE:

Parts marked with "△" are important for maintaining the safety of the set.

Be sure to replace parts with specified ones for maintaining the safety and performance of the set.

NO.	PART CODE	★ PRICE RANK	DESCRIPTION
239	PSPA20532AFZZ	J AC	Spacer Mechanism
240	PSHET0375AFZZ	J AB	Sheet,LCD
241	HDEC0458AFSA	J AB	Decoration Screw [702H Only]
242	HDECQ0530AFSA	J AL	Decoration Ring [702H GY]
242	HDECQ0530AFSB	J AN	Decoration Ring [702H BL]
244	PCUSG0646AFZZ	J AB	Cushion,Jack
245	PCUSG0649AFZZ	J AB	Cushion,Switch
246	PSHEZ0851AFZZ	J AC	Bracket,Eject Knob
247	PCUSG0646AFZZ	J AB	Rubber,Prevention Vibration
248	GFTAC3135AFSA	J AG	Cover,MD
249	LANGZ0335AFFW	J AB	Bracket,Disc Guide
250	PCUSG0638AFZZ	J AA	Rubber,Prevention Vibration D
251	PGIDM0256AFSA	J AB	Guide (Left)
253	PCUSG0647AFZZ	J AB	Cushion DC
254	QPWBH0308AFZZ	J AE	Audio Flexible PWB
255	PSPA20532AFZZ	J AC	Mechanism Spacer
256	PSHET0382AFZZ	J AB	Sheet,Jack
257	TLABS0465AFZZ	J AB	Label,Laser Mark
258	TLABS0497AFZZ	J	Label,Laser Caution
601	LX-BZ0908AFF3	J AA	Screw,ø1.4x2.0mm
603	LX-CZ0107AFFF	J AA	Screw,ø1.2x2.5mm
605	LX-CZ0126AFFF	J AA	Screw,ø1.4x2.0mm
606	LX-BZ0877AFF3	J AA	Screw,ø1.4x1.5mm
608	LX-BZ0805AFFN	J AB	Screw,ø1.7x2.5mm
610	LX-BZ0908AFFC	J AB	Screw,ø1.4x2mm

ACCESSORIES/PACKING PARTS

1	SPAKZ0475AFZZ	J	Pad,Operation Manual
2	QCNWG0382AFZZ	J AK	Connecting Cord,RCA Type
3	RADPA7407AFZZ	J BF	AC Adaptor [For Europe]
3	RADPA8404AFZZ	J BK	AC Adaptor [For UK]
4	RPHOH0176AFZZ	J AR	Headphones
5	RRMCW0024AFZZ	J BB	Remote Control
6	SPAKA2679AFZZ	J AD	Packing Add.
7	SPAKC6529AFZZ	J AL	Packing Case [702H GY]
7	SPAKC6530AFZZ	J	Packing Case [702H BL]
7	SPAKC6552AFZZ	J	Packing Case [701H]
8	SSAKH0314AFZZ	J AD	Polyethylene Bag,Unit
9	TCADS0085AFZZ	J AD	Service Card [For UK Only]
10	SPAKZ0479AFZZ	J	Sheet
11	TINSE1633AFZZ	J AH	Operation Manual [For UK]
11	TINSZ1336AFZZ	J AR	Operation Manual [For Europe]
12	TLABM0592AFZZ	J AD	Label,Feature
13	SPAKZ0465AFZZ	J	Pad,AC Adaptor
14	UBAGC0076AFSA	J AH	Carrying Bag
15	UBATIO060AFSA	J BH	Rechargeable,Battery

P.W.B. ASSEMBLY (Not Replacement Item)

PWB-A1,2	DCYO-3035AF93	J —	Main/Jack (Combined Ass'y)
----------	---------------	-----	----------------------------

OTHER SERVICE PARTS

QCNWK0110AFZZ	J	Flat Cable for Service,16Pin
RUNTK0460AFZZ	J	Extention Connector Unit for Service,16Pin
UDSKM0001AFZZ	J AZ	Recording Mini Disc
88GMMD-110	J BV	High Reflection,MMD-110 (TEAC Test MD)
88GMMD-212	J BU	Low Reflection,MMD-212 (TEAC Test MD)

MD-MS701H/MS702H

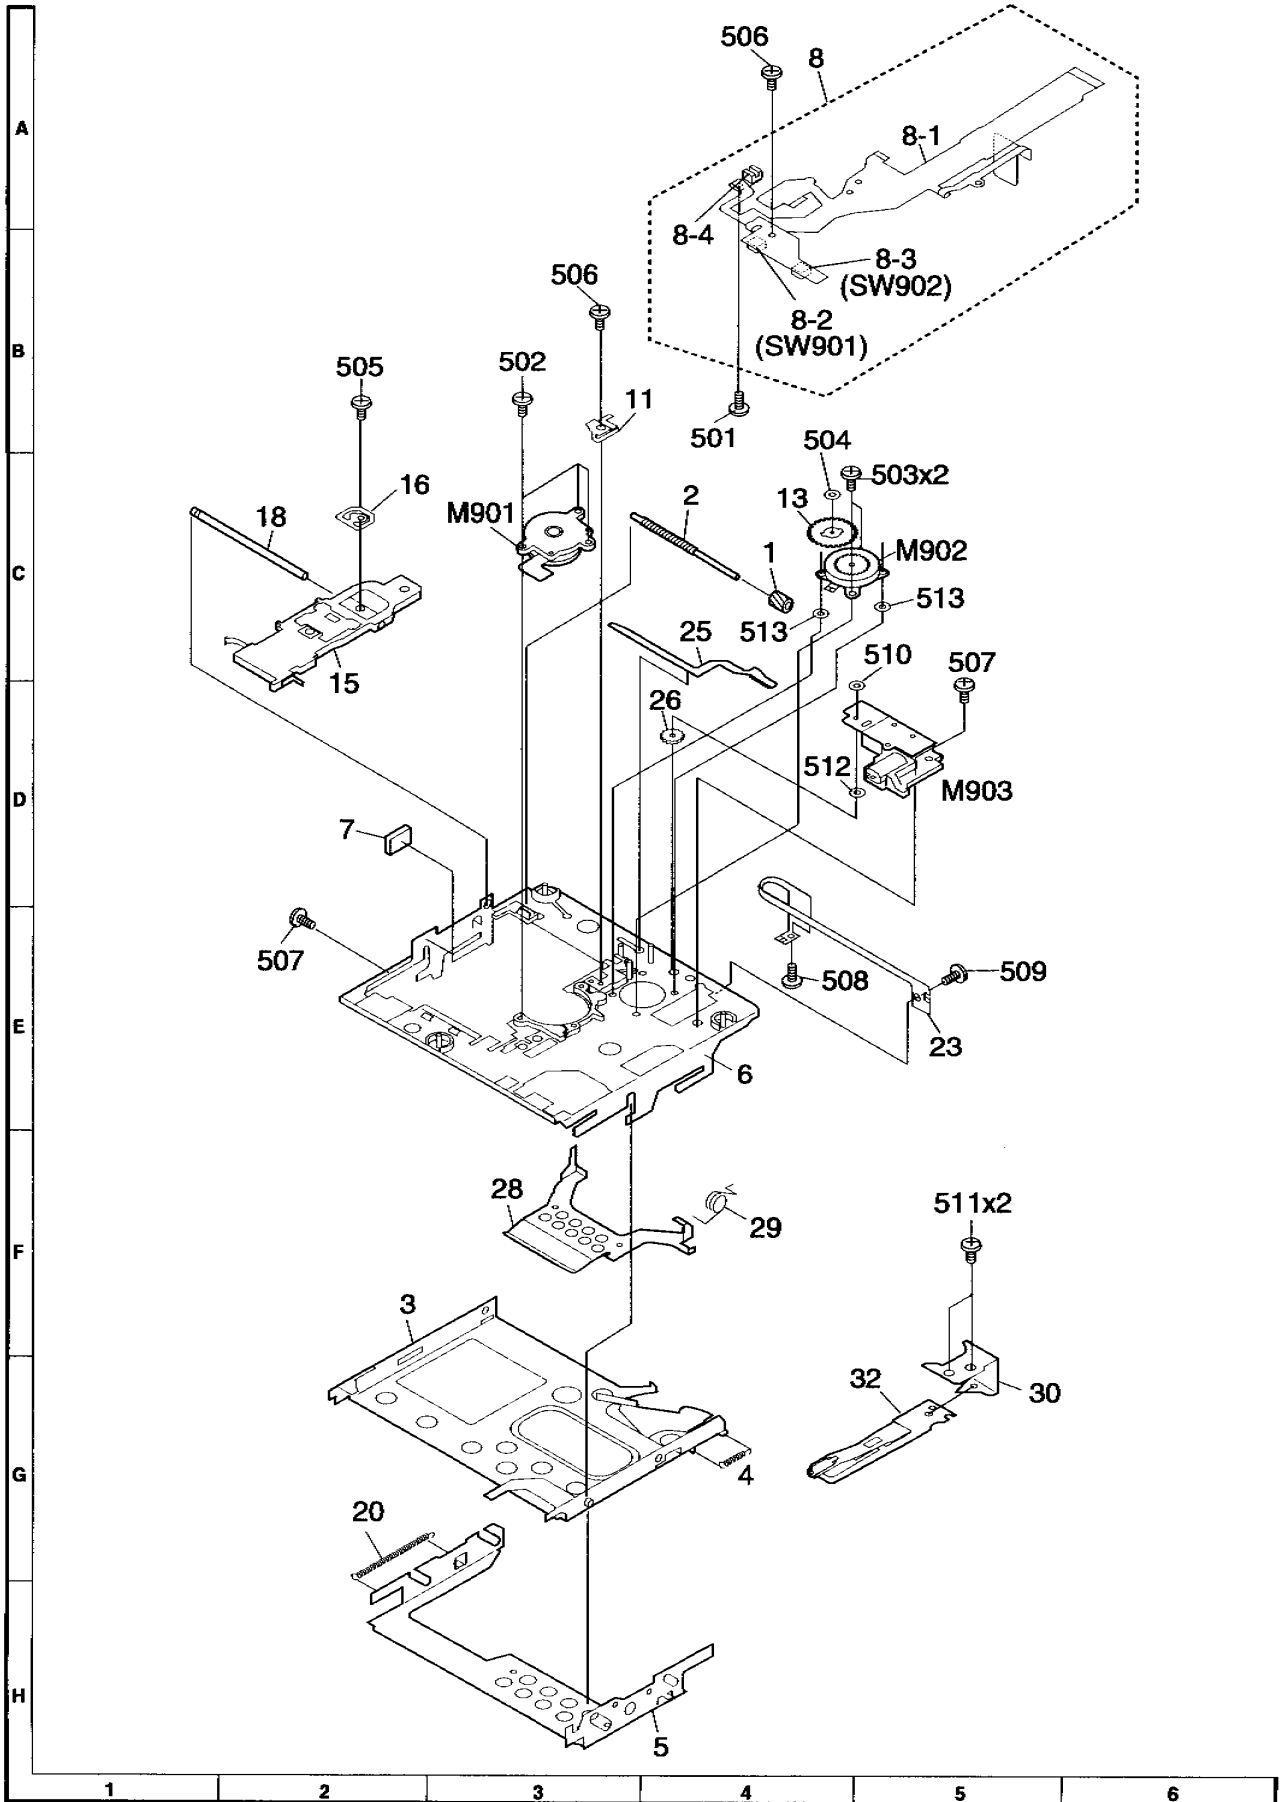


Figure 5 MD MECHANISM EXPLODED VIEW

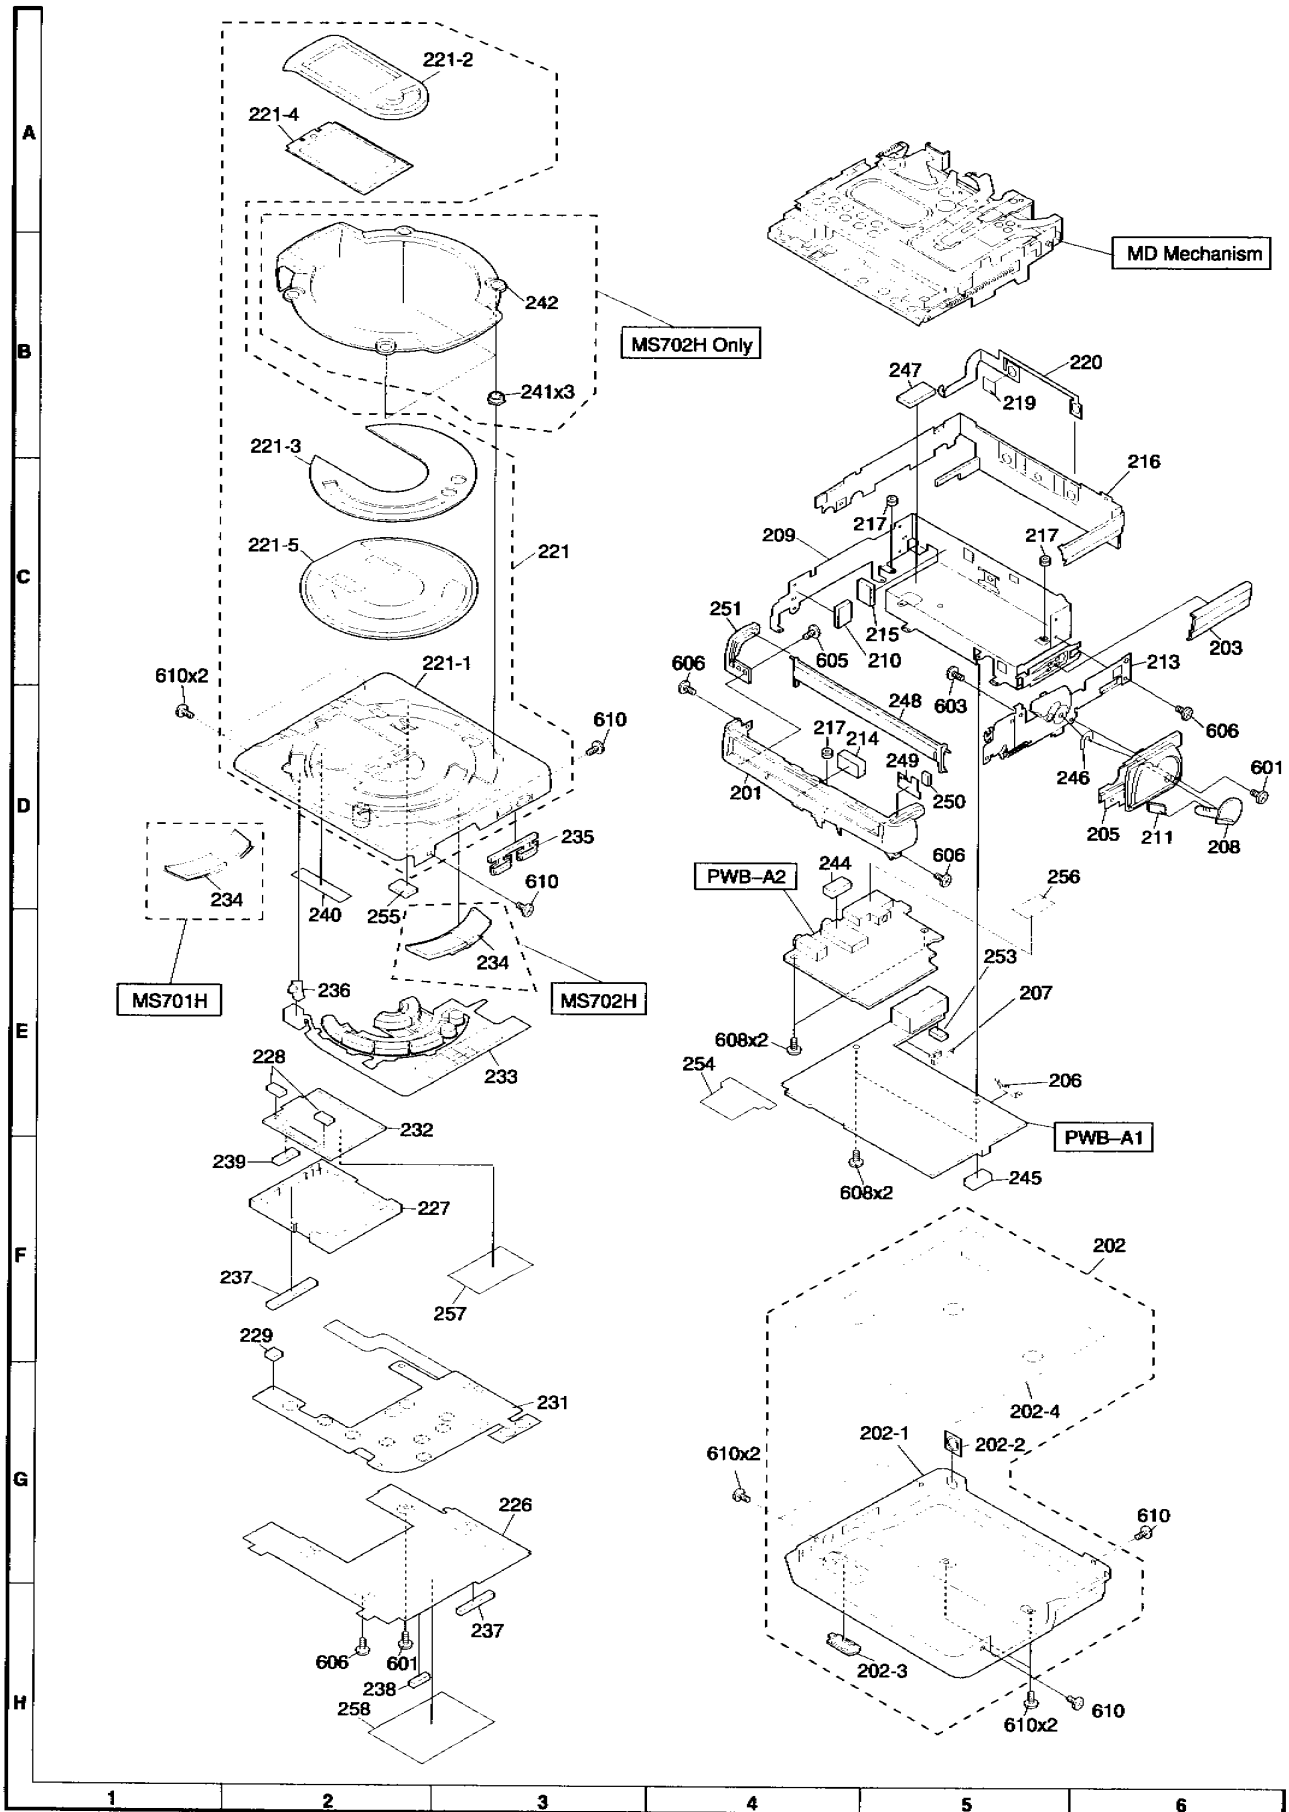



Figure 6 CABINET EXPLODED VIEW

PACKING METHOD (FOR UK ONLY)

SETTING POSITION OF SWITCHES AND KNOBS		
UNIT	HOLD	OFF
Remote Control	HOLD	CANCEL

1. QCNMG0382AFZZ
2. RADPA8404AFZZ
3. RPHOH0176AFZZ
4. RRMWCW0024AFZZ
5. SPAKA2679AFZZ
6. SPAKC6529AFZZ
6. SPAKC6530AFZZ
6. SPAKC6552AFZZ
7. SSAKH0314AFZZ
8. TCADS0085AFZZ
9. TINSE1633AFZZ
10. TLABM0592AFZZ
11. SPAKZ0465AFZZ
12. UBAGC0076AFSA
13. UBATI0060AFSA
14. SPAKZ0475AFZZ
15. SPAKZ0479AFZZ

- Connecting Cord, RCA Type
- AC Adaptor
- Headphones
- Remote Control
- Packing Add.
- Packing Case [702H GY]
- Packing Case [702H BL]
- Packing Case [701H]
- Polyethylene Bag, Unit
- Service Card
- Operation Manual
- Label, Feature [701 Only]
- Pad, AC Adaptor
- Carrying Bag
- Rechargeable, Battery
- Pad, Operation Manual
- Sheet

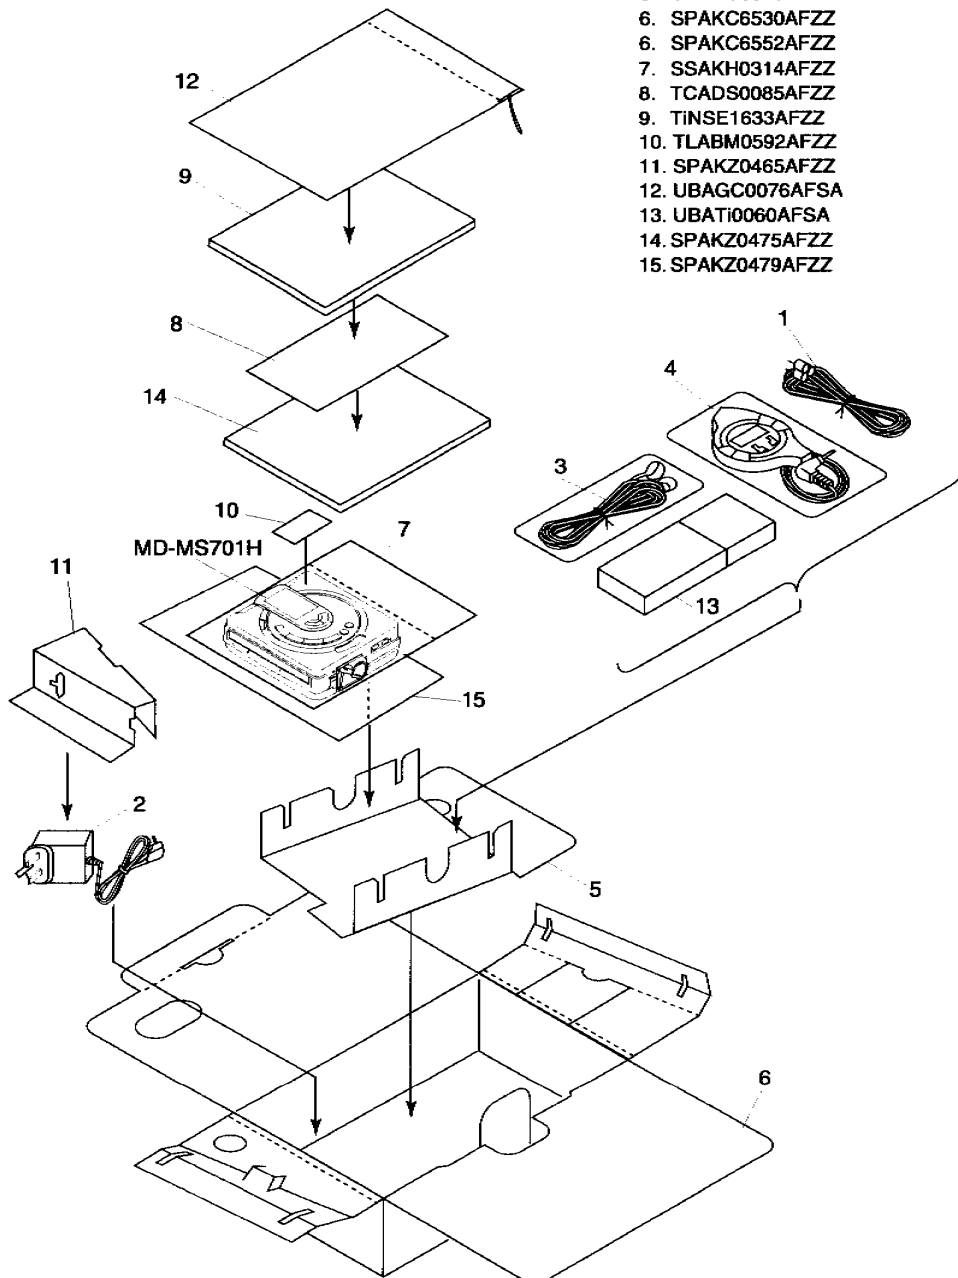

SHARP

COPYRIGHT © 1997 BY SHARP COPORATION

ALL RIGHTS RESERVED.

No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, mechanical, photocopying, recording, or otherwise, without prior written permission of the publisher.

SHARP CORPORATION
 Audio-Visual Systems Group
 Quality & Reliability Control Center
 Higashihiroshima, Hiroshima 739-01, Japan
 Printed in U.K.

A9711-2895NS*HA*J

SG • SK